

PRODUCT INSTRUCTION MONTAGEANLEITUNG

KF200052-01





WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over.

- Place heaviest items in the lowest drawers.
- Do not set TVs or other heavy objects on the top of this product.
- Never allow children to climb or hang on drawer, door, or shelves.
- Never open more than one drawer at a time.
- Use of tip-over restraints, only reduces, but does not eliminate, the risk of tip-over.
- Never open more than one drawer at a time.

 
MAINTENANCE TIPS




Avoid liquid spraying or infiltrating on the product surface.



Never use chemical cleaning products. They can damage the finish. For cleaning, use only a slightly damp cloth and wipe dry.

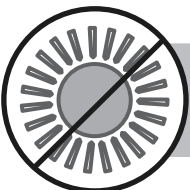

 To avoid dulling of finish, do not place furniture in direct sunlight

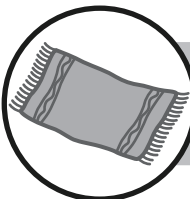

Do not put plastic or rubber rings under appliances. Use cloth or felt protectors.



To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth.



Sicherheitshinweise

Schwere oder tödliche Quetschverletzungen können durch Umkippen von Möbeln auftreten. Um ein Umkippen zu verhindern.

- Lege die schwersten Gegenstände in die untersten Schubladen.
- Legen Sie keine Überlastungsobjekte auf die Oberseite dieses Produkts.
- Lassen Sie Kinder niemals klettern oder an Schubladen, Tür oder Regale hängen.
- Öffnen Sie niemals mehr als eine Schublade gleichzeitig.
- Das Umkippen der Rückhalteeinrichtung eliminiert nicht das Risiko eines Umkippens.
- Öffnen Sie niemals mehr als eine Schublade gleichzeitig.

 
WARTUNGSTIPPE




Vermeiden Sie das Versprühen oder Eindringen von Flüssigkeiten auf die Produktoberfläche.



Verwenden Sie keine chemischen Reinigungsmittel. Sie können das Produkt beschädigen und müssen nach Abschluss der Reinigung nur mit einem leicht feuchten Tuch trocken abgewischt werden.

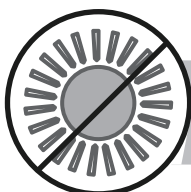








 
Um ein stumpfes Finish zu vermeiden, stellen Sie Furniture nicht in direktes Sonnenlicht.

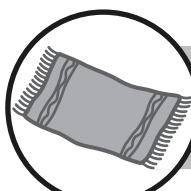

Legen Sie keine Kunststoff- oder Gummiringe unter Geräte. Verwenden Sie ein Tuch aus Filzschutz.



        Verwenden Sie ein weiches oder leicht feuchtes Tuch, wischen Sie es mit einem sauberen, trockenen Tuch ab.

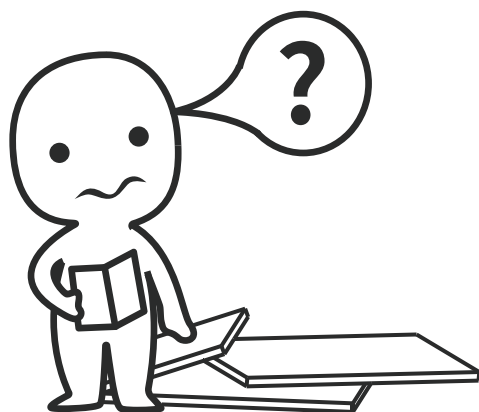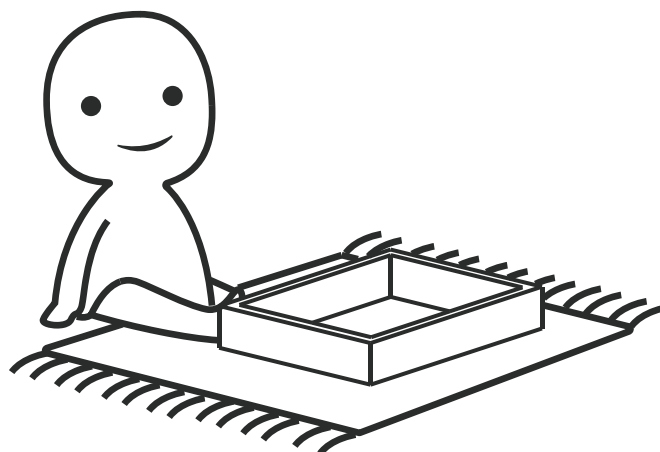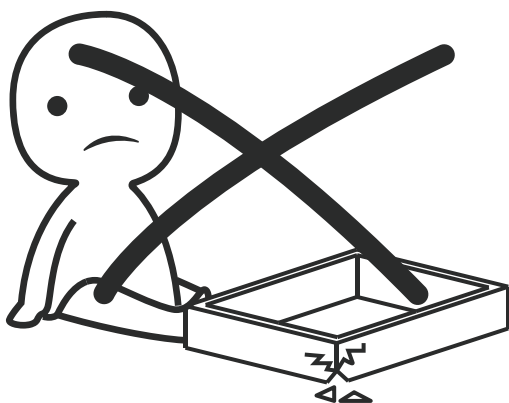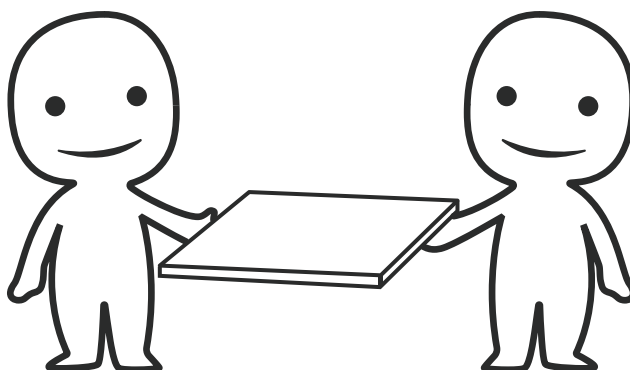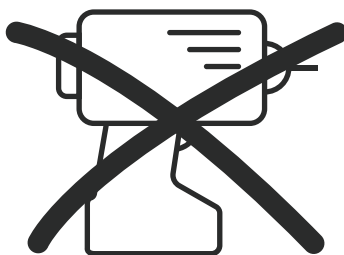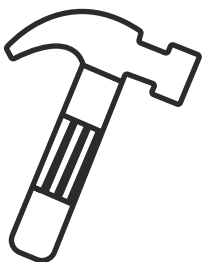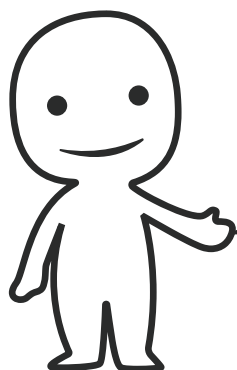

DE

 
Wichtige Information

- Sorgfältig und aufmerksam lesen
- Diese Information aufbewahren



GB

Safety information

- Important information
- Please read closely and carefully
- Save this information

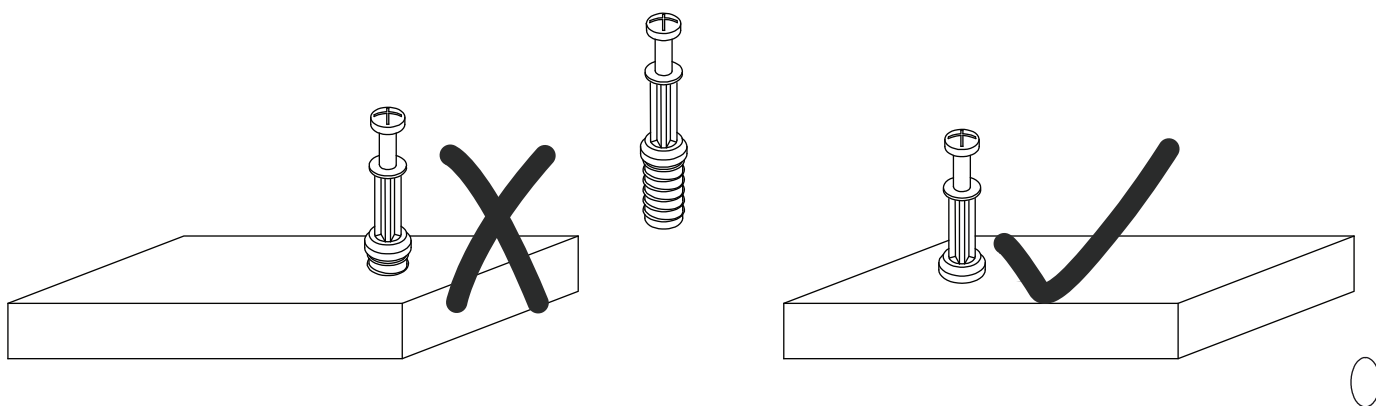


CAM LOCK

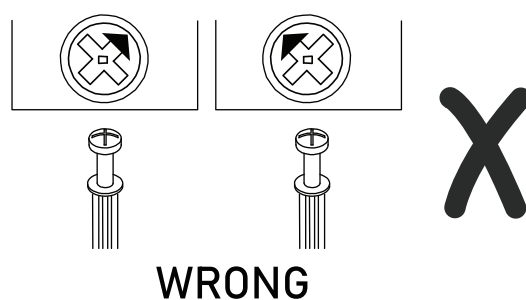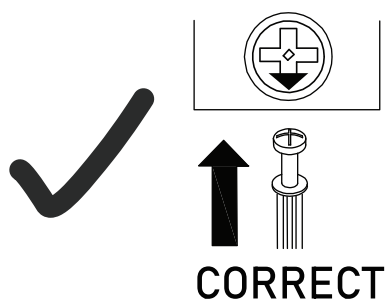  


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

 Der Quickfit-Kopf sollte in der Mitte der Nockensperre, wenn die beiden Paneele verbunden sind.
Nockensperre sollte eingesetzt werden vor Quickfit.

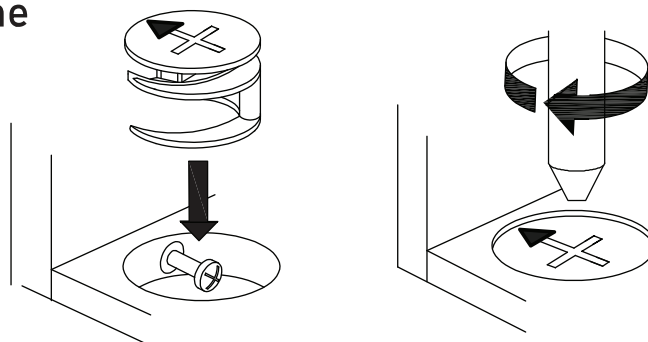

Luxe Chest of 4 Drawers

 HARDWARE LIST




28 x A
Quickfit
Screw




28 x B
Cam Lock



 25 x C
Screw




4 x D
Handle

 


8 x E
Screw



 
32 x F
Screw

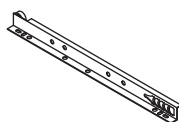


4 x DR
14" Drawer Runner
(Right)

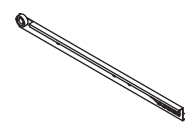 

4 x DL
14" Drawer Runner
(Left)

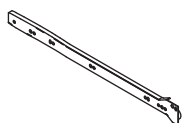 

4 x CL
14" Drawer Slide
(Right)

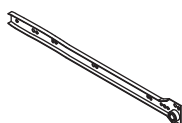 

4 x CR
14" Drawer Slide
(Left)



20 x K
Screw



 
4 x L
Leg Support



12 x M
Wooden
Dowel



16 x N
Nail




1 x P
Wall Plug



1 x Q
Wall Strape
















 
2 x R
Washer



1 x S
Screw

Luxe Chest of 4 Drawers

              PARTS LIST

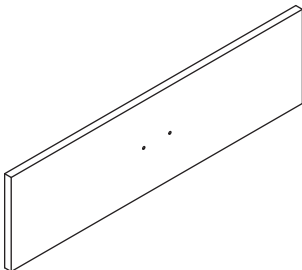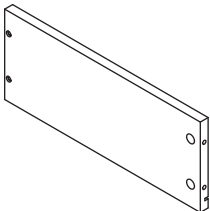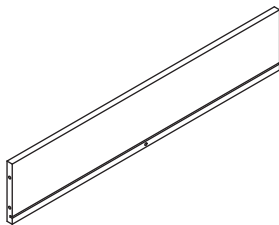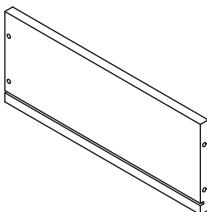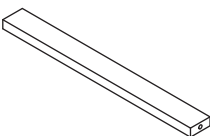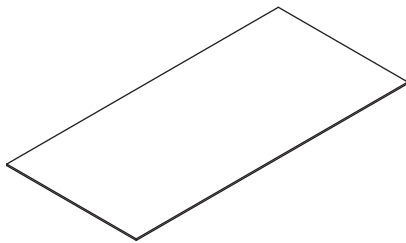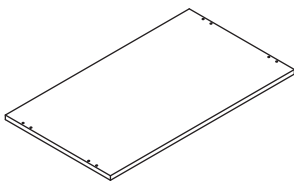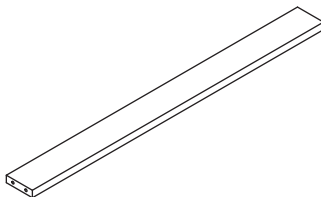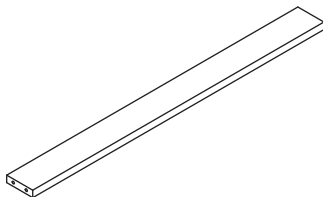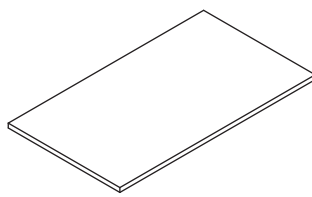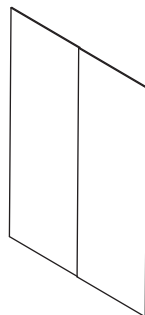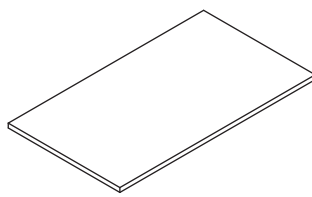
					
1	4 PCS	2	4 PCS	3	4 PCS
					
4	4 PCS	5	4 PCS	6	4 PCS
					
7	1 PC	8	4 PCS	9	1PC
					
10	1 PC	11	1 PC	12	1 PC
					
13	1 PC	14	1 PC	15	1 PC

Luxe Chest of 4 Drawers


STEP 1

Attach handle (D) to panel 1 using screws (E), as shown.

 Insert quickfit screws (A) to panel 1, as shown.

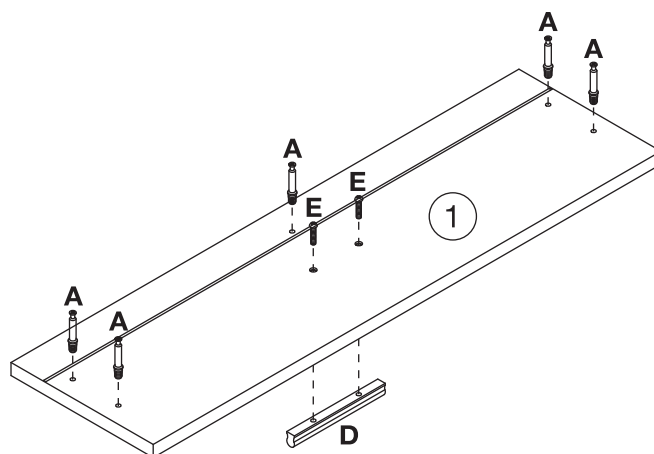

A x 5

 


D x 1



E x 2

STEP 2

 Fix panels 2, 4 and 5 to panel 3 using screws (C), as shown.

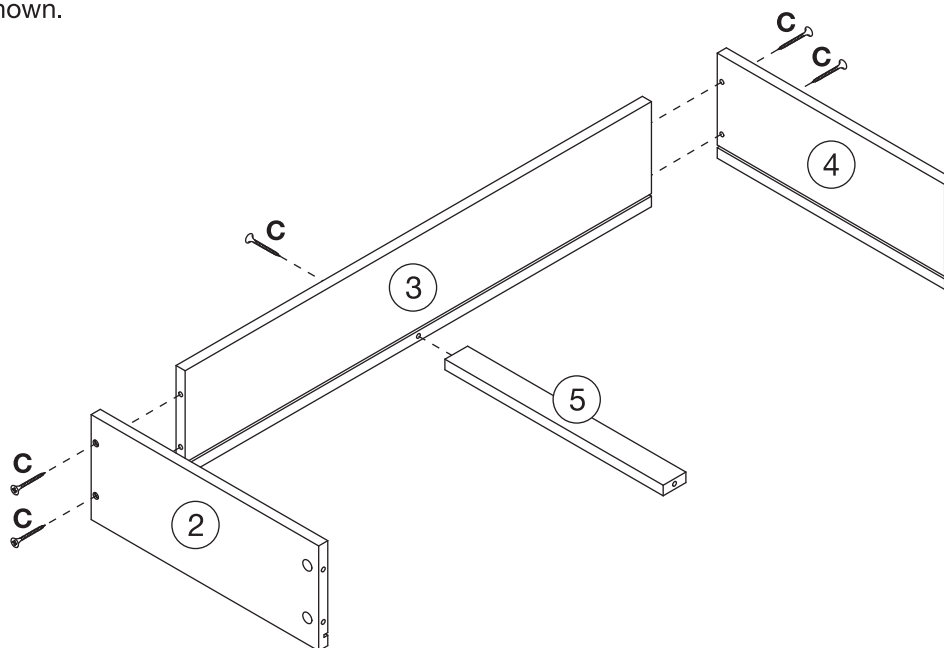


C x 5

Luxe Chest of 4 Drawers

STEP 3

 Slide panel 6 between the slots of assembled unit, as shown.

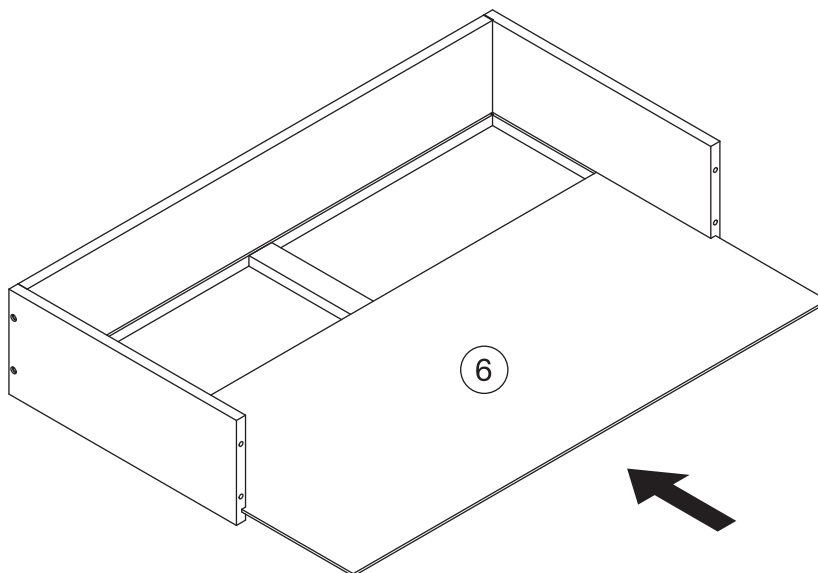


STEP 4

Insert cam locks (B) to assembled unit, as shown.

Insert panel 1 into assembled unit.

 Rotate all cam locks clockwise until tight.

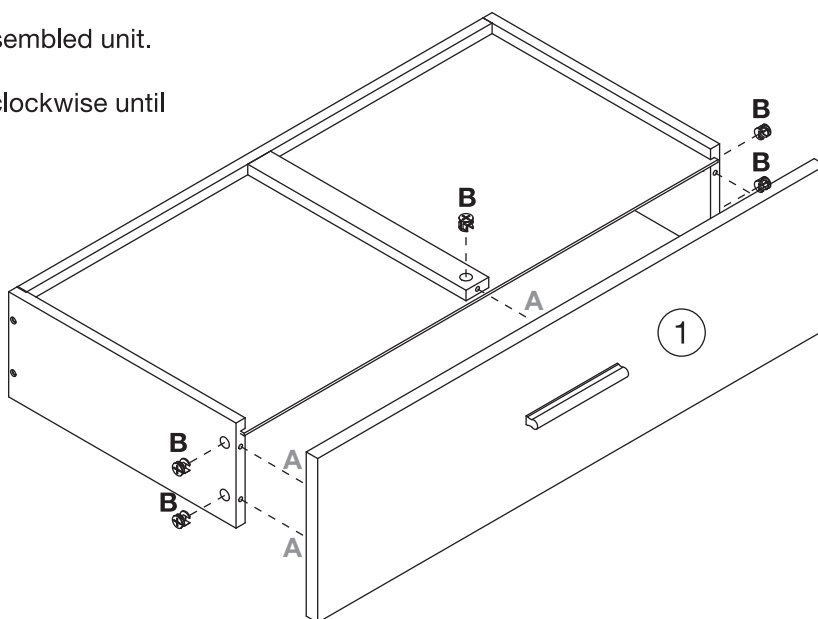


B x 5


Luxe Chest of 4 Drawers

STEP 5

 Fix drawer runners (DR) and (DL) to assembled unit using screws (F), as shown.

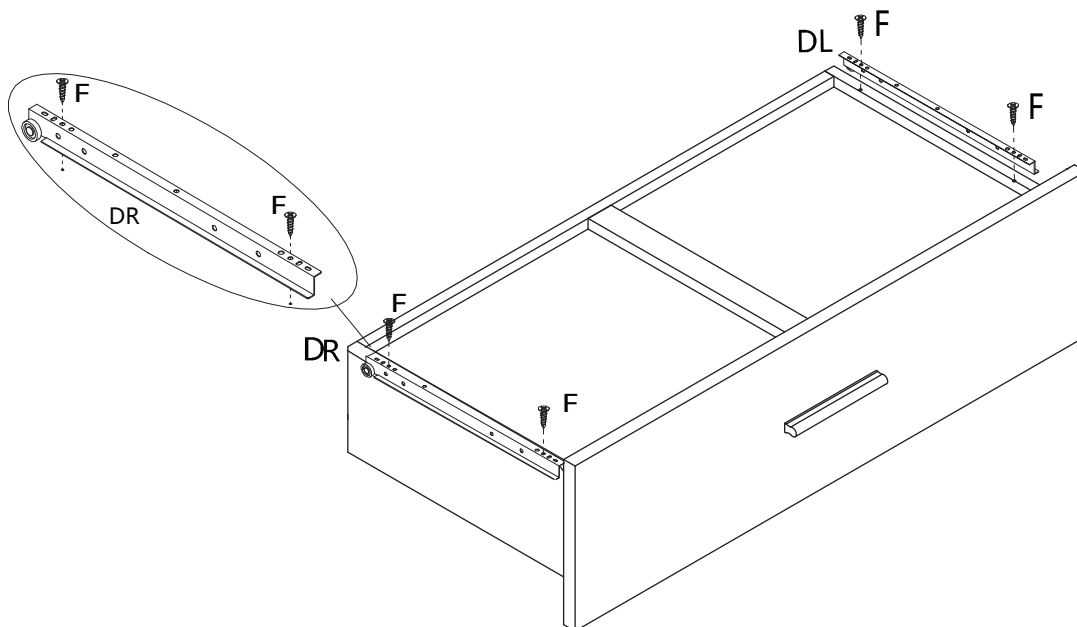

F x 4

 

DR x 1

 


DL x 1


Repeat steps 1-5 for the remaining 3 drawers.

STEP 6


Fix drawer slides (CL) and (CR) to panels 9 and 10 using screws (F), as shown.

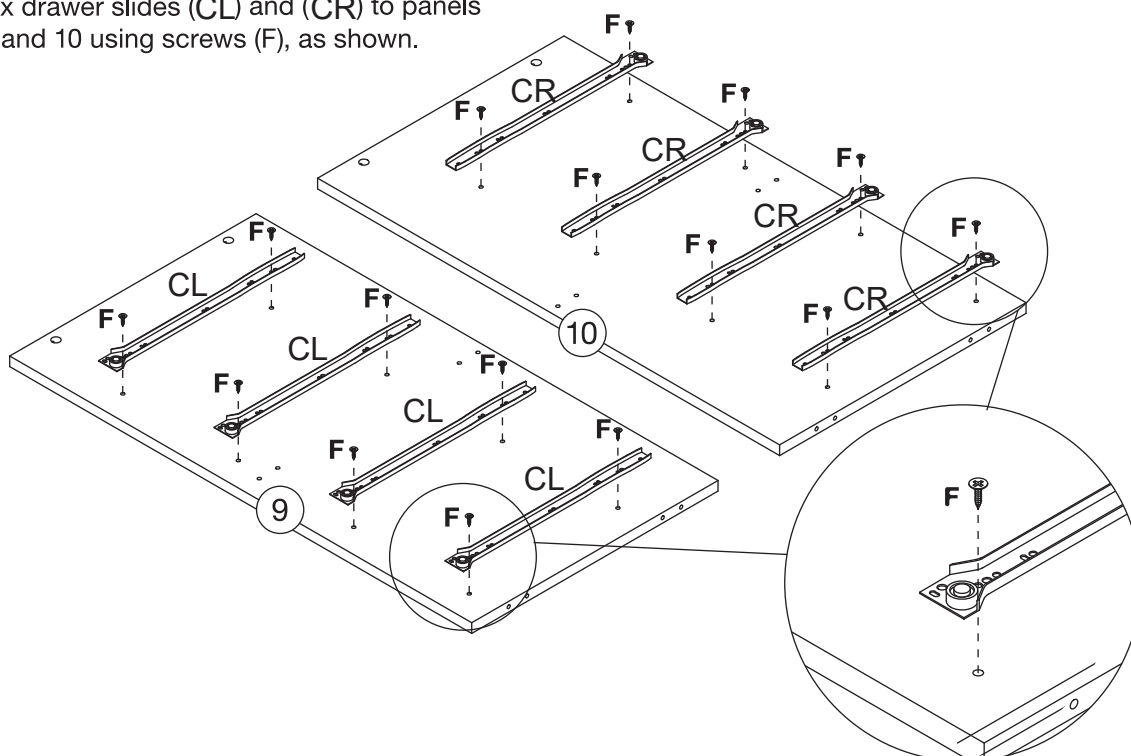

F x 16

 

CL x 4

 


CR x 4

Luxe Chest of 4 Drawers

STEP 7

 Fix leg support (L) to panel 7 using screws (K), as shown.

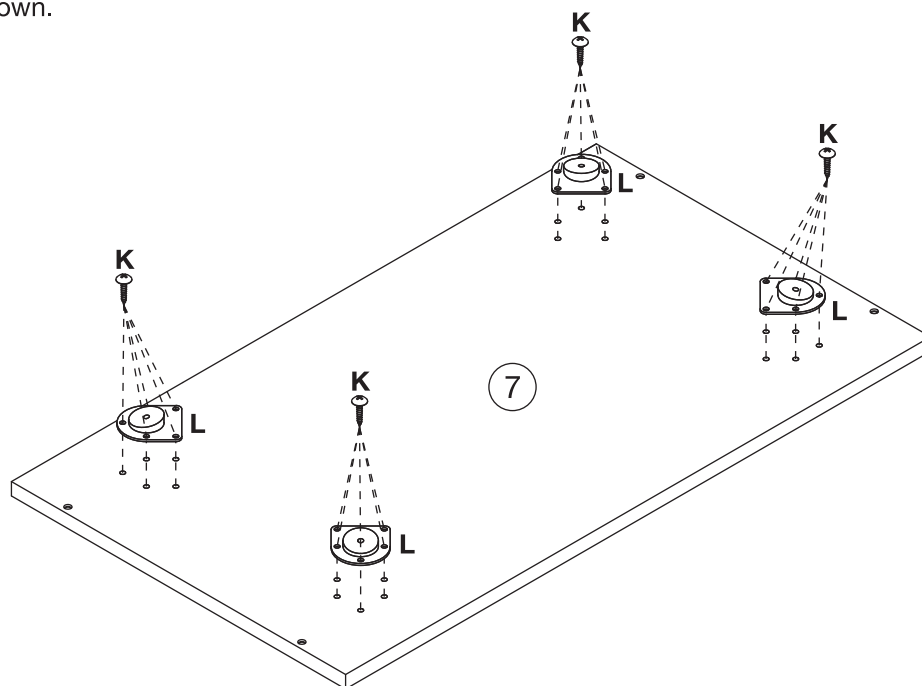


K x 20



L x 4

STEP 8

 Turn legs 8 clockwise into leg support, as shown.

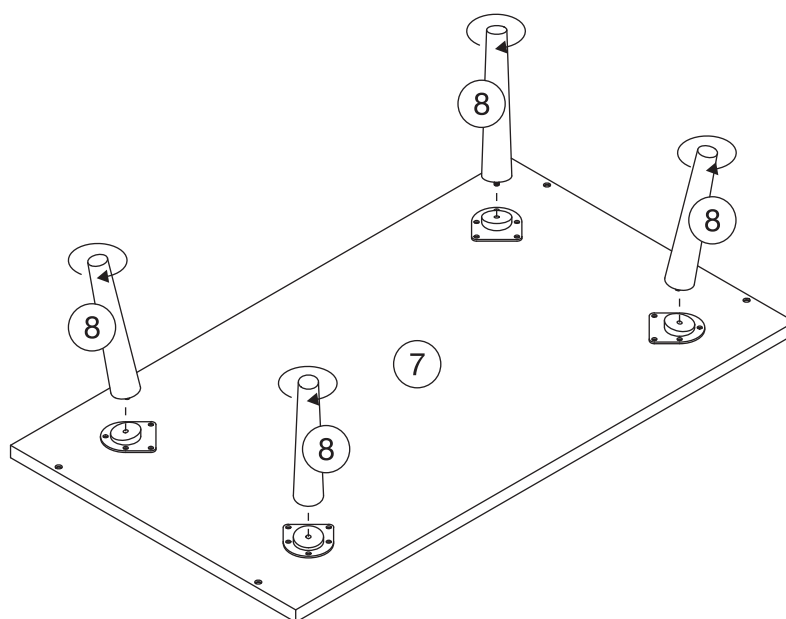

Luxe Chest of 4 Drawers

 
STEP 9

Insert quickfit screws (A) and wooden dowels (M) to parts 9 and 10, as shown.

Insert cam locks (B) to parts 11 and 12 as shown.

Insert parts 9 and 10 into parts 11 and 12

Turn cam locks clockwise to tighten.

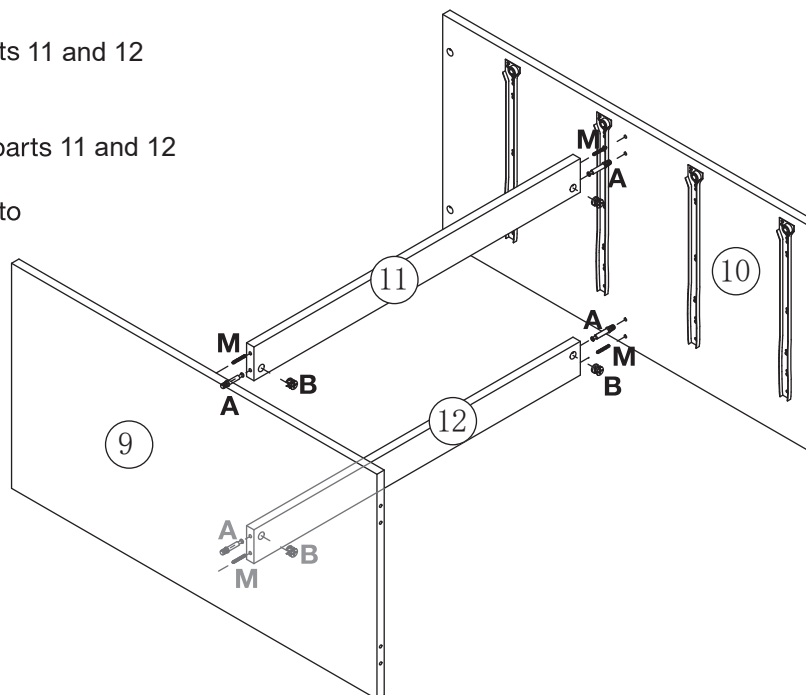

A x 4



B x 4

 


M x 4

STEP 10

Insert wooden dowels (M) into parts 9 and 10.

Fix part 7 to the bottom part 9 and 10 of side panel using screws (C), as shown.

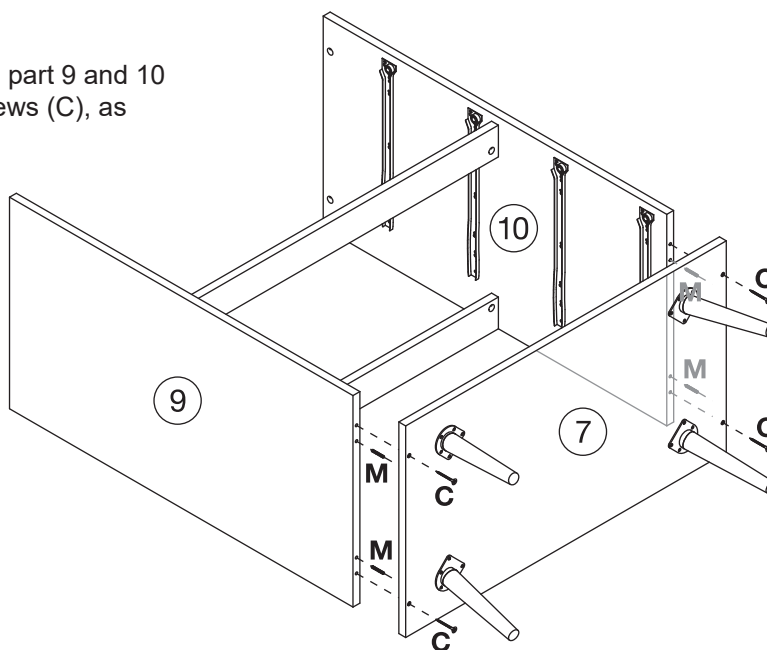

C x 4



M x 4

Luxe Chest of 4 Drawers

 
STEP 11

Insert quickfit screws (A) and wooden dowels (M) to part 13, as shown.

Insert cam locks (B) to parts 9 and 10, as shown.

Insert part 13 into parts 9 and 10.

Turn cam locks clockwise to tighten.

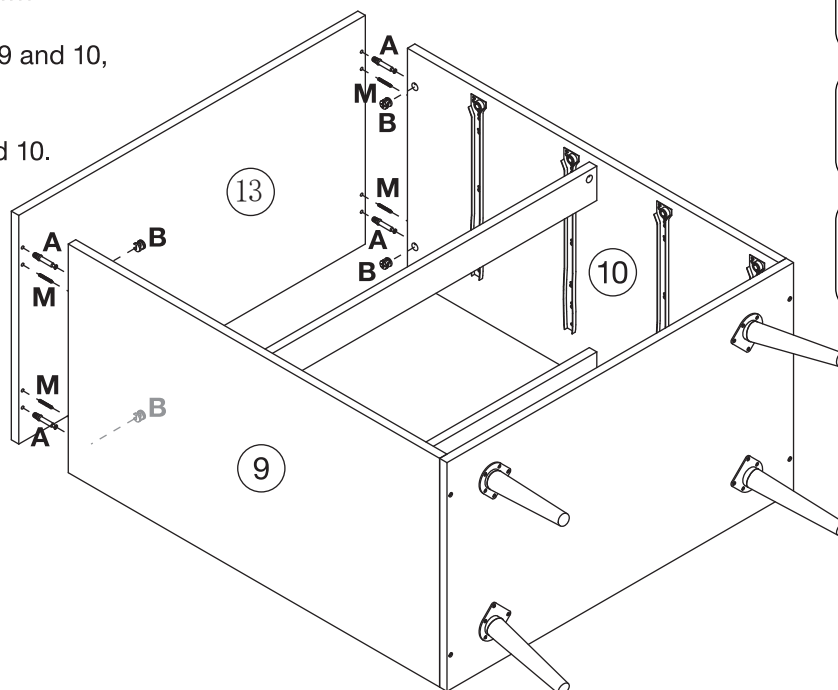

A x 4



 
B x 4



M x 4

STEP 12

Fix panels 14 to assembled unit using nails (N).

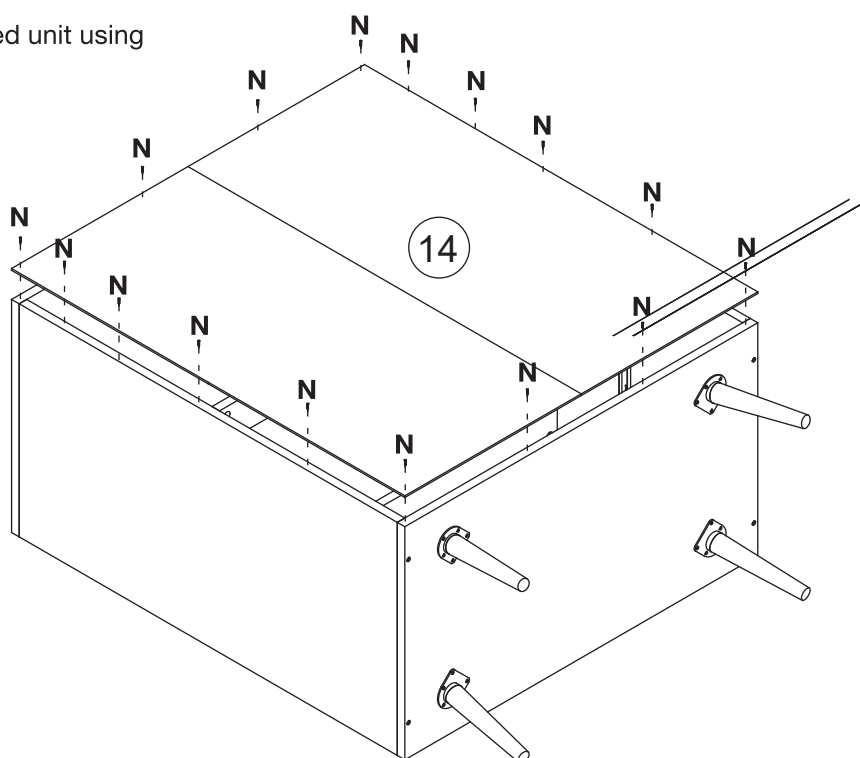


N x 16

Luxe Chest of 4 Drawers

STEP 13

 
Fit drawers to assembled unit.

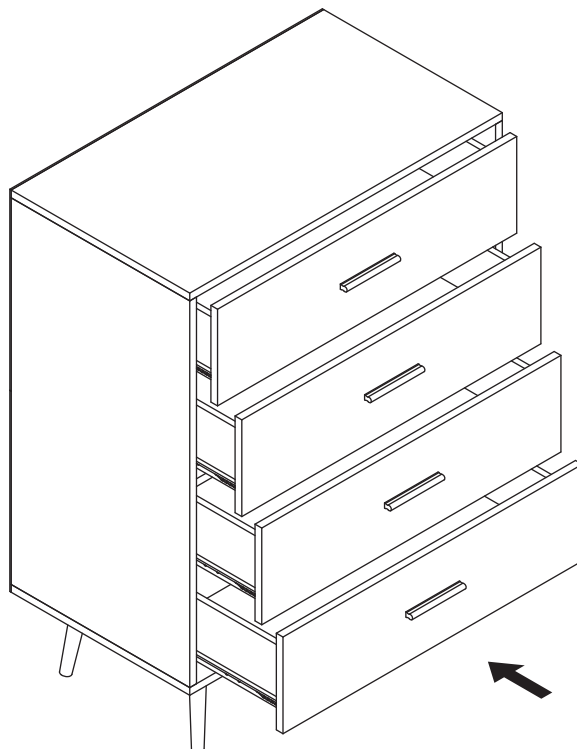

STEP 14

For extra stability, it is recommended that you fix the drawers to a wall using additional hardware (C, P, Q, R and S), as shown.

 Should you choose to not affix the product to the wall, serious injury may be caused if the product tips over.

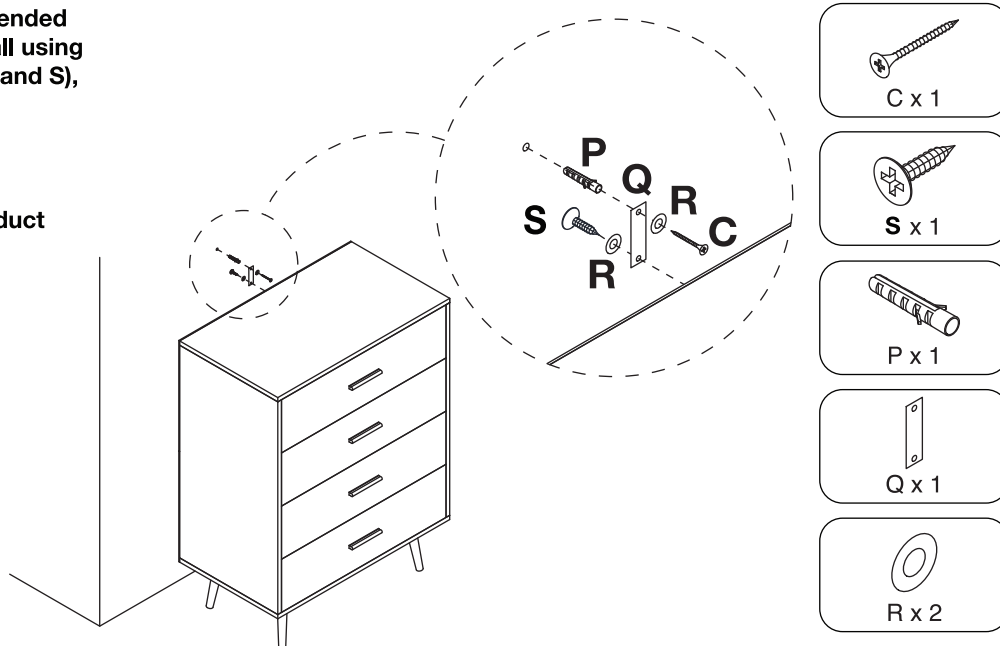

Your chest of 4 drawers is ready for use.

Maximum recommended weight limit is 5 kg per drawer.

DE Sicherheitshinweise

- Wichtige Information
- Sorgfältig und aufmerksam lesen
- Diese Information aufbewahren



WICHTIG. Der Aufbau des Möbels muss zwingend nach Aufbauanleitung und durch eine fachkundige Person erfolgen. Sämtliche Elektro- und Sanitärinstallationen sind ausschließlich von autorisiertem Fachpersonal durchzuführen.

Um zu verhindern, dass ein Möbel umkippt, muss es fest an der Wand verankert werden. Eine fehlerhafte Montage bzw. fehlende Wandbefestigung kann zu Funktionsbeeinträchtigungen, Beschädigungen und/oder schweren Verletzungen führen.

Wegen der großen Vielfalt an Wänden und Wandmaterialien haben wir kein Befestigungsmaterial beigelegt. Bitte erkundigen Sie sich im Fachhandel nach geeignetem Befestigungsmaterial entsprechend Ihren baulichen Gegebenheiten. Sie sind für die Befestigung am Mauerwerk und den dort eingesetzten Materialien selbst verantwortlich.

Halten Sie die in der Montageanleitung angegebenen maximalen Gewichtsangaben ein. Beschlagbeutel, Beschlagteile und Verpackungsmaterial sind von Säuglingen und Kindern fernzuhalten, da verschluckbare Kleinteile enthalten sind und Erstickengefahr droht.

Werden Bedienungs-, Betriebs- oder Montageanweisungen nicht befolgt, Bauteile ausgewechselt, Änderungen an den Produkten vorgenommen oder Verbrauchsmaterialien verwendet, die nicht den Originalteilen entsprechen, so entfallen jegliche Haftungsansprüche und Gewährleistung. GERMANIA haftet nicht für Personen- oder Sachschäden, die auf eine unsachgemäße Montage bzw. nicht erfolgte Wandbefestigung zurückzuführen sind. Bei Überlastungen, die durch Menschen, spielende Kinder oder sonstige Einwirkungen entstehen, übernehmen wir als Hersteller keine Haftung.



GB Safety information

- Important information
- Please read closely and carefully
- Save this information



IMPORTANT. It is imperative that the furniture be installed according to instructions by someone properly qualified to complete the task. Installation of electrical or plumbing fixtures should only be performed by trained professionals.

The furniture must be anchored to the wall to prevent it from tipping over. Improper installation or failure to use wall fasteners can prevent the item from functioning properly and may cause damage and/or severe injury.

Wall fasteners are not included because of the large variety of walls and wall materials. Please ask a specialized dealer for wall fasteners appropriate to your specific needs. You are responsible for anchoring the items to the wall and for the materials used for that purpose.

Please observe the maximum load capacity as specified in the assembly instructions. Keep the bag containing the fittings, the fittings themselves and other packaging material out of reach of babies and children. The small parts can be swallowed and therefore pose a choking hazard.

Failure to follow handling, operation or assembly instructions, exchanging components, making changes to the product or using materials which differ from the original parts will result in voiding all liability claims and warranties. GERMANIA accepts no liability for personal or material damage due to improper installation or failure to properly anchor the item to the wall. We assume no liability as manufacturer for excessive loads placed on a unit by individuals, playing children or other causes.