

## H35R

### User Manual

Thank you for purchasing! Contact [sofirnlight@gmail.com](mailto:sofirnlight@gmail.com) if you need any help!

H35R is a rechargeable multi-functional headlamp that has 5 emitters, providing both white light and red light.

Technical Parameters					
Modes	Moonlight	Low	Medium	High	Turbo
White led	1LM	60LM	450LM	800LM	1500LM
Water-Resistant	IPX6				
Recharge	5V, 1A input via Hidden USB Port				
Emitter	3 LEDs for white light+ 2 LEDs for red light				
Dimension	84mm (length)× 23mm (head diameter)				
Weight	80 ± 2 grams(excluding battery)				
Battery	1*18650				

**\* Note:**

It's hard to test the output of red light. The wavelength of red light is 660 nanometers.

**Battery Installation:**

Unscrew the tail cap (the side opposite the button) and insert the 18650 battery with the positive (+) terminal facing the switch. Then, screw the tail cap back on.

**Operation Instruction:**

1. Click(from off) to turn white light on. Long pressing (from off) to turn red light on.
2. Long pressing (from on) to cycle through Moonlight/Low/Medium/High/Turbo.


**Recharging:**

Please unscrew the cap(same side with the button) and plug in USB cable;

**Charging Indicator:**

Red = charging;

Green = fully charged

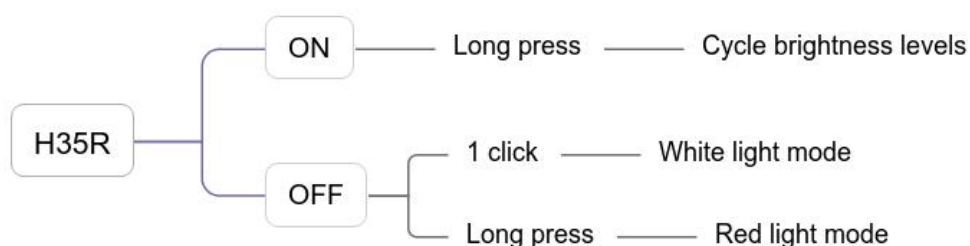

**Tips:**

1. Recharge or replace the battery when the battery indicator starts flashing.
2. Ensure the USB cable is connected to the USB port in the correct direction, and disconnect the cable promptly once charging is complete.

3.To prevent battery drain when not in use, unscrew the tail cap halfway.

4.Please feel free to contact **[sofirnlight@gmail.com](mailto:sofirnlight@gmail.com)** if you have any questions.