



VICTOPER

P70 FLASHLIGHT USER MANUAL

For your safety, read before operating.



MODEL: P70

USB RECHARGEABLE

1 WHAT'S IN THE BOX




2 MODE SWITCHING



Full press: ON / OFF
Half-press: Cycle modes

5 LIGHTING MODES

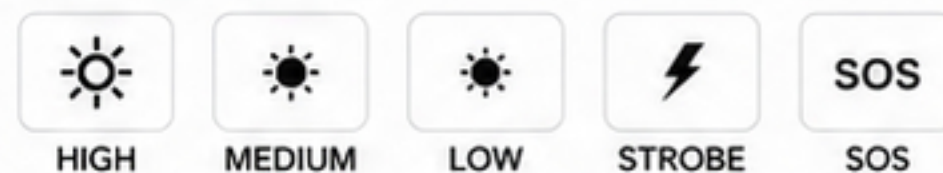

Half-press, or quickly click OFF/ON, to move to the next mode.

3 POWER DISPLAY & LIGHTING



Digital display shows remaining battery level.



High-output beam for outdoor use, search, and emergency lighting.

4 CHARGING & BATTERY INSTALLATION

A. USB CHARGING

- 1 Open the rubber charging-port cover.
- 2 Connect the included USB charging cable.
- 3 Connect to a 5V USB power source.
- 4 Display indicates charging status.
- 5 Recharge fully before first use.



B. RECHARGEABLE BATTERY

- 1 Unscrew the tail cap.
- 2 Insert the rechargeable battery positive (+) end toward the flashlight head.
- 3 Tighten the tail cap firmly.
- 4 Use only a compatible rechargeable battery.



IMPORTANT: Use only compatible rechargeable batteries. Do not charge disposable batteries.

5 SAFETY & CARE

- ⚠ Do not look directly into the beam or shine it into anyone's eyes.
- ⚠ Keep away from children, heat, flames, and metal objects.
- ⚠ Do not immerse the flashlight in water.
- ⚠ Stop use if the flashlight or battery becomes hot, damaged, or leaks.
- ⚠ Remove the battery before long-term storage.

6 TROUBLESHOOTING


✖	NO POWER	Recharge the battery and check polarity.
✓	NOT CHARGING	Check the cable, power source, and charging port.
✓	FLICKERING	Tighten the tail cap and clean battery contacts.
⚠	DIM LIGHT	Recharge the battery.
⚠	MODE CHANGES	Avoid resting on the switch; fully click ON/OFF.
✖	STILL NOT WORKING	Contact Victoper Support.



Need help?
service@victoper.com
Include your Amazon order number and a brief issue description.



VICTOPER SUPPORT
service@victoper.com | victoper.com

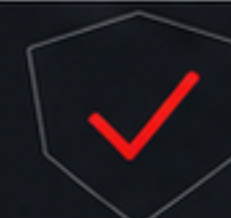

**QUALITY
YOU CAN TRUST**
Lighting Your Way,
Every Day.