

Pressure Balance Shower Faucet Installation Manual

W-4(ES)

Warranty Duration

All components of this faucet system are covered under a lifetime limited warranty, ensuring they are free from defects in material and workmanship for the original purchaser.

Repair and Replacement

If the product shows defects in material or workmanship under normal use and within the warranty period, we will, at our discretion, either repair the product or provide a replacement at no cost to the original purchaser. Please note that proof of purchase (e.g., an invoice) is required when requesting service. The warranty does not cover damages caused by improper installation, misuse, or modifications.

Exclusions

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse (including damage during shipment).
- Damage to the product caused by improper dismantling after installation.
- Damage resulting from abnormal water pressure or impurities in water pipes, which is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance, which is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, lightning storms, etc., which is not covered under this warranty.

I hope this helps! If you have any further questions or concerns, please let me know.

Having Trouble?Contact us.

✉ Email: info@faucetsupport.com

☎ Toll Free: 1-888-969-6880



CEC **FC** **C** **€** **RoHS**



M6646
Model:A



M6502
Model:B

CONTENT





1.Two-function Rain Shower System-----(1-10)

CONTENIDO

1.Sistema de Ducha de Lluvia de Dos Funciones-----(11-20)

◆ Installation and Maintenance Matters

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the main body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

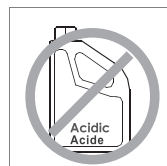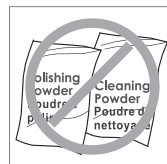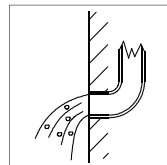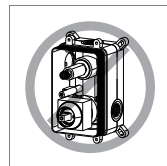



Do's

1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface: a. Mild liquid cleaner. b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely. c. Polish liquid that does not cause abrasion.

Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.

  
Tools Needed:



◆ Two-function Rain Shower System


Model:A

Accessories List

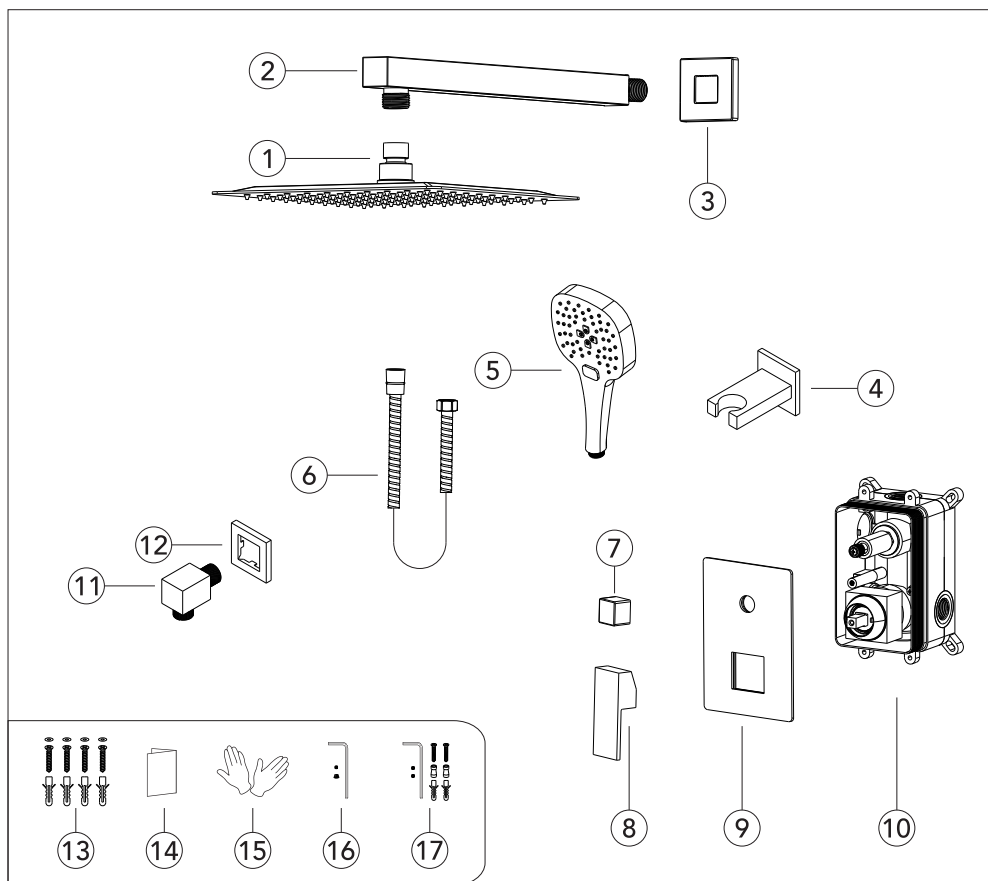


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	10	Main body	1
2	Shower arm	1	11	Connector	1
3	Shower arm flange	1	12	Connector flange	1
4	Hand shower holder	1	13	Main body spare parts	4
5	Hand shower	1	14	Instruction manual	1
6	Shower hose	1	15	Gloves	2
7	Water diverter	1	16	Handle parts	1set
8	Handle	1	17	Shower holder parts	1set
9	Deck plate	1			

◆ **Essential Dimensions & Water Pipe Line**

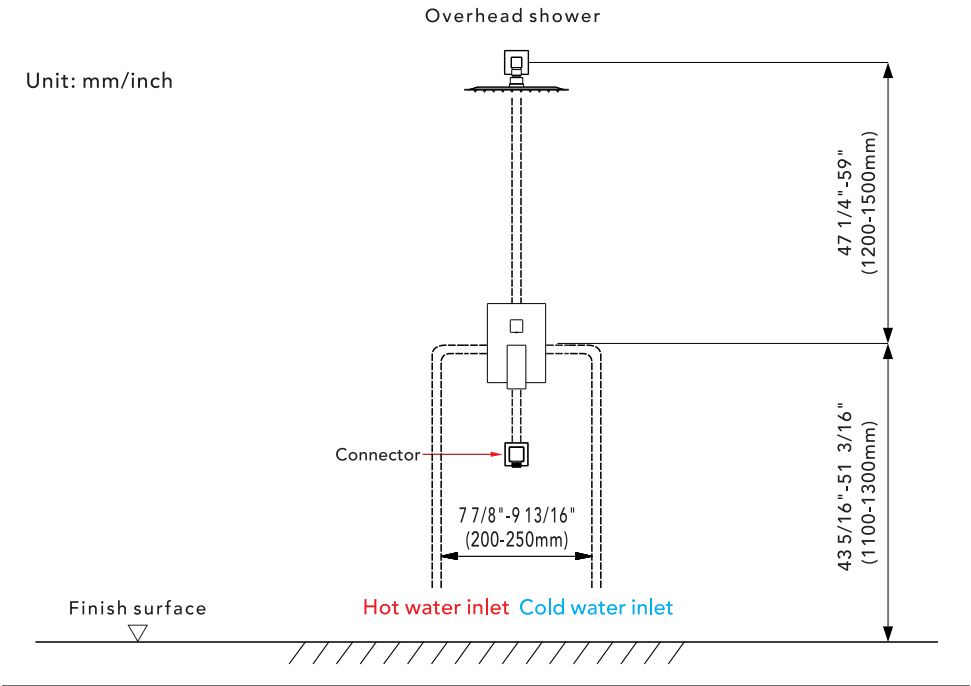

◆ **Installation Depth of the Connector and Shower Arm**

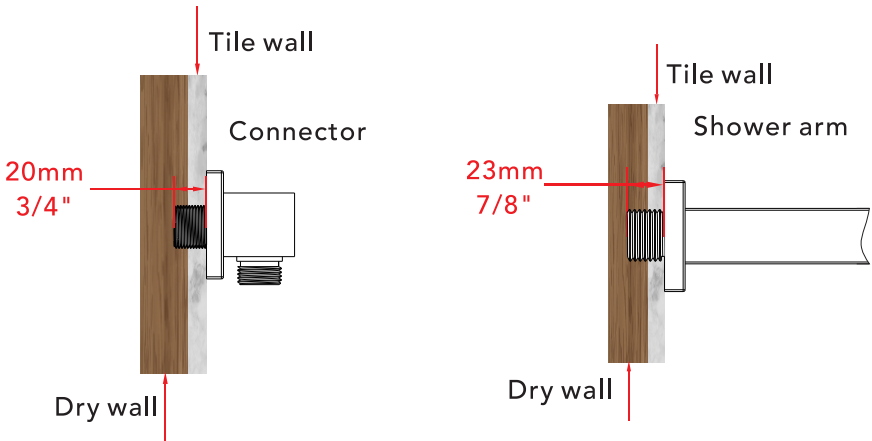



The thickness of the tile must be calculated for installation.
Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

◆ Hand Shower Holder Installation


Flange



 Connector

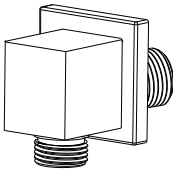

Install the connector flange under the connector, and then tighten it into the wall using the plumber's tape.

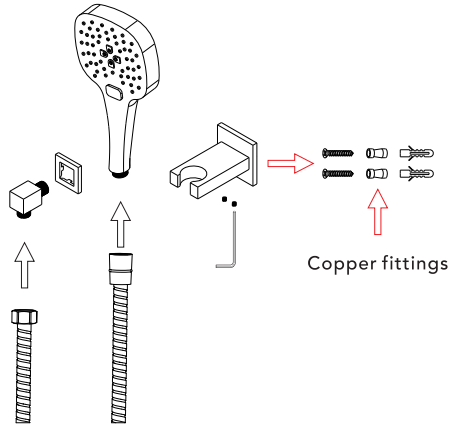


Step 1. First, use anchors to screw the hand shower holder into the wall.

Step 2. Remove the two screws from the hand shower holder.


Step 3. Insert the hand shower holder into the pre-installed copper fittings on the wall, then secure the shower seat with the two screws you removed earlier.

◆ Overhead Shower Installation

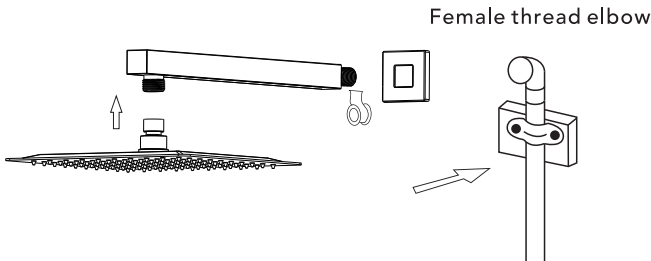

1. Connect shower arm with the flange before screwing arm into riser connection to prevent damage.
2. Fix shower head onto shower arm and apply tape to pipe threads on both ends.
3. Do not over tighten shower head. It is 360° swivel connection.


◆ **Two-function Rain Shower System**
Model:B
Accessories List

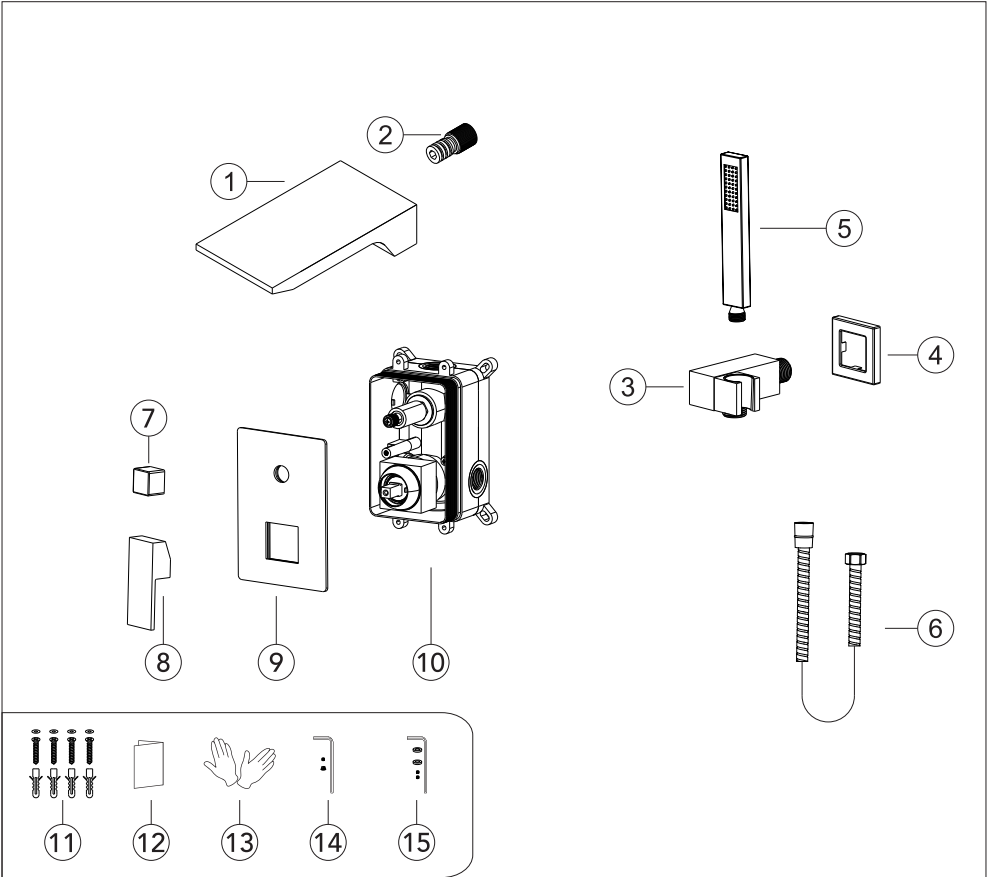


No.	Part name	Qty	No.	Part name	Qty
1	Bathtub spout	1	9	Deck plate	1
2	Copper Connector	1	10	Main body	1
3	Hand shower holder	1	11	Main body spare parts	4
4	Hand shower holder cup	1	12	Instruction manual	1
5	Shower hand	1	13	Gloves	2
6	Shower hose	1	14	Handle parts	1set
7	Water diverter	1	15	Shower holder parts	1set
8	Handle	1	16		

◆ **Essential Dimensions & Water Pipe Line**

Unit: mm/inch

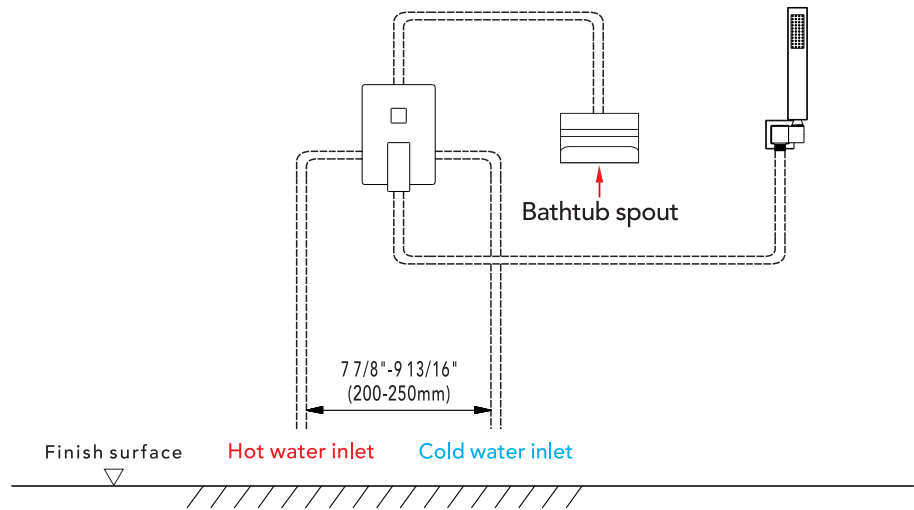


◆ **Installation Depth of the Shower Holder and Bathtub Spout**

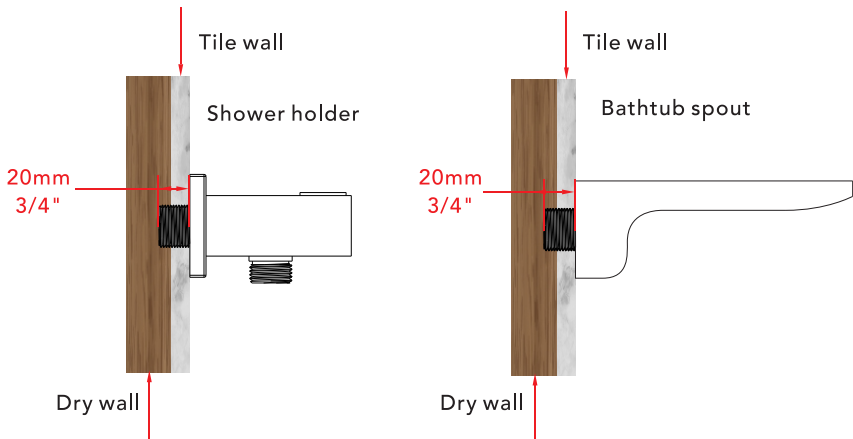

The thickness of the tile must be calculated for installation.
Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

◆ Hand Shower Holder Installation

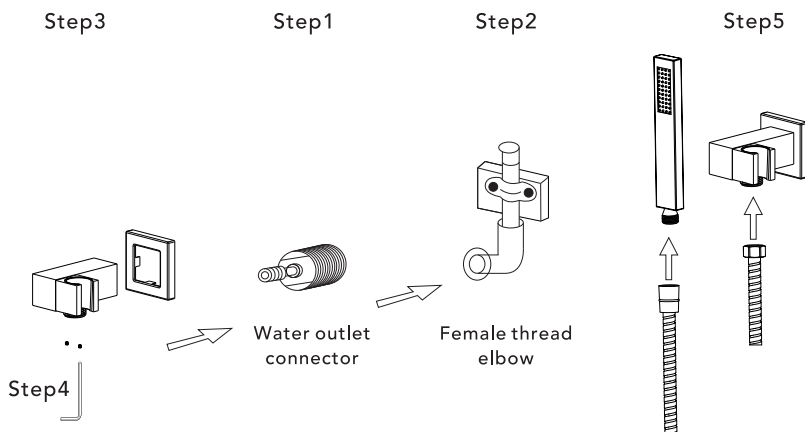

Step1.Remove the male connector from the top of the shower holder
(do not damage the gasket, otherwise it will leak).


Step2.Screw the thread into the water pipe inside the wall

Step3.Screw the shower holder body into the thread.

Step4.Rotate and fix the body with the Allen wrench.

Step5.Connect hand shower and the hose.

◆ Bathtub Spout Installation

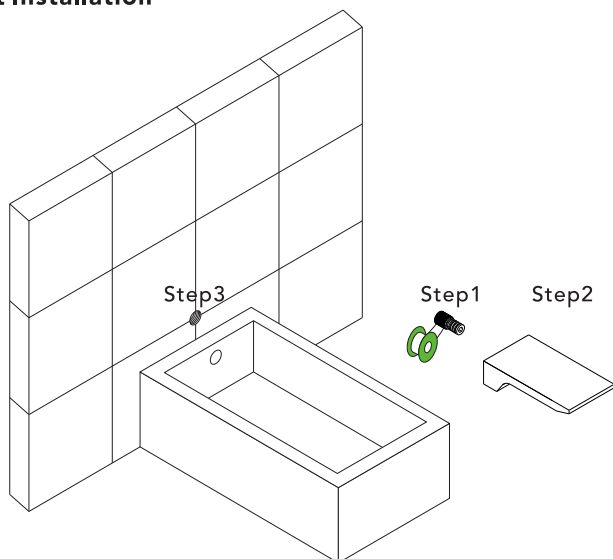


Step1: Wrap the fitting with PTFE tape.

Step2: Attach the copper connector to the bathtub spout.


Step3: Rotate the bathtub spout to connect with the internal thread on the wall.

◆ Installation Depth of the Main Body

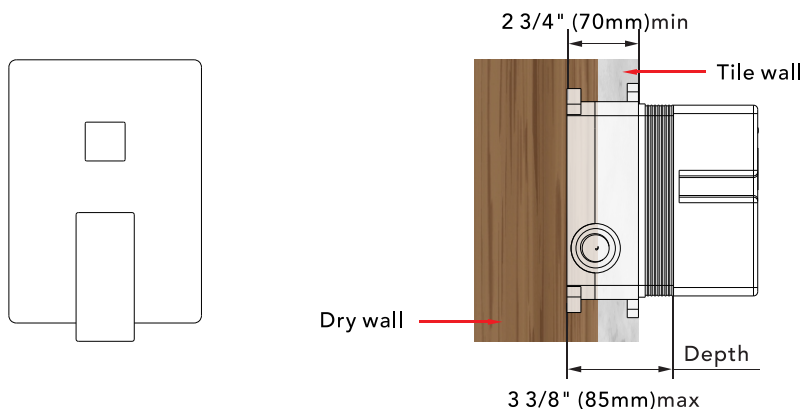

- Notice: 1. The installation depth of the main body should be no less than 2 3/4" (70mm) and no more than 3 3/8" (85mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
2. The opening size of ceramic tile shall be smaller than the deck plate size.



◆ Piping Instructions Before Tiling

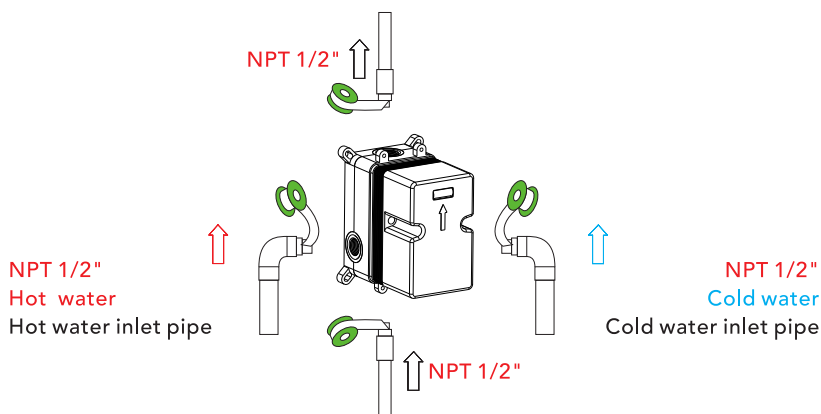

1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
2. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.

◆ Main Body Valve Installation


Step1

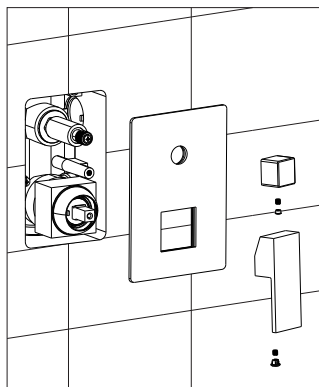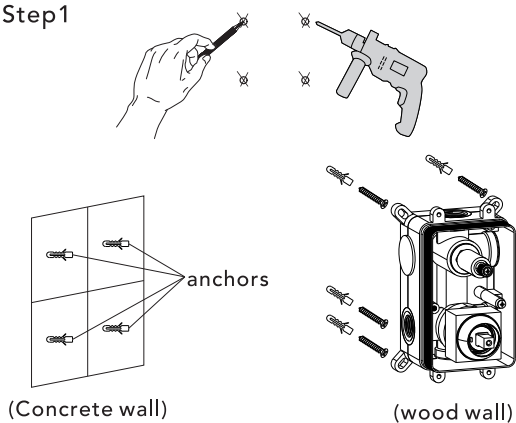


1. Make marks according to the size of the main body valve, and then drill anchors into the wall (concrete wall).
 2. Lock the main body to wood directly with screws (wood wall).
 3. When installing the main body, please mark the UP side up and do not install it upside down.
- ▲ Please note that the level meter should be parallel to the wall; otherwise, the deck plate cannot be installed.

◆ Main Body Water Outlet Switch Control

Model:A

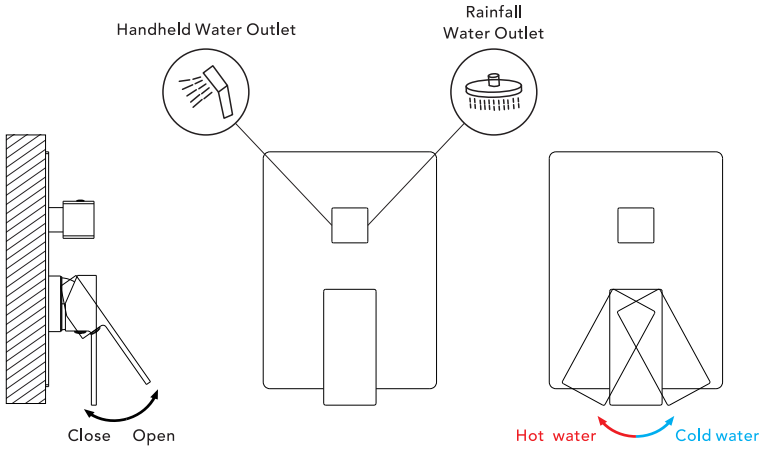

Model:B

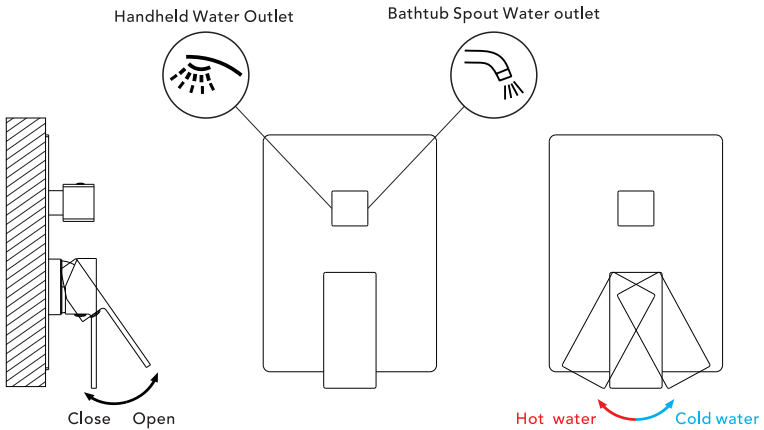

1. Open the water valve and check for any leakage
2. Turn the handle upwards to open the water valve. The turning angle can control the water outflow rate. Then, the user can turn it to the left or right to control the water temperature, where the left is for hot water and the right is for cold water.
3. Rotate the diverter knob left or right to select different water outlet functions.

◆ Instalación y cuestiones de mantenimiento





1. Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
2. No desmonte el cuerpo principal por sí mismo.
3. Conecte las tuberías de entrada a las válvulas de suministro.
4. Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
5. Después de la instalación, revise todas las juntas en busca de fugas.
6. No deje el sistema de ducha expuesto a un ambiente severamente corrosivo.

Hacer



1. En para mantener la superficie de la batidora brillante, limpie el mezclador regularmente.
2. Inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
3. Use uno de los siguientes limpiadores para eliminar la suciedad de la superficie:
A. Mild Liquid Cleaner.
B. Cleaner de vidrio sin color y limpiador de polvo que no causar abrasión y se puede disolver por completo.
C. Polish Líquido que no causa abrasión.

No es decir

- A. Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.

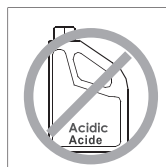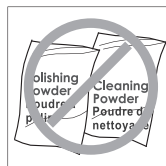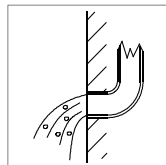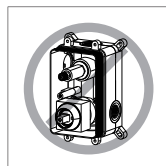


HERRAMIENTAS NECESARIAS:

  

◆ Sistema de Ducha de Lluvia de Dos Funciones


Modelo: A

Lista de Accesorios

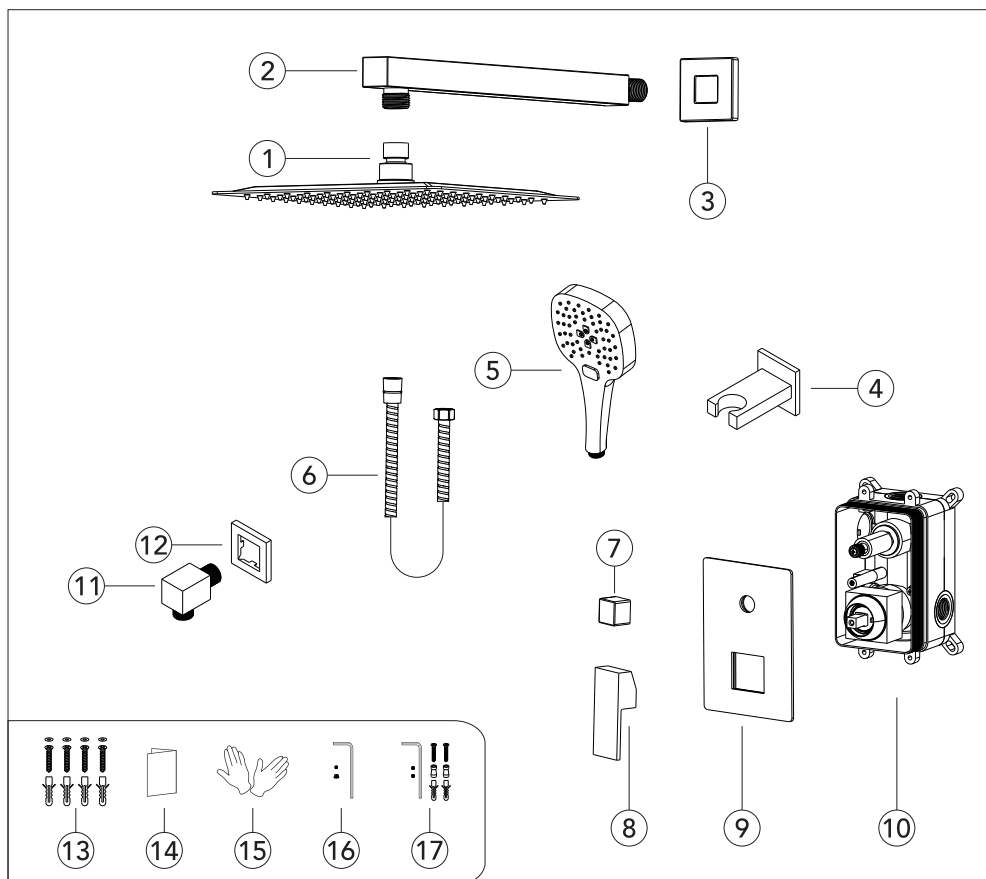


N.º	Nombre de la pieza	Cantidad	N.º	Nombre de la pieza	Cantidad
1	Alcachofa de la ducha	1	10	Cuerpo principal	1
2	Brazo de ducha	1	11	Conector	1
3	Taza de brazo de ducha	1	12	Taza	1
4	Asiento fijo de ducha	1	13	Piezas de repuesto del cuerpo principal	4
5	Ducha de mano	1	14	Manual de instrucciones	1
6	Manguera de ducha	1	15	guantes	2
7	Desviador de agua	1	16	Partes del mango	1 juego
8	manija	1	17	Partes del soporte de ducha	1 juego
9	placa de cubierta	1			

◆ Dimensiones esenciales & línea de tubería de agua

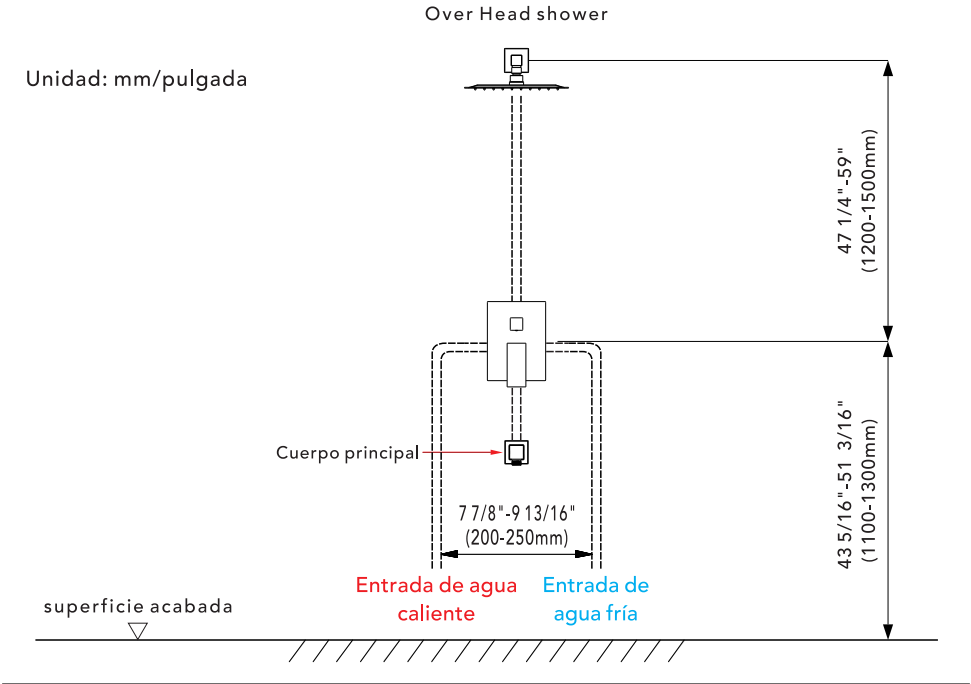

◆ Profundidad de instalación del conector y el brazo de ducha

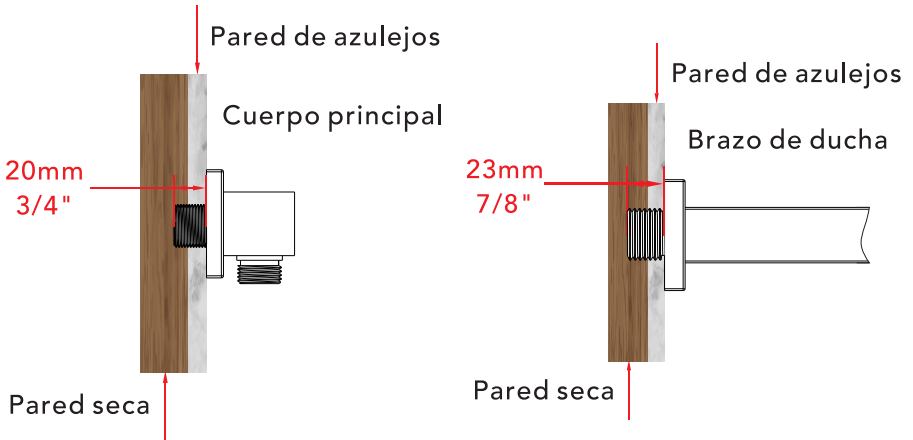


El grosor del azulejo debe ser calculado para la instalación.
Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".


◆ Instalación del soporte de ducha de mano

Taza

Conector

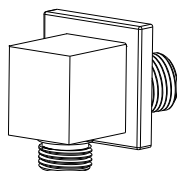

Instala la cubierta decorativa debajo del surtidor de agua, y luego apriétala contra la pared usando la cinta impermeable.

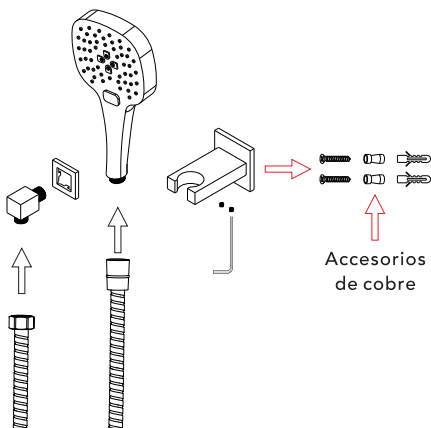


Paso 1. Primero, usa anclajes para atornillar el soporte del tubo en la pared.

Paso 2. Retira los dos tornillos del asiento de la ducha.


Paso 3. Inserta el asiento de la ducha en los accesorios de cobre preinstalados en la pared, luego asegura el asiento de la ducha con los dos tornillos que retiraste anteriormente.

◆ Instalación de la ducha superior

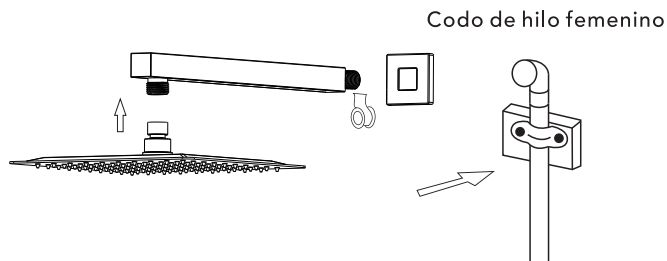

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador con prevenir el daño.
2. Fije el cabezal de la ducha en el brazo de la ducha y aplique cinta adhesiva para las roscas de tubos en ambos extremos.
3. No revolotee la cabeza de ducha. Es una conexión giratoria de 360 °.


◆ **Sistema de Ducha de Lluvia de Dos Funciones**
Modelo: B
Lista de Accesorios

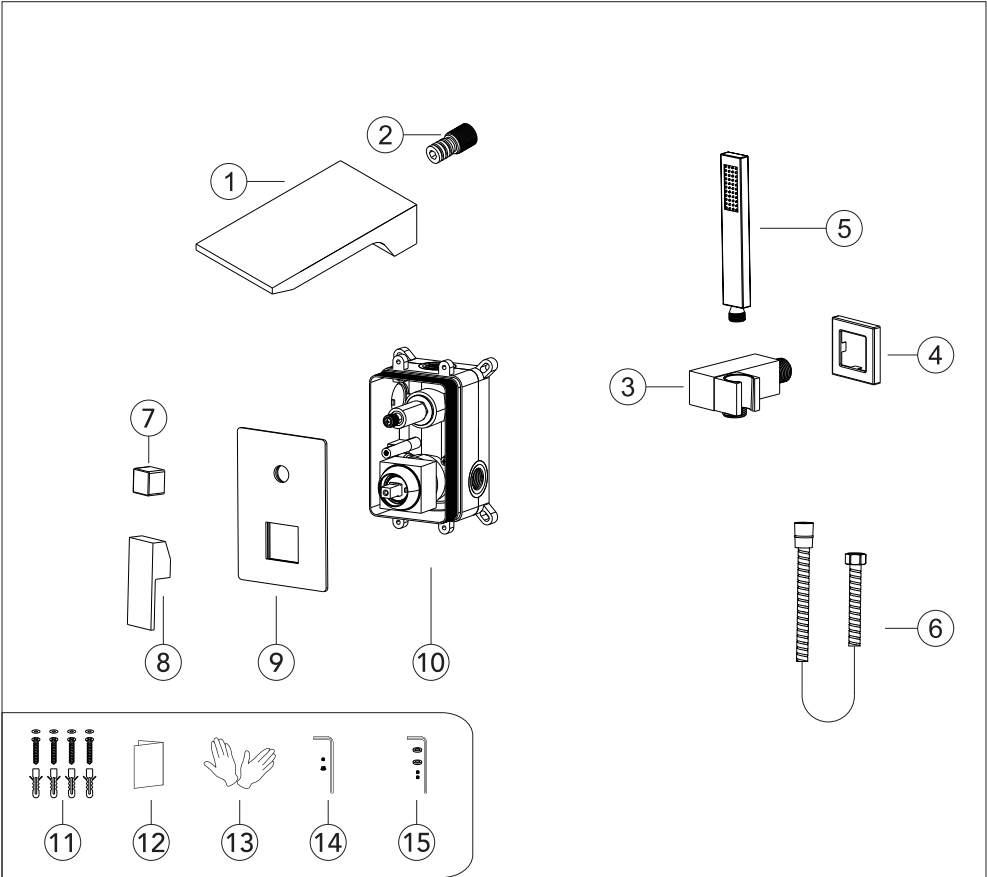


N.º	Nombre de la pieza	Cantidad	N.º	Nombre de la pieza	Cantidad
1	Caño de bañera	1	9	Placa de cubierta	1
2	Conector de cobre	1	10	Cuerpo principal	1
3	Asiento fijo de ducha	1	11	Piezas de repuesto del cuerpo principal	4
4	Copa decorativa para asiento fijo de ducha	1	12	Manual de instrucciones	1
5	Ducha de mano	1	13	guantes	2
6	Manguera de ducha	1	14	Partes del mango	1juego
7	Desviador de agua	1	15	Partes del soporte de ducha	1juego
8	manija	1	16		

◆ Dimensiones esenciales & línea de tubería de agua

Unidad: mm/pulgada

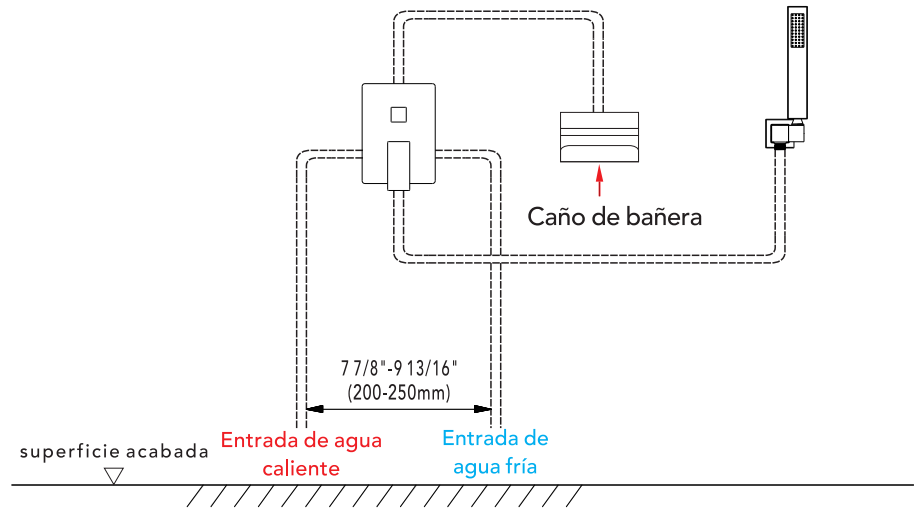


◆ Profundidad de instalación del soporte de ducha y el caño de bañera

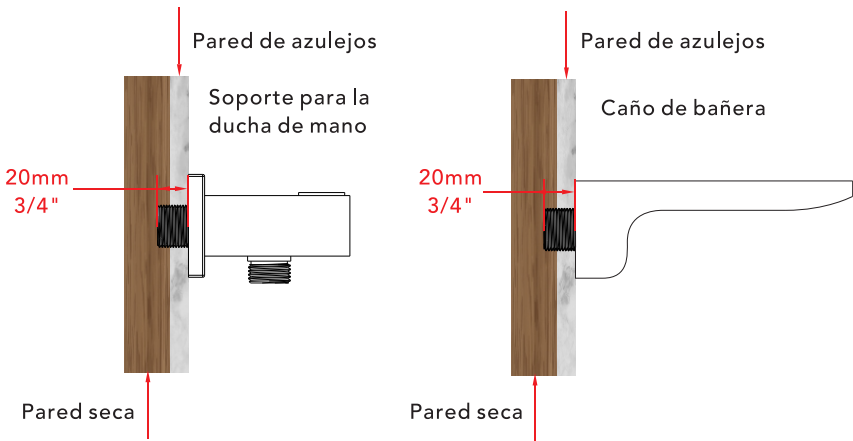

El grosor del azulejo debe ser calculado para la instalación.
Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

◆ Instalación del soporte de ducha de mano

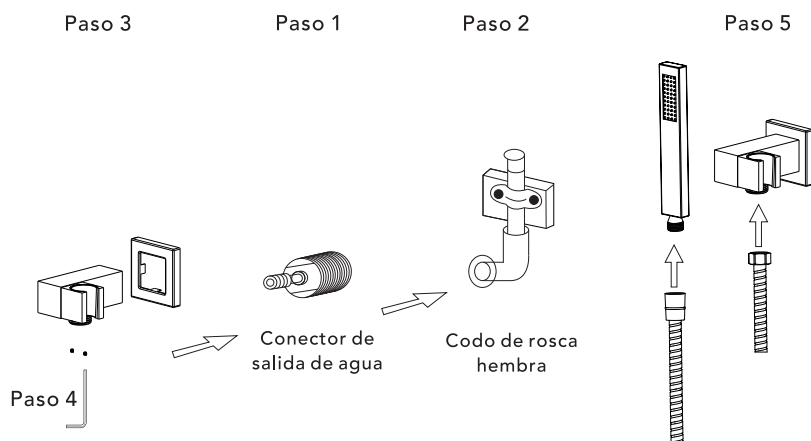

Paso 1. Retire el conector macho de la parte superior del soporte de la ducha (no dañe la junta, de lo contrario, habrá fugas).


Paso 2. Enrosque la rosca en la tubería de agua dentro de la pared

Paso 3. Enrosque el cuerpo principal en la rosca.

Paso 4. Rote y fije el cuerpo con la llave especial.

Paso 5. Conecte la ducha manual y la manguera.

◆ Instalación del caño de bañera

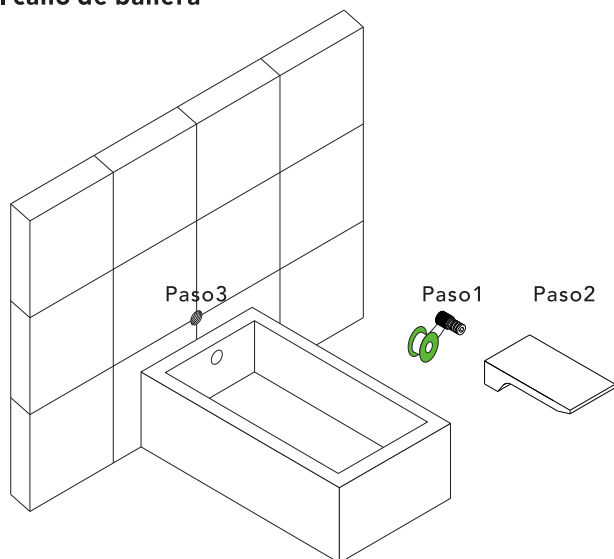


Paso 1: Envuelva la conexión con cinta de PTFE.

Paso 2: Fije el conector de cobre al caño de bañera.


Paso 3: Gire el caño de bañera para conectarlo con la rosca interna de la pared.

◆ Profundidad de Instalación del Cuerpo Principal

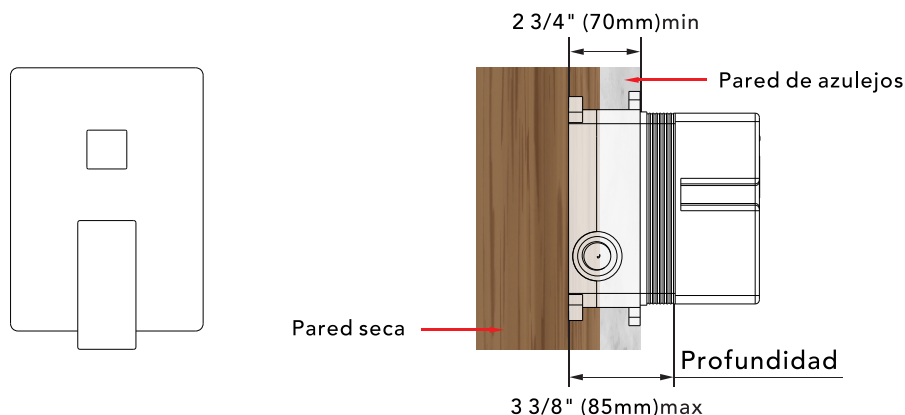

- Aviso: 1. La profundidad de instalación del cuerpo principal no debe ser inferior a 2 3/4" (70mm)min y no más de 3 3/8" (85mm)max, incluyendo el grosor del azulejo. De lo contrario, la placa de cubierta no podrá ser instalada.
2. El tamaño de apertura del azulejo cerámico debe ser menor que el tamaño de la placa de cubierta.


◆ Instrucciones de Tubería Antes de Colocar Azulejos

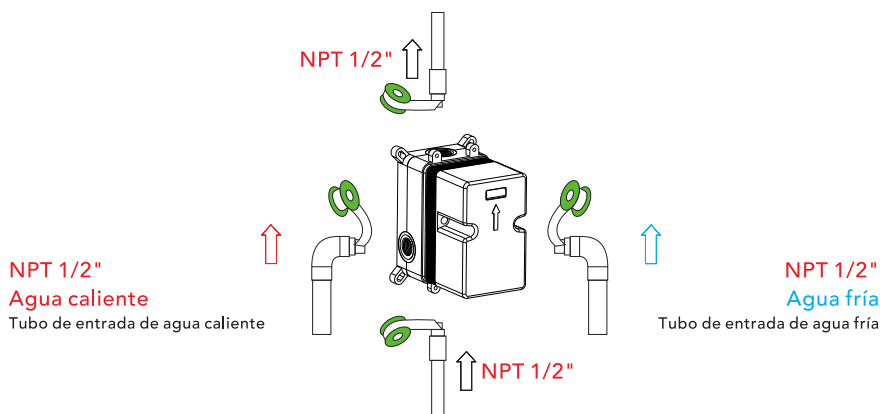


1. Como se muestra en la figura, las tuberías de entrada y salida están pre-enterradas. Por favor, preste atención a la dirección correcta al instalar el cuerpo principal pre-enterrado.
2. Antes de colocar los azulejos, abra el agua para probar si las tuberías de entrada izquierda y derecha están conectadas herméticamente sin fugas. Luego, ajuste el interruptor de flujo a la posición "on" para comprobar si hay fugas en las tuberías de salida mezcladas.

◆ Instalación de la Válvula del Cuerpo Principal


Paso 1

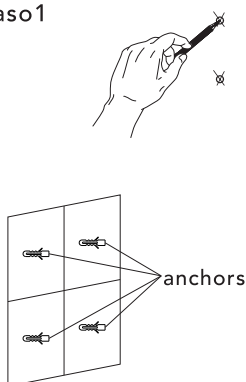

(Pared de concreto)

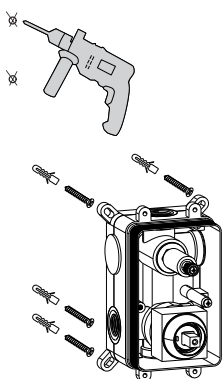


(pared de madera)

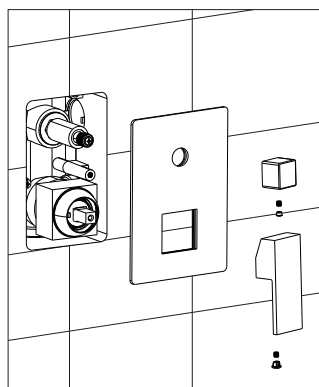


1. Marque según el tamaño de la válvula del cuerpo principal y luego perfore para colocar los anclajes en la pared (pared de concreto).
 2. Fije directamente el cuerpo principal a la madera con tornillos (pared de madera).
 3. Al instalar el cuerpo principal, por favor marque el lado UP hacia arriba y no lo instale al revés.
- ▲ Tenga en cuenta que el nivel debe estar paralelo a la pared; de lo contrario, la placa de cubierta no podrá ser instalada.

♦ Control del Interruptor de Salida de Agua del Cuerpo Principal

Modelo:A

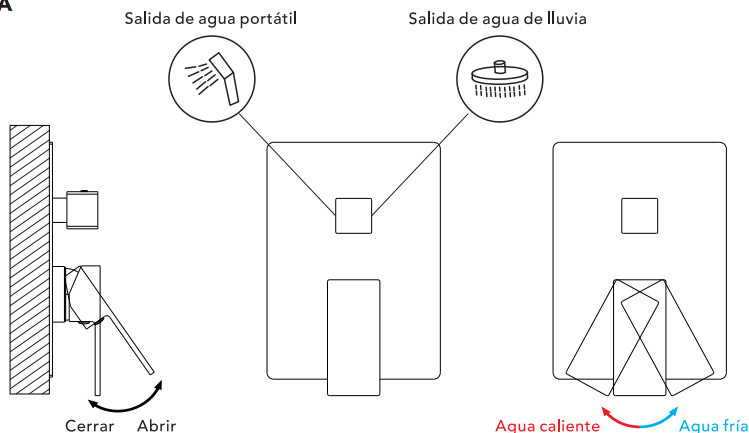

Modelo:B

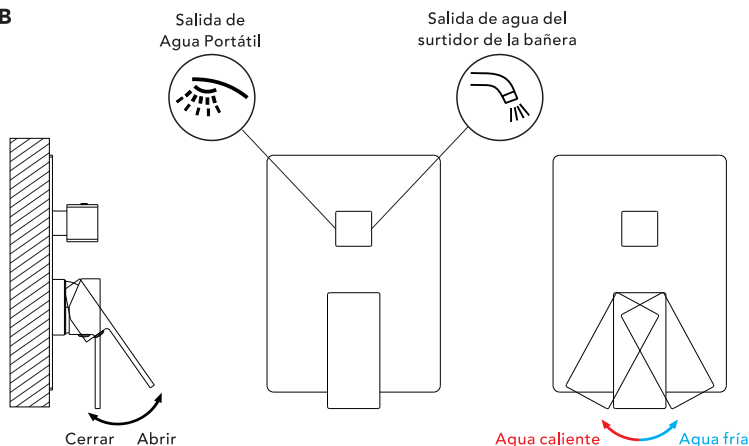

1. Abre la válvula de agua y verifica si hay alguna fuga.
2. Gira la manija hacia arriba para abrir la válvula de agua. El ángulo de giro puede controlar la tasa de flujo de salida del agua. Luego, el usuario puede girarlo hacia la izquierda o hacia la derecha para controlar la temperatura del agua, donde la izquierda es para agua caliente y la derecha es para agua fría.
3. Gire el botón desviador hacia la izquierda o hacia la derecha para seleccionar diferentes funciones de salida de agua.