

# **Wall-mounted Bathtub Faucet**

## **Installation Manual**

**W-78(ES)**

# **Warranty Duration**

All parts of this faucet system are warranted to the original purchaser to be free from defects in material and workmanship under a lifetime limited warranty.

## **Repair and Replacement**

If the product exhibits defects in material or workmanship under normal use and within the warranty coverage, we will, at our discretion, either repair the product or provide a replacement at no cost to the original purchaser. Please note that proof of purchase (e.g., an invoice) must be presented when requesting service. The warranty does not cover damages resulting from improper installation, misuse, or modifications.

## **Exclusions**

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse (including damage during shipment).
- Damage to the product caused by improper dismantlement after installation.
- Damage resulting from abnormal water pressure and impurities in water pipes is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, electric storms, etc., is not covered under this warranty.

I hope this helps! If you have any further questions or concerns, please let me know.

## **Having Trouble? Contact us.**

 Email: [info@faucetsupport.com](mailto:info@faucetsupport.com)

 Toll Free: 1-888-969-6880



**M5030-1  
SFS-1124  
Model:A**

## **CONTENT**



**1.Wall-mounted Bathtub Faucet Installation Manual ----- (1-4)**

## **CONTENIDO**

**1.Manual de instalación del grifo para lavabo ----- (5-8)**


## ◆ Installation and Maintenance Matters

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the main body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

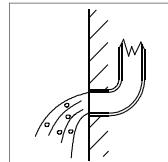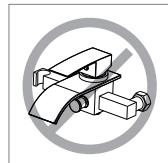

### Do's


1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface: a. Mild liquid cleaner. b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely. c. Polish liquid that does not cause abrasion.

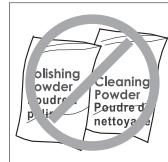


### Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.

### Tools Needed:

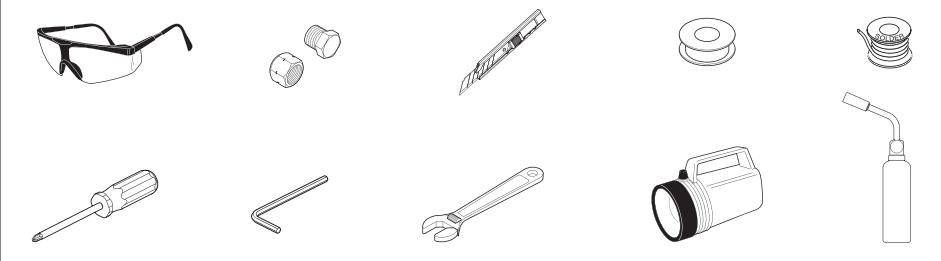


◆ Concealed Hot and Cold Bathtub Faucet  
Model:A  
Accessories List

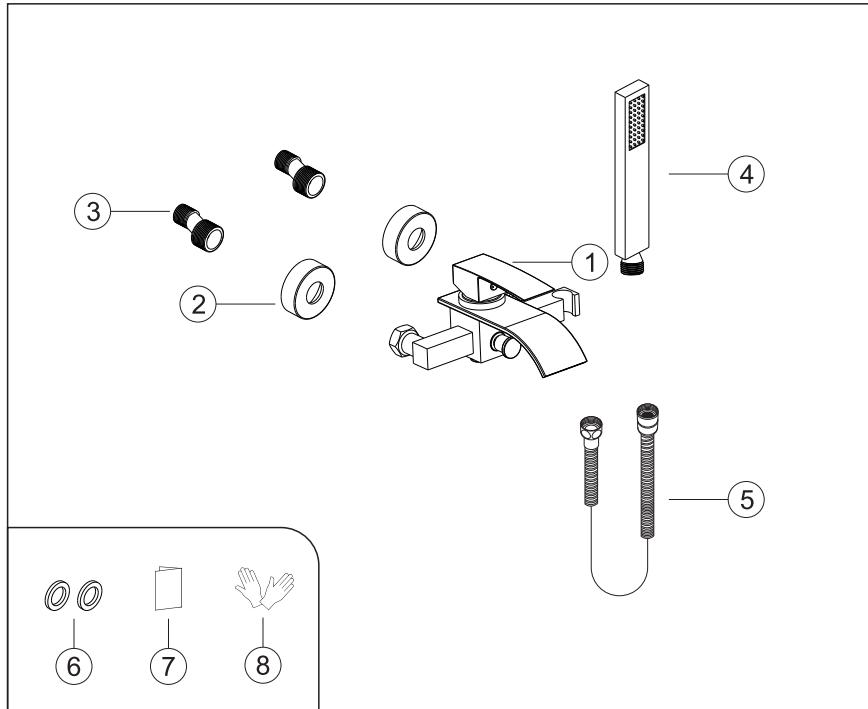

| NO. | Part Name          | Qty |
|-----|--------------------|-----|
| 1   | Faucet body        | 1   |
| 2   | Flange             | 2   |
| 3   | Angled connector   | 2   |
| 4   | Hand shower        | 1   |
| 5   | Shower hose        | 1   |
| 6   | Rubber Gasket      | 2   |
| 7   | Instruction manual | 1   |
| 8   | Gloves             | 2   |


## ◆ Wall Mount Bathtub Faucet Installation

### Step 1

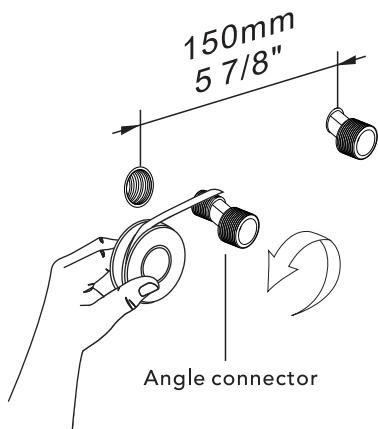

After wrapping the thread seal tape, connect the angle connector to the water outlet. The distance between the hot and cold water outlets should be 150 mm (5 7/8"), and the installation height from the floor should be adjusted based on the bathtub height.


### Step 2

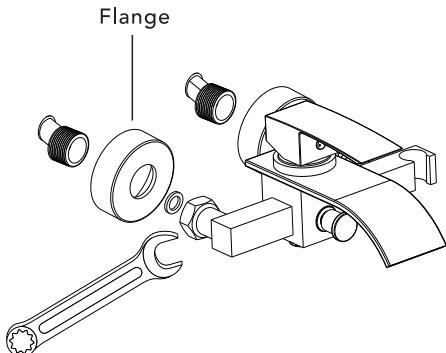

Screw the flange onto the angled connector. Then, install the faucet body onto the angled connector and tighten it with a spanner.  
(Note: It is recommended to wrap tape around the spanner to prevent scratching the product surface.)


## ◆ Wall Mount Bathtub Faucet Installation

Step 3

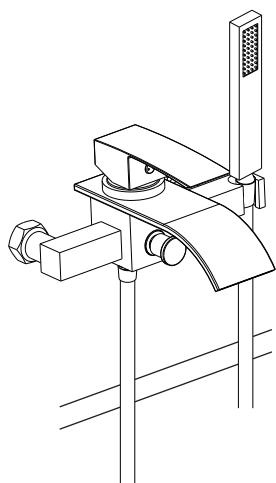




Connect the shower hose to the faucet body and the hand shower.

Step 4

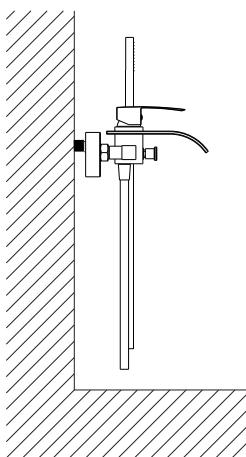

The above installation instructions also apply to the shower mixer installation.

Step 5

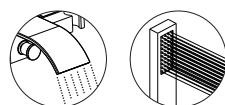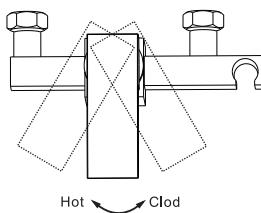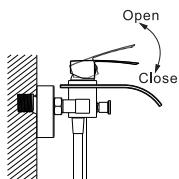

1. Open the water valve to check for any leaks.
2. When turning the handle upward, the valve opens, and the turning angle controls the water flow. The user can turn it left or right to adjust the water temperature.
3. By default, water initially flows from the spout. The user can switch it to the hand shower by pulling the diverter valve (as shown in the right illustration). This switch will automatically reset after the water is turned off.

## ◆ Instalación y cuestiones de mantenimiento



- 1.Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
- 2.No desmonte el cuerpo principal por sí mismo.
- 3.Conecte las tuberías de entrada a las válvulas de suministro.
- 4.Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
- 5.Después de la instalación, verifique todas las uniones para detectar fugas.
- 6.No deje el sistema de ducha tipo lluvia expuesto a un ambiente severamente corrosivo.

Hacer




- 1.En para mantener la superficie de la batidora brillante, límpie el mezclador regularmente.
- 2.inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
- 3.Utilice uno de los siguientes limpiadores para eliminar la suciedad de la superficie: a. Limpiador líquido suave. b. Limpiador de vidrio incoloro y limpiador en polvo que no causen abrasión y que se puedan disolver completamente. c. Líquido pulidor que no cause abrasión.

No es decir

- A.Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.

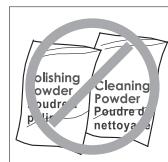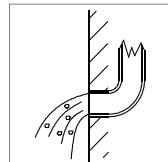


## HERRAMIENTAS NECESARIAS:

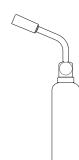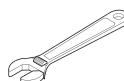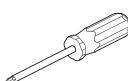

◆ Grifo de bañera empotrado de agua caliente y fría

Modelo:A


Lista de accesorios

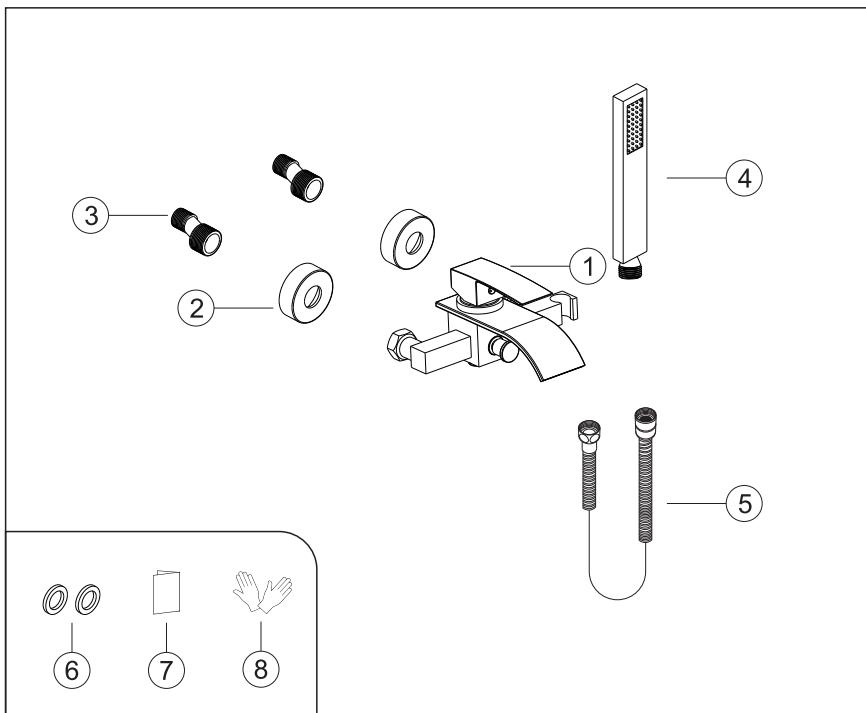

| N.º | Nombre de la pieza       | Cant. |
|-----|--------------------------|-------|
| 1   | Cuerpo del grifo         | 1     |
| 2   | Brida                    | 2     |
| 3   | Conector de ángulo curvo | 2     |
| 4   | Ducha de mano            | 1     |
| 5   | Manguera de ducha        | 1     |
| 6   | Junta de goma            | 2     |
| 7   | Manual de instrucciones  | 1     |
| 8   | Guantes                  | 2     |


◆ Instalación del grifo de bañera montado en la pared

Paso 1

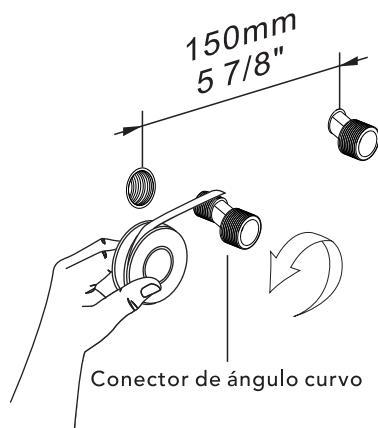

Después de envolver la cinta, conecta el conector de ángulo curvo a la salida de agua. La distancia entre las salidas de agua caliente y fría debe ser de 150 mm (5 7/8"), y la altura de instalación desde el suelo debe ajustarse según la altura de la bañera.


Paso 2

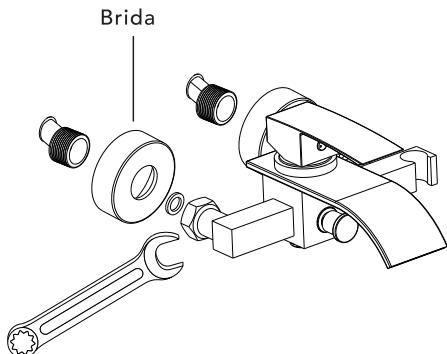

Enrosca la brida en el conector de ángulo curvo. Luego, instala el cuerpo del grifo en el conector de ángulo curvo y ajústalo con una llave.  
(Nota: Se recomienda envolver un poco de cinta alrededor de la llave para evitar rayar la superficie del producto).


## ◆ Instalación del grifo de bañera montado en la pared

Paso 3

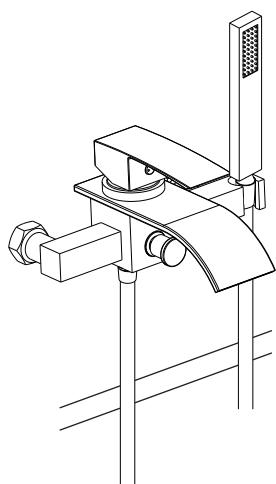


Conecta la manguera de ducha al cuerpo del grifo y a la ducha de mano.

Paso 4

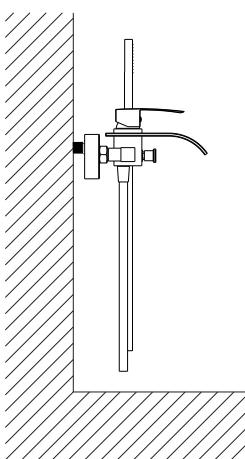

Las instrucciones de instalación anteriores también son aplicables a la instalación del mezclador de ducha.

Paso 5

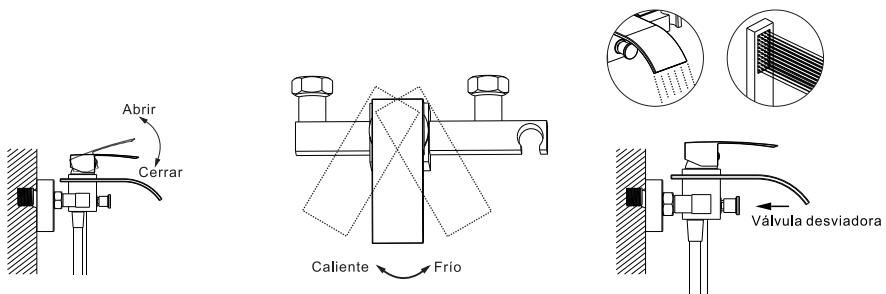

1. Abre la válvula de agua para verificar si hay alguna fuga.
2. Al girar la manija hacia arriba, la válvula se abre. El ángulo de giro controla el flujo de agua. El usuario puede girarla a la izquierda o a la derecha para regular la temperatura del agua.
3. Normalmente, el agua saldrá primero por el surtidor de forma predeterminada. El usuario puede cambiar el flujo a la ducha de mano tirando de la válvula de cambio (como se muestra en la ilustración de la derecha). Este interruptor se restablece automáticamente después de cerrar el agua.