



## Multifunctional Air Fryer Steam Oven

### Instruction Manual



**CASO24-W**






# 1.Precautions

In order to avoid the oil, smoke and steam from the exhaust port contaminating the furniture during the cooking process, or even causing a fire due to overheating.

The steam oven should be kept at a certain distance from the walls and cabinets, please place it at the safe distance marked in the picture below.

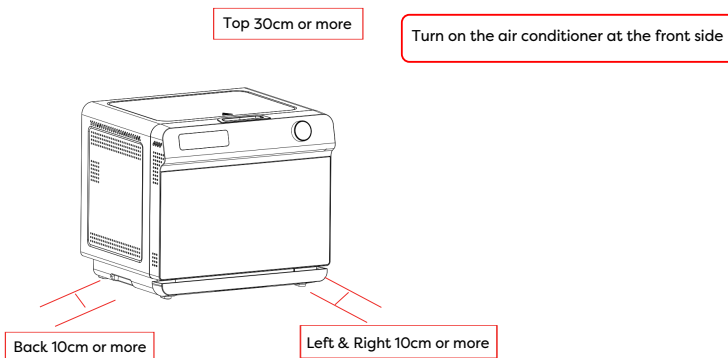

Attention High Temperature



**NOTE**

- In order to avoid injury and property damage to users, important texts such as correct and safe usage methods are recorded in the product body and instruction manual.
- The purpose of the icons and explanatory symbols is only to help understand and may differ from the actual product.
- Before use, please read the relevant signs and labels carefully and strictly comply with them; please keep the manual for future reference and use.

## Environmental Precautions

**Do not approach flammable or non-heat resistant objects.**

Keep away from carpets, tablecloths, curtains or non-heat-resistant furniture and walls, as they will be deformed and burned by heat.

## Precautions for Use

### **All packaging materials must be removed before use.**

If the packaging is not removed, it may cause fire, fire, and burns during operation.

**Before use, please check whether the cooking utensils used are suitable for the product, it is recommended to use high temperature resistant glass, ceramic or metal containers to hold food.**

### **Due to the high working current, please use a special socket.**

Please do not share the socket with other power-consuming appliances (especially air conditioners, heaters, etc.) to avoid overloading the circuit and causing a fire.

### **Sockets are not easy to insert or too loose.**

If the supply cord is damaged, it must be replaced by its service agent or similarly qualified persons in order to avoid a hazard. Please stop using it immediately. Do not use the loose socket, otherwise it will possibly lead to fire, electric shock and injury.

### **Power plug from the socket should be held when pulling out the power plug.**

If you take the power cord and pull it, the broken power cord will cause leakage and fire.

**When not in use for a long time, the plug should be unplugged from the power outlet to avoid leakage and fire caused by the aging of the insulated rubber cord.**

**When inserting the power plug, wipe off the dust adhering to the plug blade with a dry cloth.**

**Please read the "Instruction Manual" carefully before use and keep it for future reference**

**It is prohibited to put metal or foreign objects, such as wire, fingers, etc. into the suction and exhaust ports of the air fryer steam oven.**

Otherwise, it may cause electric shock and injury. If a foreign object is accidentally inserted into the product, please unplug it from the power supply and contact our maintenance service center.

**Only use temperature sensing probes recommended for this product.**

**The exhaust holes of the product must be kept unobstructed, and the outer cover is strictly prohibited from covering other items.**

**Please do not use it for purposes other than cooking.**

**If the voltage is too low or unstable, this product may not start normally, please unplug it in time. If used, a voltage regulator is recommended.**

**To avoid possible electric shock, make sure the appliance is disconnected from the power source before changing lamps.**

**Do not put large plastic bags for packaging in places that are accessible to young children or discarded.**

If put on the head, it will make people suffocate.

**The power cord and plug should not be close to the exhaust port, cover, high temperature or humid place to avoid the power cord aging and causing danger.**

**If smoke is found, turn off the appliance switch or unplug the power plug, and keep the oven door closed to suppress the spread of the flame.**

The appliance cannot be operated by means of an external timer or independent remote control system.

**After use, be sure to unplug the power supply in time, do not put it near the fire source or submerged in water; do not put the power cord and plug directly on top of the outer cover to prevent the residual heat of the cover from damaging the power cord.**

**It is strictly forbidden to knock this product.**

**This product is designed for home heating and cooking food and is not suitable for other industrial or commercial use.**

**Do not put items on the cover.**

The product cover should not contain food or items, it is very dangerous. Items will be deformed, burnt and catch fire due to heat. Metal items such as knives, forks, spoons and lids may become hot.

**Utensils should not be immersed in water.**

**Do not unplug during cooking.**

If the plug is unplugged, sparks, fire, electric shock, etc. may occur.

**Do not insert any foreign objects into the door interlock switch.**

**Frying food is prohibited.**


Do not fry food in product oil to prevent fire.

**Open and close the door carefully.**

**WARNING** If the product door or door seal has been damaged, it must not be used again until it has been repaired by qualified service personnel.

**High temperature surface to prevent burns.**

**The product will heat up during use. Take care to avoid contact with the heat generating unit inside the product.**

**WARNING** During use, accessible parts may become hot, children should be kept away, and some surfaces may be hot during operation. The surface with the "High Temperature Surface"  symbol will become hot during use.

**Please be careful not to bump the glass of the cavity or the door when taking the food.**

**Care must be taken when heating fluid foods such as soups and beverages.**

Heating beverages can cause delayed spatter boiling, so care must be taken when removing them. Bottles and baby food jars should be stirred or shaken, and the temperature of the bottle should be checked before feeding. The temperature of the food to avoid scalding.

**After cooling, do some cleaning.**

The dirt left in the oven cavity must be cleaned frequently so as not to affect the heating effect.

**Keep out of the reach of children.**

Only when sufficient instruction has been provided so that children can use the product in a safe manner. Children should only be allowed to use the product unsupervised if they understand the dangers of incorrect use. When the appliance is operating in combination mode, children must be supervised by an adult due to elevated temperatures.

**The appliance will heat up during use, so be careful to avoid touching the heat generating unit inside the steamer and griller.**

**Steam cleaners cannot be used.**

## **Maintenance Precautions**

**There is high voltage power inside, do not remove the outer cover for repair and modification**

**WARNING** It is dangerous for anyone other than qualified service personnel to perform maintenance operations. If you encounter obstacles during use, please contact our maintenance customer service center.

**It is strictly forbidden to disassemble and repair this product by non-professional personnel, otherwise it may lead to danger.**

**Warning** If the door or door seal has been damaged, it must not be used again until it is repaired by qualified maintenance personnel.

**If the power cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or a similar department.**

## **Cleaning and Maintenance Precautions**

**Wipe the housing with a cloth block dipped in soft detergent (such as dishwashing liquid), then wipe it clean with a damp cloth, and finally dry it with a dry cloth. It is strictly forbidden to use hard objects such as wire brushes to wipe the product.**

**Warning** Do not use rough scrubbers or sharp metal scrapers to clean the oven door glass, so as not to cause abrasion on the surface of the door glass, the abrasion may cause the glass to shatter.

**Always keep the joints between the furnace door and the furnace body clean.**

**The grease produced during cooking can corrode the oven cavity and affect the heating effect, thus changing the taste of food. Therefore, please clean the oven cavity promptly after use.**



**Wash accessories with warm water frequently. Be careful not to use cold water to clean immediately after long cooking.**

**Do not wipe the oven body with bad cleaning agents and corrosive, volatile chemical solvents to avoid damage to the oven body.**


## **Basic Parameters**

Product Name	Air Fryer Steam Oven	Rated Voltage	120V~	Rated Frequency	60Hz
Product Model	CASO24-W	Rated Capacity	24L	Rated Power	1600W

## Product Parts Diagrams:

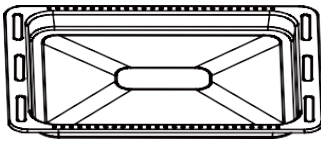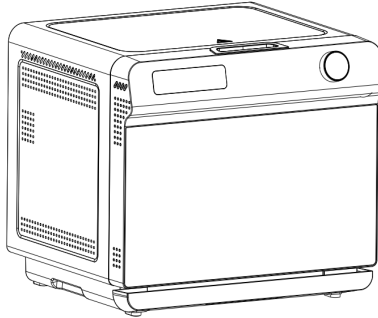


Tray

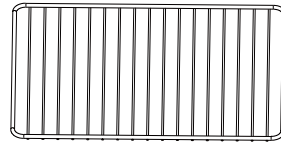

Grill

### Control Panel

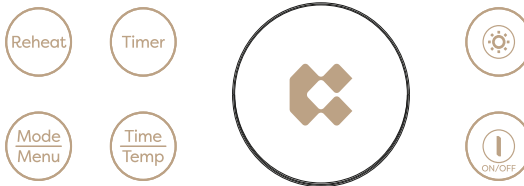

## 2. Operation Instructions

After connecting the power cord, you can start using it.



**Tip:** It is suggest to turn on the range hood when using the air fryer steam oven.

First, pull out the water tank from the bottom of the oven, open the silicone cover of the water tank, and add purified water. After adding water, cover the water tank cover with silicone, and push the water tank into the base completely. (When the steam oven starts to work, no more water can be added to avoid danger.)



**The Menu Are Shown In The Following Diagram**

Preset menu	Heating Principle	Default Temperature	Default Time	Adjustable Temperature	Adjustable Time
Steam	Using steam to heat food	212°F	30mins	Non-adjustable	1-60mins
Rapid Steam	Using heating tube + micro steam circulation	250°F	30mins	200°F-450°F	1-60mins
Steam Convection	Using steam + circulation heating. Steam first and then bake, the time is distributed 1:1 to achieve crispy outside, tender and juicy inside.	375°F	30mins	200°F-450°F	1-60mins
Air Fry	Using heating tube + circulating air	425°F	15mins	85°F-450°F	1-60mins
Bake	Using heating tube + circulating air	320°F	30mins	85°F-450°F	1-60mins
Clean	High temperature steam cleaning inner cavity	212°F	30mins	Non-adjustable	1-60mins
Ferment	Using heating tube + circulating air heating. Low temperature fermentation function, (When the set temperature is lower than the room temperature, the machine will not heat up and use the room temperature for constant fermentation.)	95°F	60mins	85°F-115°F	1min-12h
Dehydrate	Using heating tube + circulating air heating.	140°F	2h	85°F-255°F	1min-12h
Warm	Using heating tube + circulating air heating.	140°F	60mins	Non-adjustable	1min-12h
Sterilize	Using steam + heating tube exchange circulation heating.	240°F	15mins	Non-adjustable	1-60mins
Reheat	Using steam to heat food, traditional steaming.	212°F	10mins	Non-adjustable	1-60mins



**a. MENU SELECTION**

Press the  button to enter the function menu selection mode. You can use the  left and right rotation buttons to select different preset menus.



**b. RECIPE**

Press the  button to enter the recipe preset mode. The default display H-01 represents the first recipe. You can use the  left and right rotation buttons to select different preset menus.


**c. TIME/TEMP**

Press the  button. You can turn the  left and right to adjust the time and temperature according to different menus.  
(Some functions do not support adjusting time and temperature)


**d. START/PAUSE**

Click the  button to start working, when the machine is working, press the  button to pause.

**e. CANCEL**

When working normally or suspending work, click  to send out the end prompt sound and cancel the current work, returning to the standby state.



**f. REHEAT**

When the machine finishes the work, the food is not cooked or you want to continue heating, you can click , the default temperature is 100 degrees, the default time is 15 minutes.

**g. ADD WATER**

When the machine flashes the "ADD WATER" light, it reminds the user to add water.

**h. LIGHT**

When you need to check the status of the food, you can click the  button to check the status of the food; click the  button again to turn off the light.



