



VICTOPER®

XW500 HEADLAMP

USER MANUAL

For your safety, read before operating.

MODEL: XW500 Headlamp

USB RECHARGEABLE



1 WHAT'S IN THE BOX



Headlamp Set x2




Detachable Light Module x2



Mounting Clips x8



USB Charging Cable x2

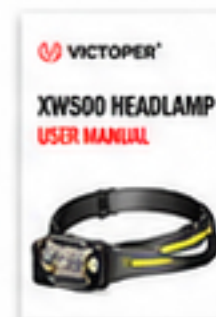

User Manual x1

3 WEARING, CLIPS & DETACHABLE USE

ADJUSTABLE HEAD STRAP



Adjust the elastic strap for a secure, comfortable fit.

DETACHABLE CLIP-ON LIGHT



Remove the lamp module and clip onto a cap, pocket, or strap using the included clips.

5 SAFETY & CARE

- ⚠ Do not look directly into the beam or shine it into anyone's eyes.
- ⚠ Keep away from children, heat, and flames.
- ⚠ Do not immerse the headlamp in water.
- ⚠ Wipe dry after rain or splashes.
- ⚠ Stop use if the product becomes damaged, hot, or leaking.
- ⚠ Store in a cool, dry place when not in use.

2 MODE SWITCHING



- Press power button to turn ON/OFF and cycle white lighting modes.
- Press sensor button to enable motion-sensing mode.



Front Spotlight



COB White Light



COB Warm Light



Red Light



Red Flash



Sensor Mode

4 CHARGING & BASIC USE

A. USB CHARGING



- 1 Open the charging-port cover if needed.
- 2 Connect the included USB charging cable.
- 3 Connect to a 5V USB power source. Charge fully before first use.

B. BASIC USE

- 1 Attach or detach the lamp as needed.
- 2 Adjust the angle or position for best lighting.
- 3 Choose the needed mode.
- 4 Turn off after use to save power.

6 TROUBLESHOOTING

🔌	NO POWER	— Recharge the headlamp.
🔌	NOT CHARGING	— Check the cable, power source, and charging-port cover.
☀	DIM LIGHT	— Recharge fully and clean the contacts if needed.
👤	SENSOR ISSUE	— Ensure sensor mode is enabled and area is clear. Keep hands within detection range.
?	STILL NOT WORKING	— Contact Victoper Support.



VICTOPER SUPPORT

service@victoper.com | victoper.com



QUALITY YOU CAN TRUST

Lighting Your Way, Every Day.