





Shoe cabinet

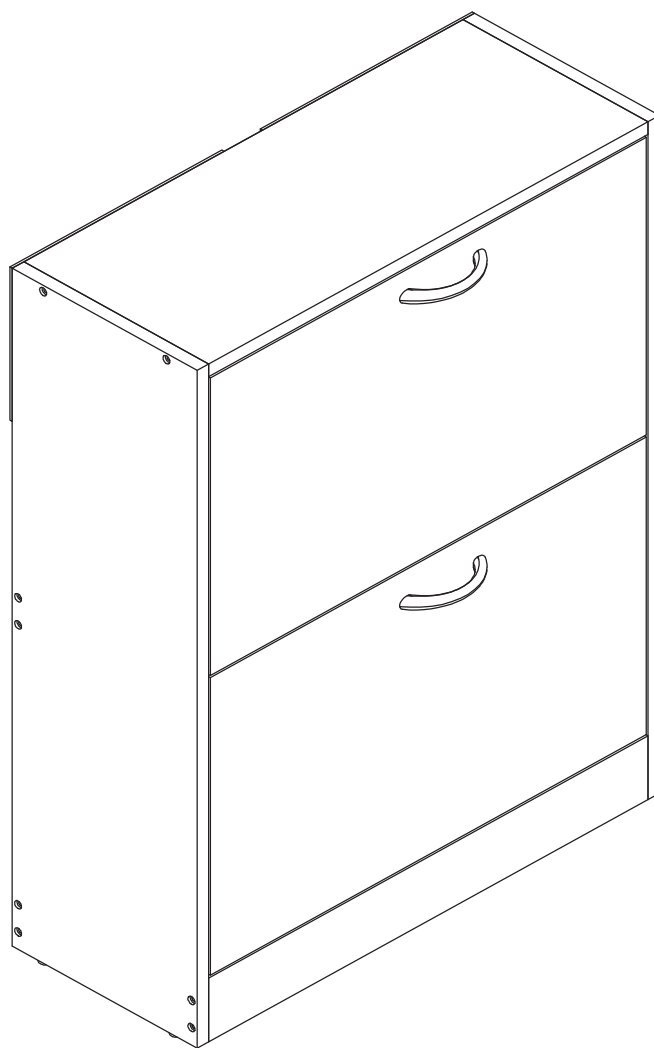

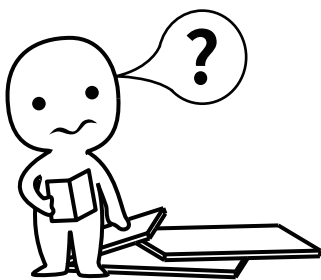


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

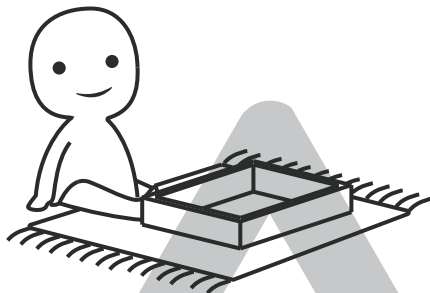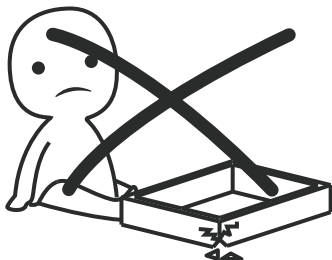



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

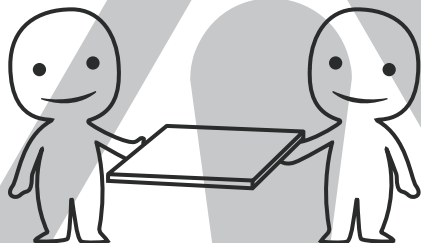

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

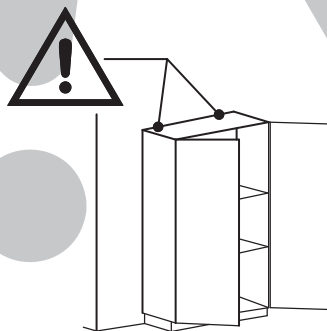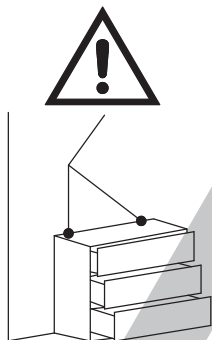

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

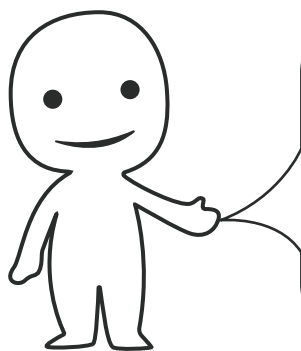



Please prepare the following tools

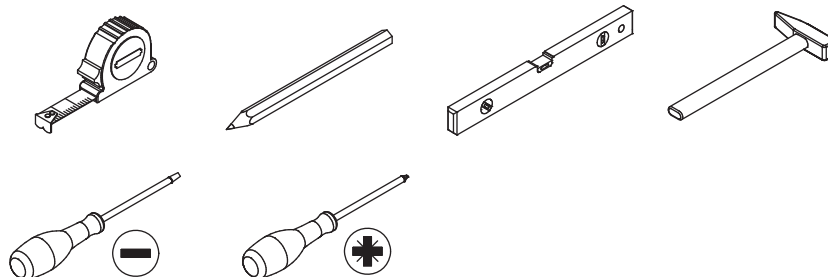

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


<p>A x 4</p> <p>Ø 6 x 30 mm</p>	<p>B x 17</p> <p>Ø 4 x 35 mm</p>	<p>C1 x 4</p>	<p>C2 x 4</p>
<p>C3 x 4</p>	<p>D x 24</p> <p>Ø 3.5 x 14 mm</p>	<p>E x 4</p> <p>Ø 4 x 10 mm</p>	<p>F x 4</p> <p>Ø 4 x 20 mm</p>
<p>G x 2</p>	<p>H x 4</p> <p>Ø 1.2mm</p>	<p>I x 10</p> <p>Ø 2.5 x 14 mm</p>	<p>J1 x 1</p>
<p>J2 x 1</p> <p>Ø 4 x 12 mm</p>	<p>J3 x 1</p> <p>Ø 6 x 30 mm</p>	<p>L x 2</p>	<p>R x 2</p>

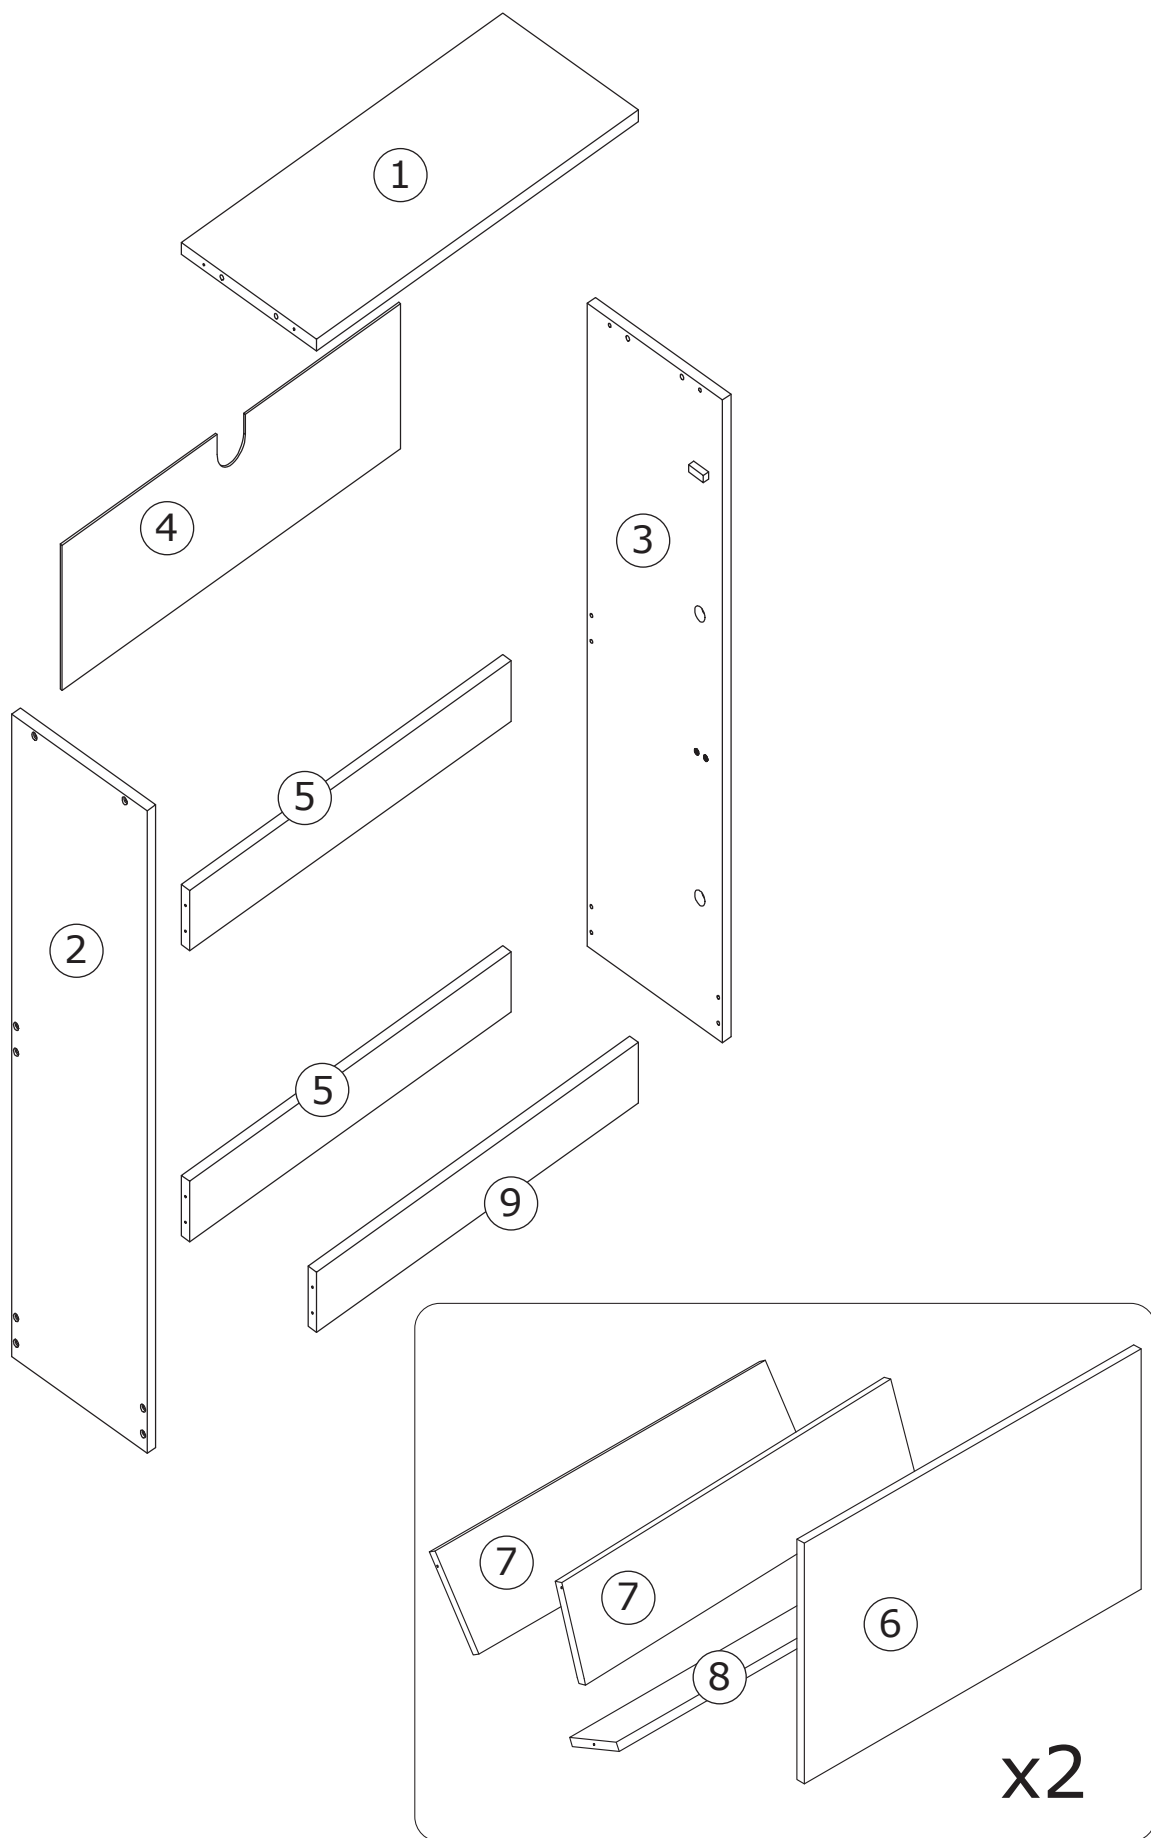


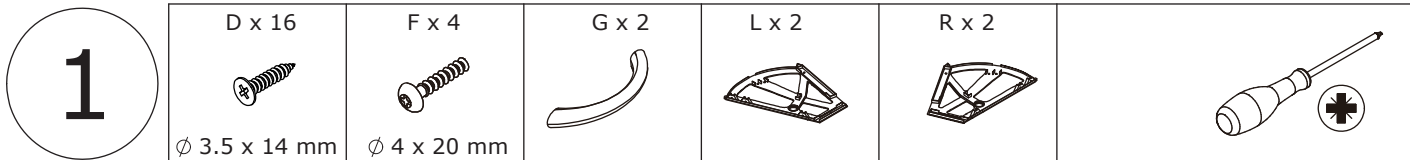


Fix plastic part L&R to panel 8, use screw D to tighten.



Attach this part to panel 6 using screw D to corresponding holes as shown.

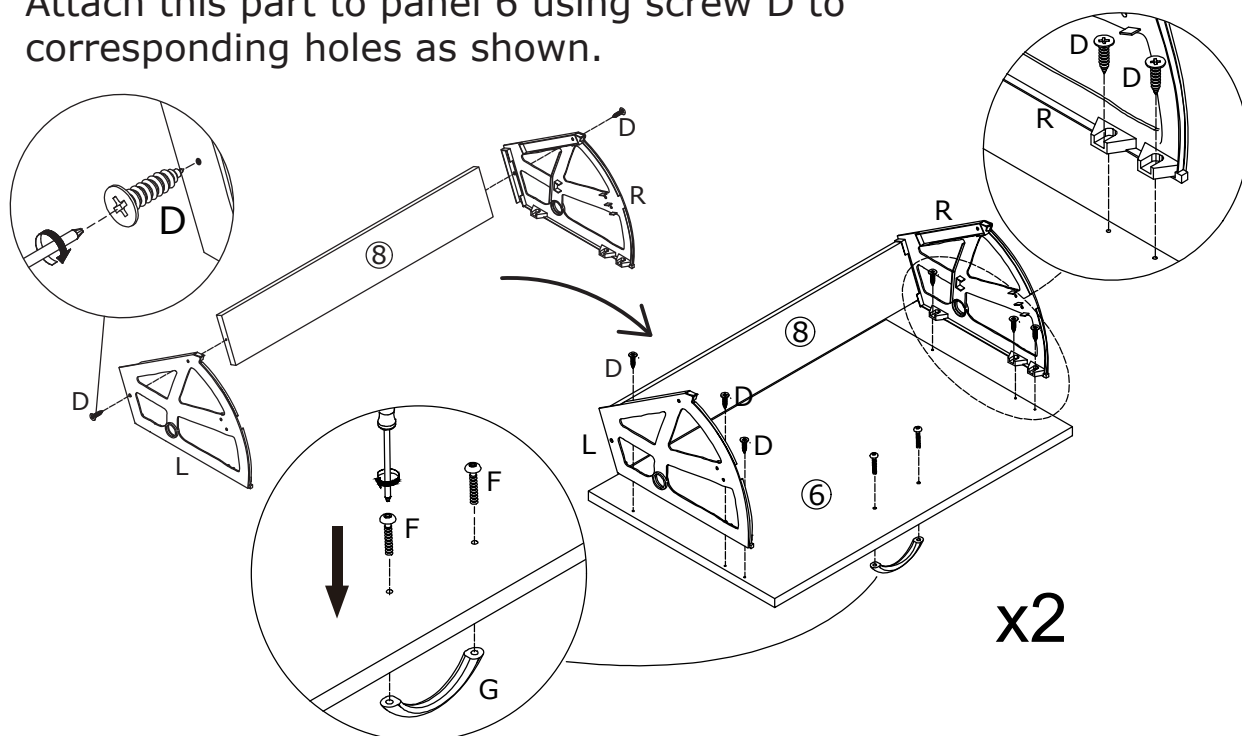


Attach panel 7 to the assembled part using screw D slightly to tighten, as shown.

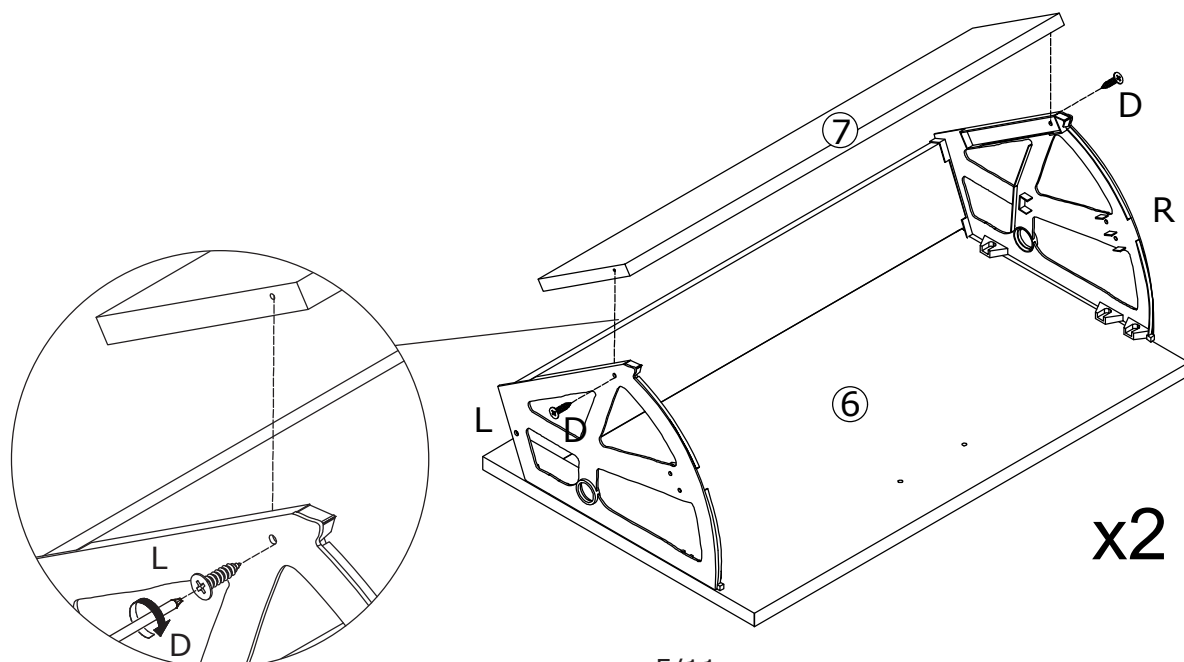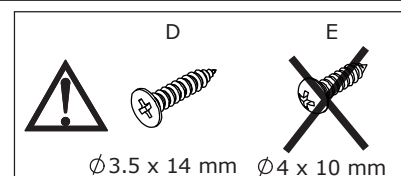






3

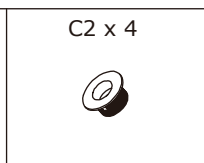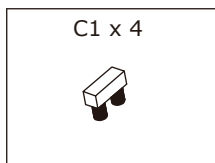

Hammer C1 & C2 slightly into the holes on panel 2 & 3, Note do not tilt to avoid damage.

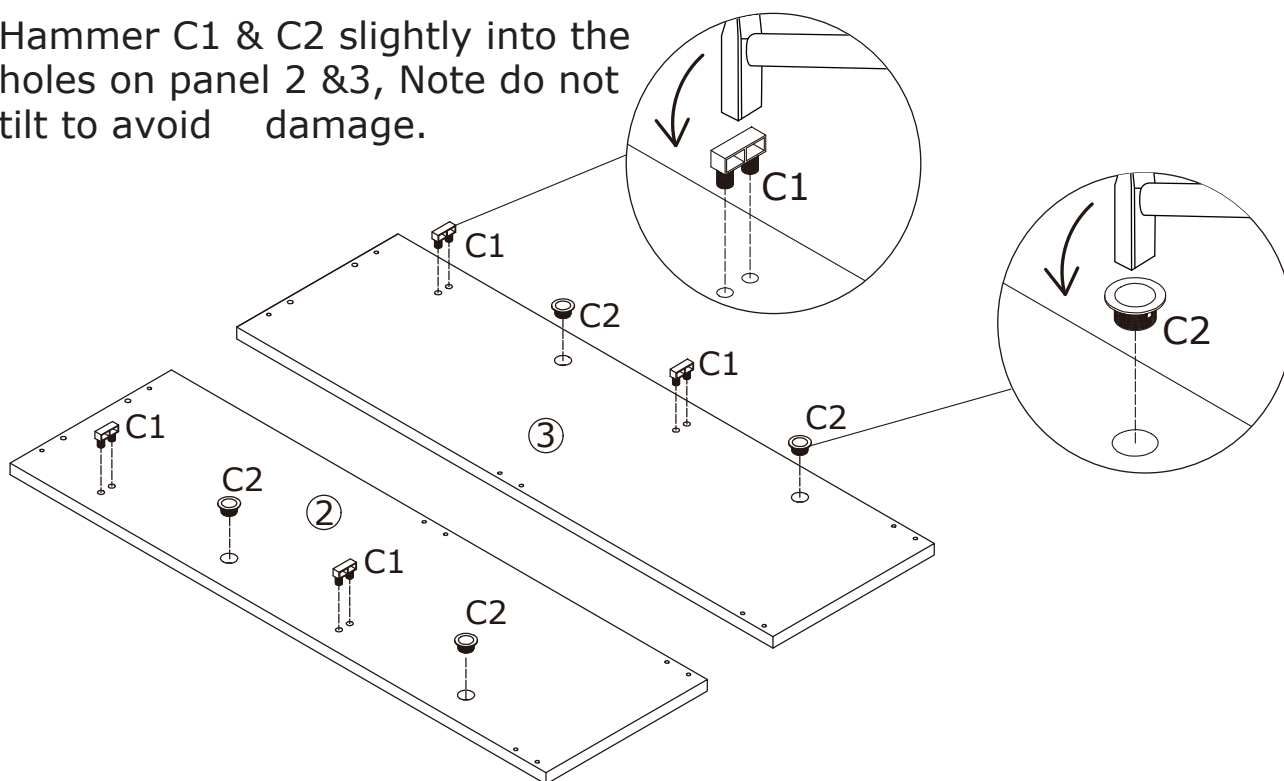


4

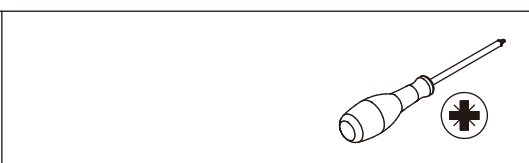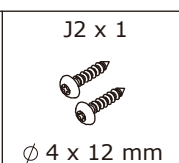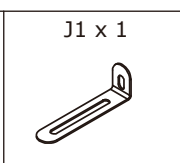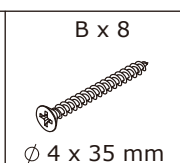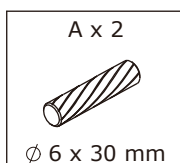

Fix part J1 to panel 1 using screw J2.
Connect panel 1 with panel 3 using wooden dowels A at first. Then use screw B to tighten, as shown.


Attach panel 5 and 9 to panel 3 using screw B as well.

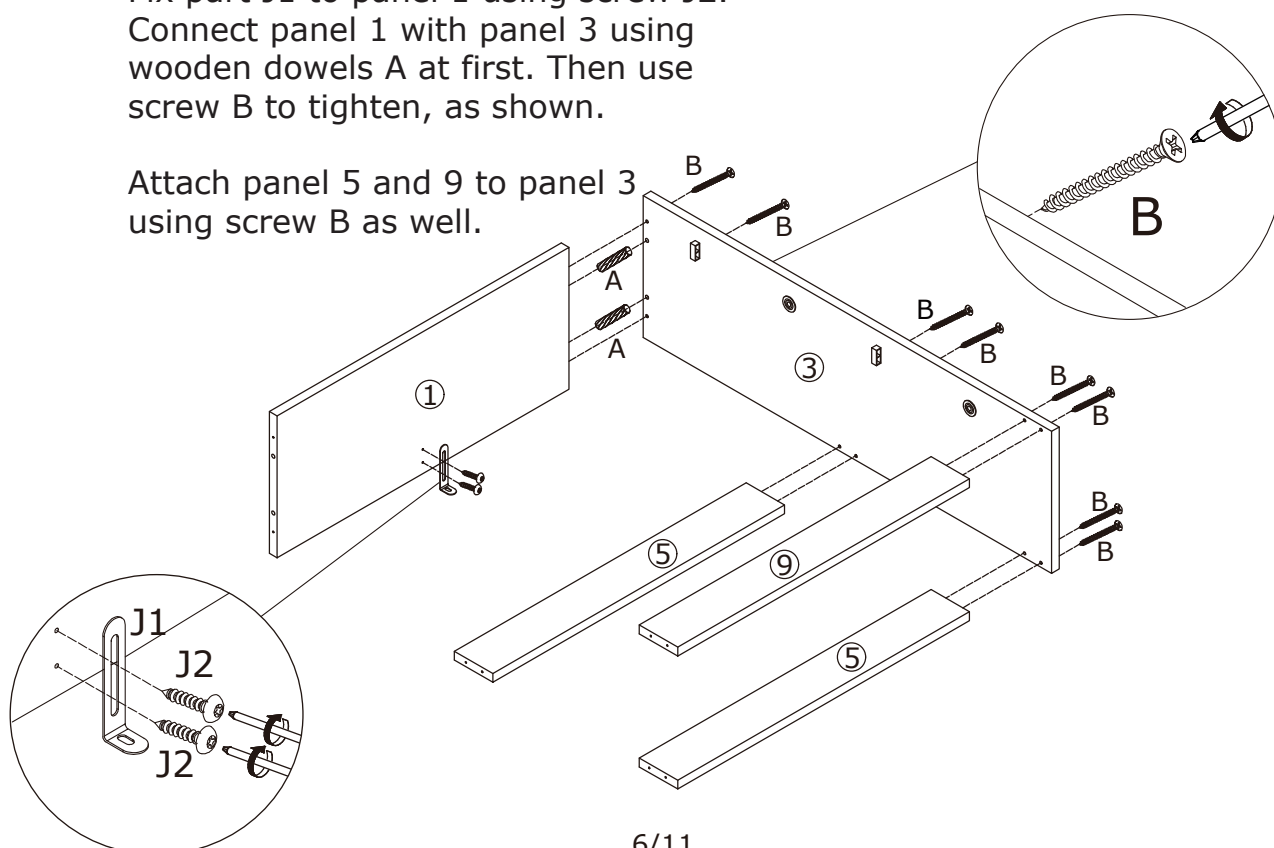


5



Attach panel 2 to assembled part in step 4, using screw B and wooden dowels A as shown.

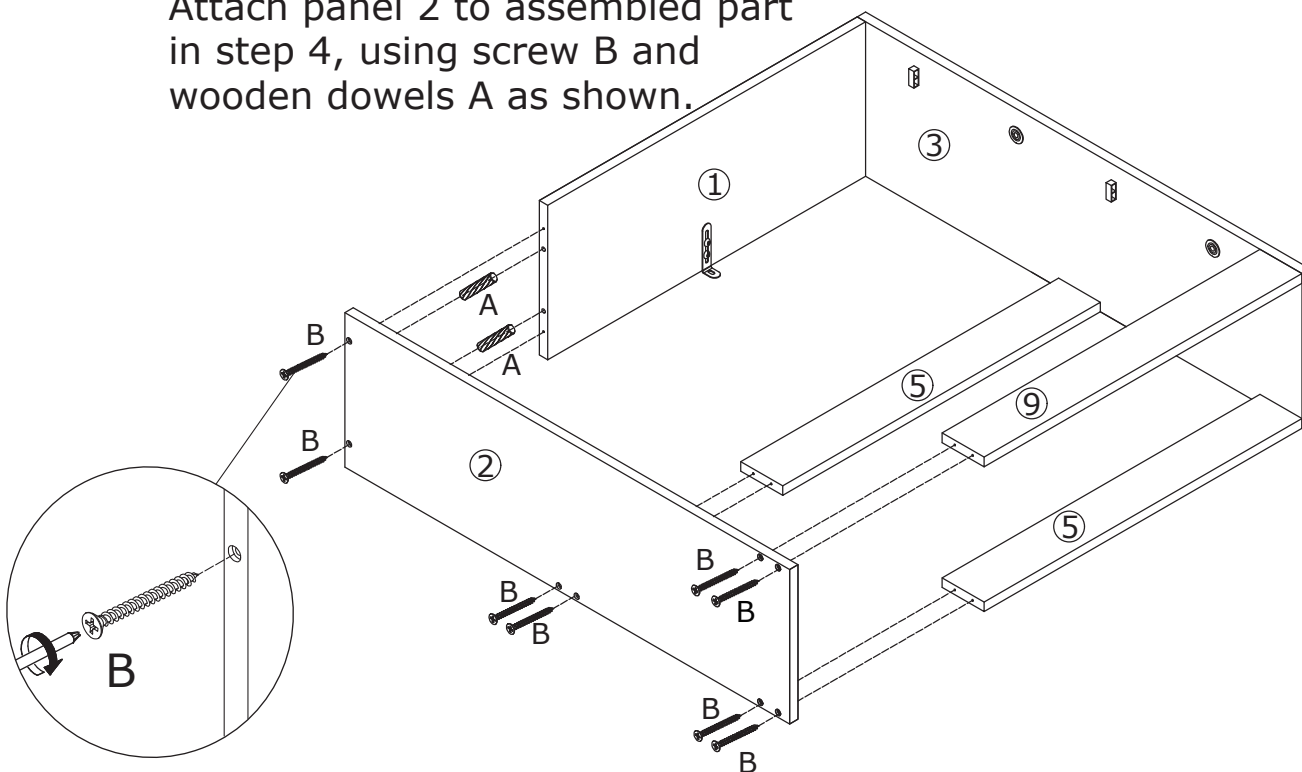


6



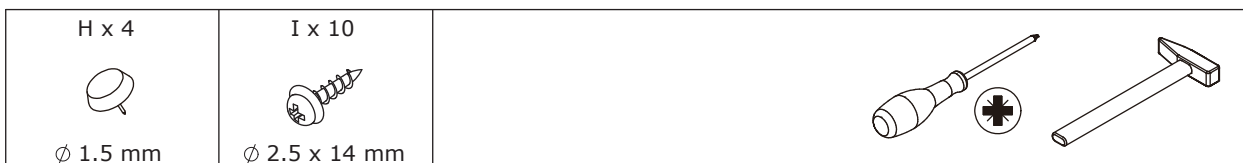


Fix panel 4 to the back of assembled unit using screw I to pre-drilled holes as shown.


Fix part H on the bottom.

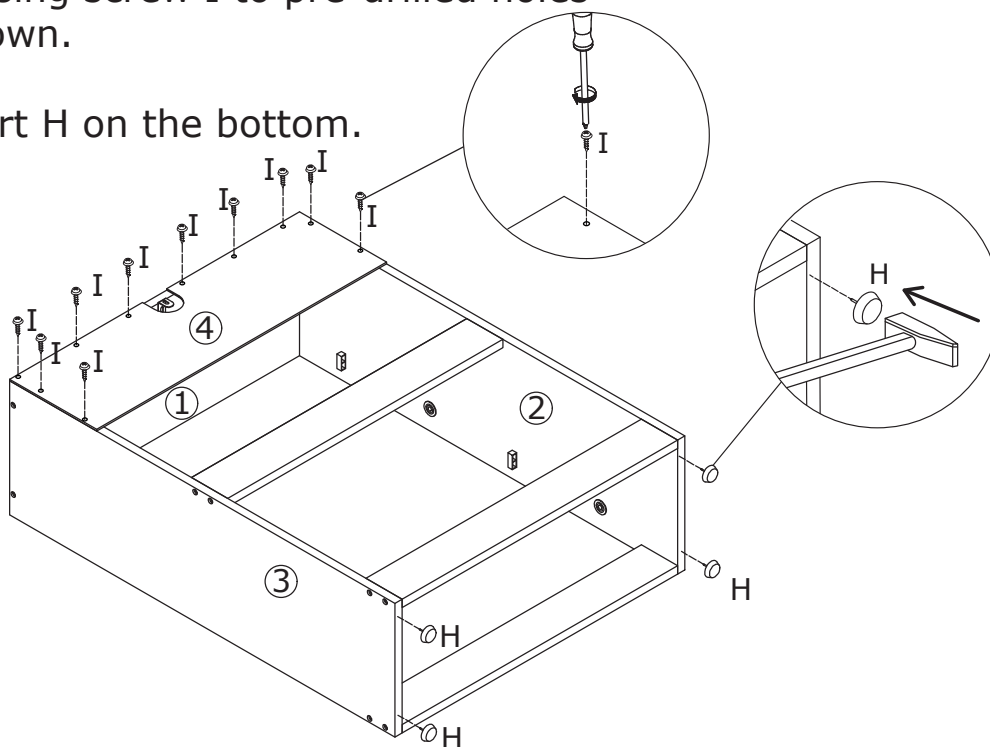

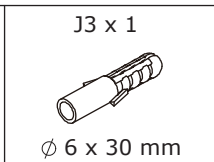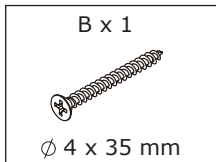

7

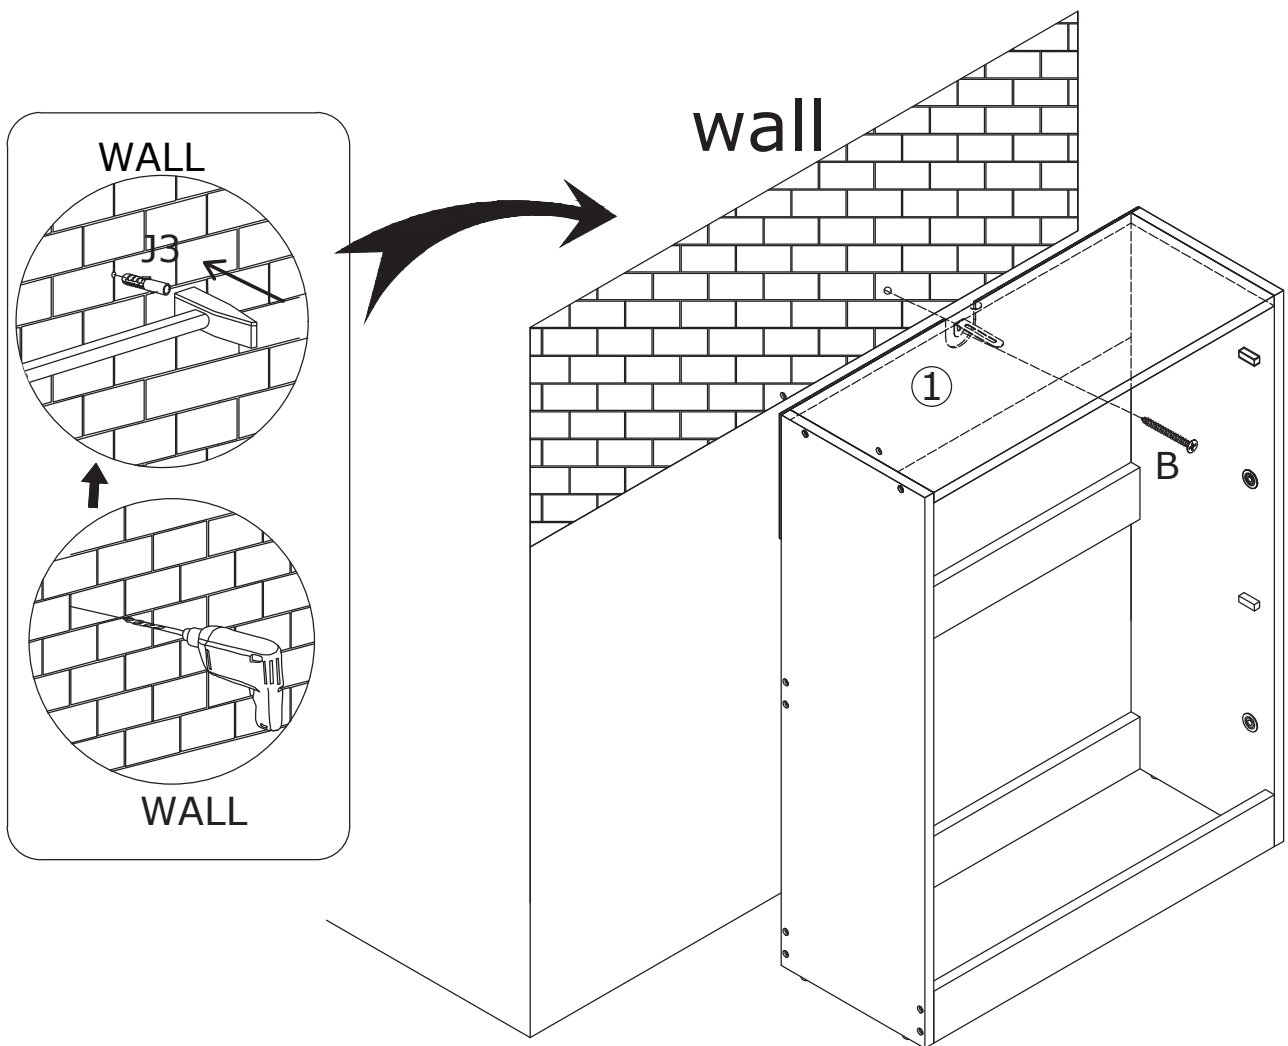


Find a proper height, fix J3 to wall as shown.
Using screw B to tighten, this could avoid
anti-dumping.




8



C3 x 4 	E x 4  Ø 4 x 10 mm
---	---



Fix the plastic part L&R to panel 2&3 by using C3 slightly. Then screw E to tighten.

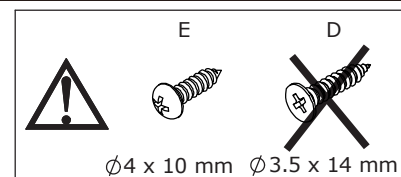


wall

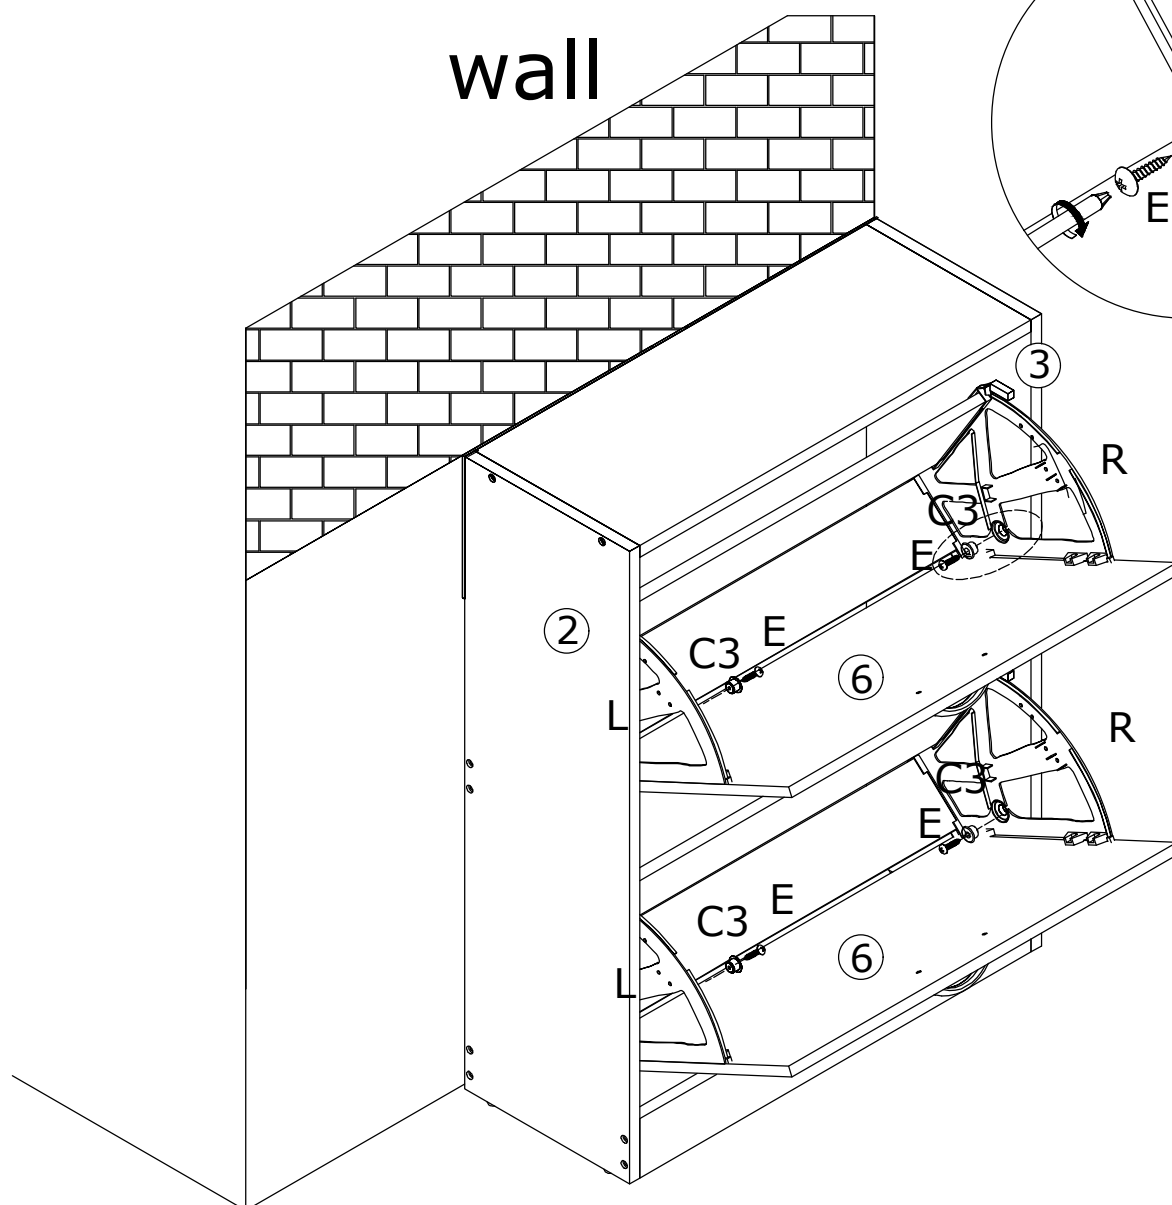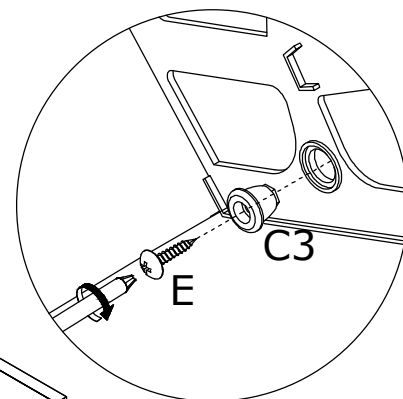



9

Insert panel 7 to the middle of drawers

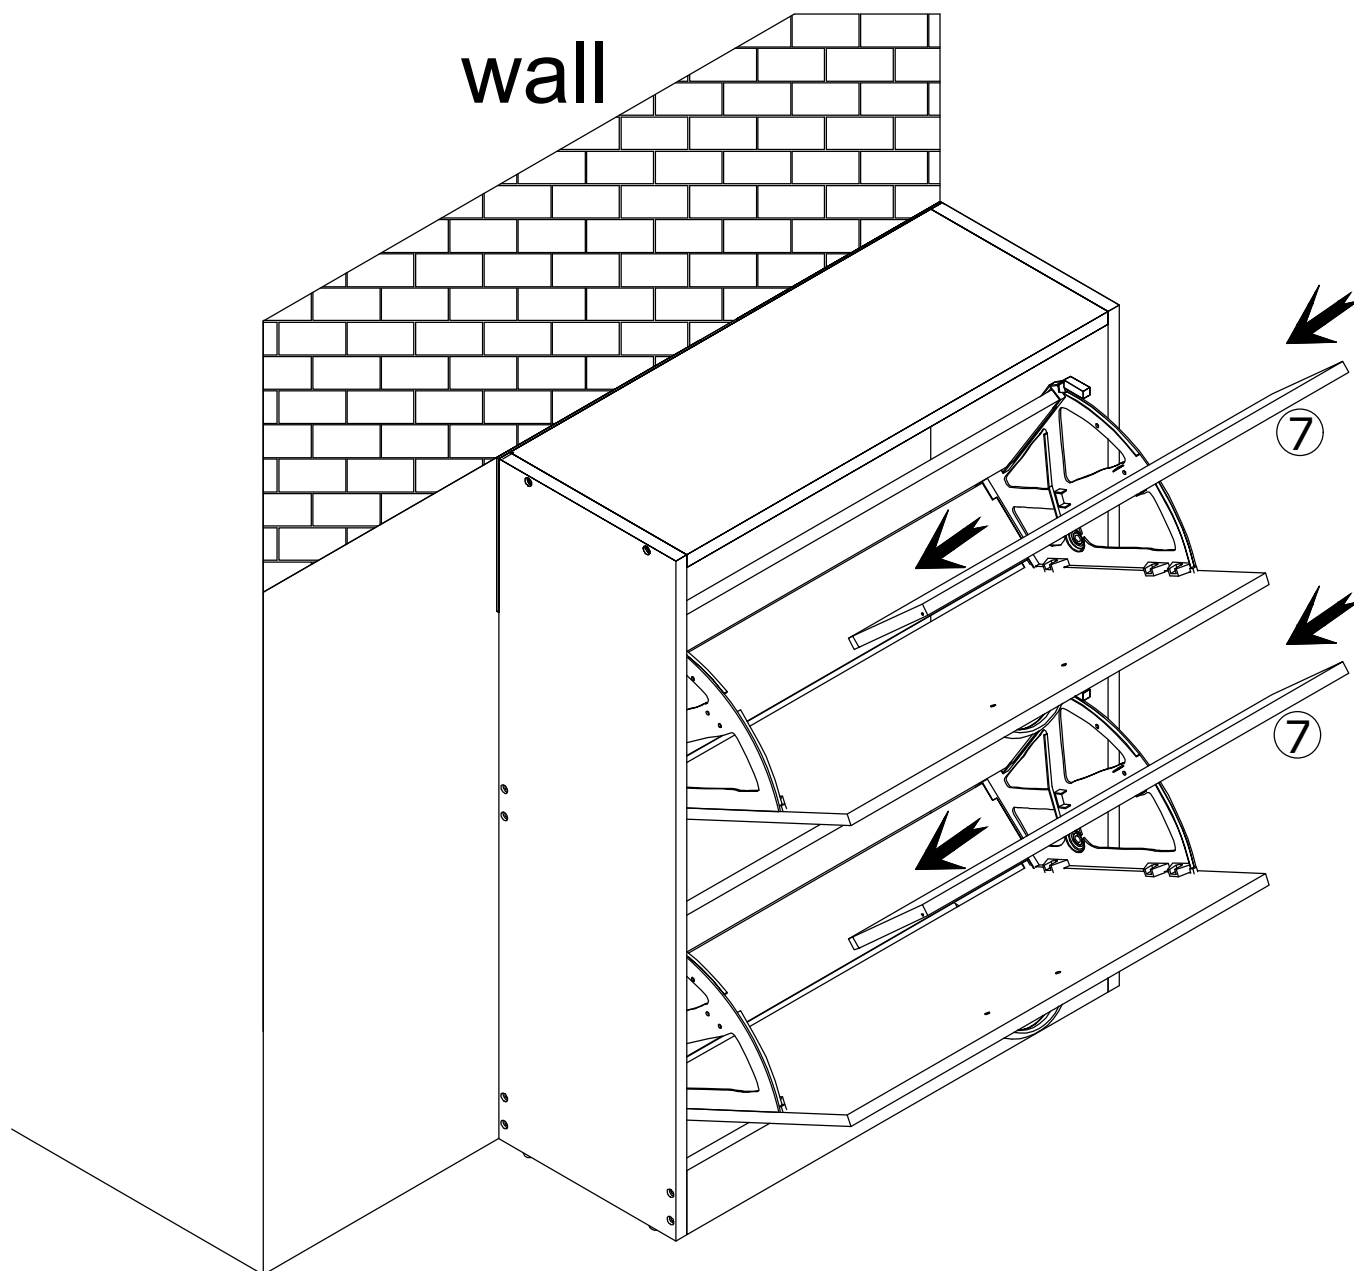


10

D x 4

 Ø 3.5 x 14 mm

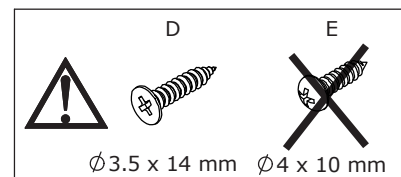

Using screw D to fix panel 7 to both side plastic part as shown.



wall

