

Balance Shower Faucet Installation Manual

W-20(ES)

Warranty Duration

All parts of this faucet system are warranted to the original purchaser to be free from defects in material and workmanship for a lifetime.

Repair and Replacement

If the product has defects in material and workmanship within the warranty period, we will repair or replace the product free of charge. However, you may be required to provide the invoice when requesting repairs or replacement from us.

Exclusions

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse (including damage during shipment).
- Damage to the product caused by improper dismantlement after installation.
- Damage resulting from abnormal water pressure and impurities in water pipes is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, electric storms, etc., is not covered under this warranty.

I hope this helps! If you have any further questions or concerns, please let me know.

Having Trouble? Contact us.

✉ Email: info@faucetsupport.com

☎ Toll Free: 1-888-969-6880



CEC FCC C E RoHS



M6393-10
SFS-1035
Model:A



M6396-10
SFS-1036
Model:B

CONTENT


1.2-function Rain Shower System -----(1-10)

CONTENIDO

1.Sistema de Ducha de Lluvia de 2 Funciones -----(11-20)

◆ Installation and maintenance matters

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the main body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

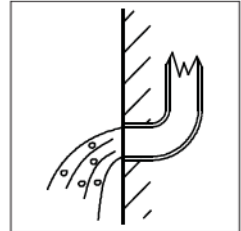


Do's

1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface:
a. Mild liquid cleaner.
b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.
c. Polish liquid that does not cause abrasion.

Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.


TOOLS NEEDED:

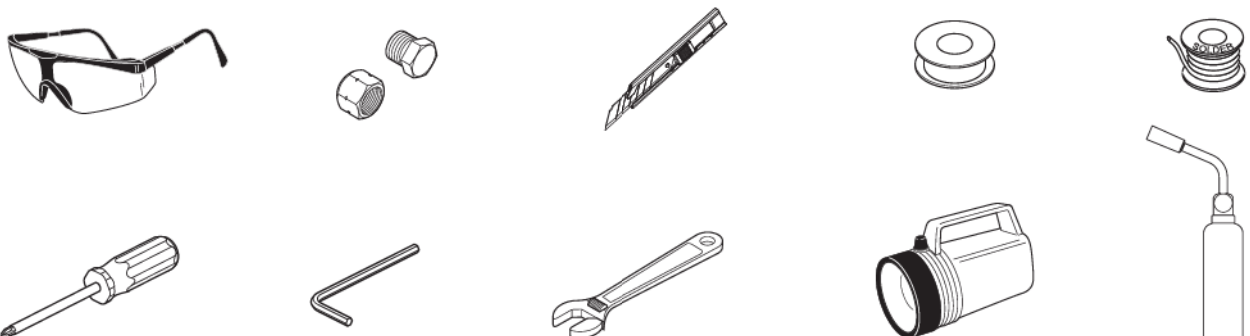

◆ Two-function Rain Shower System

Model:A


Accessories List

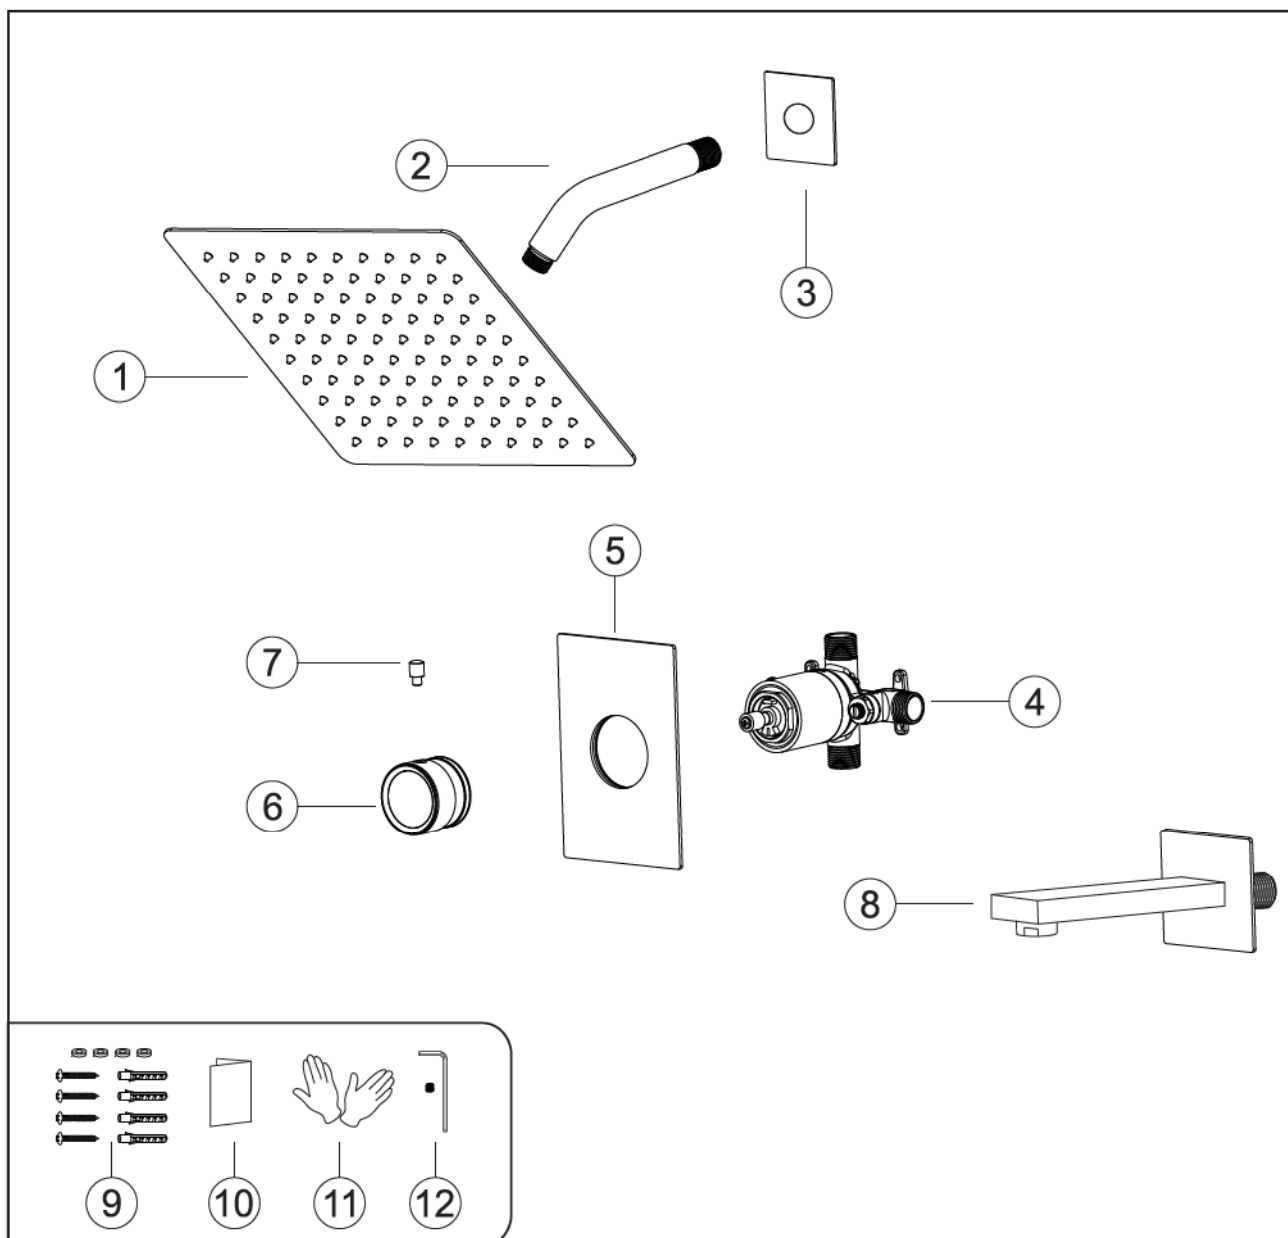


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	7	Handle cap	1
2	Shower arm	1	8	Bathtub spout	1
3	Shower arm cup	1	9	Main body spare parts	4
4	Main body	1	10	Instruction manual	1
5	Deck plate	1	11	Gloves	2
6	Handle	1	12	Handle parts	1

◆ Essential dimensions & water pipe line

Unit: mm/inch

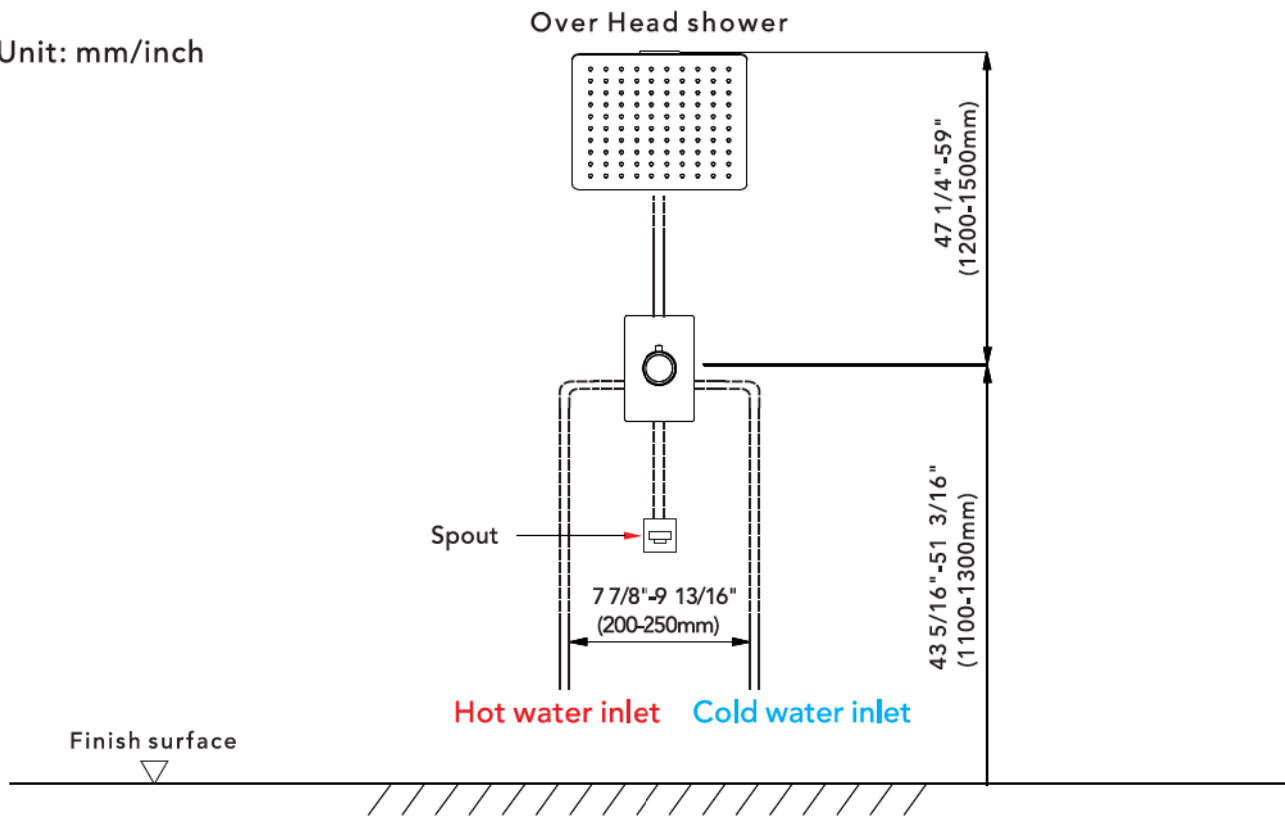


◆ The installation depth of shower holder and shower head

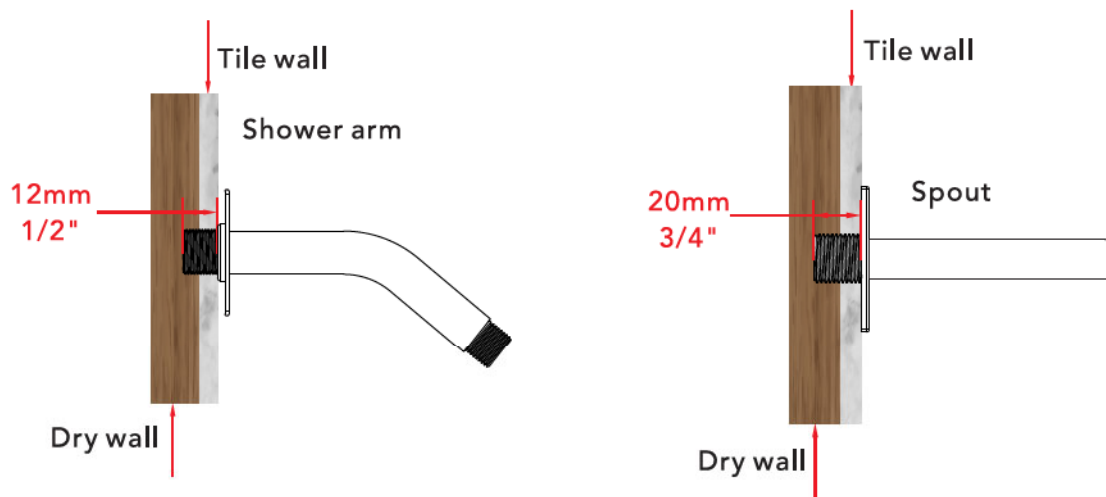

The thickness of the tile must be calculated for installation.


Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

◆ The installation of the Shower head

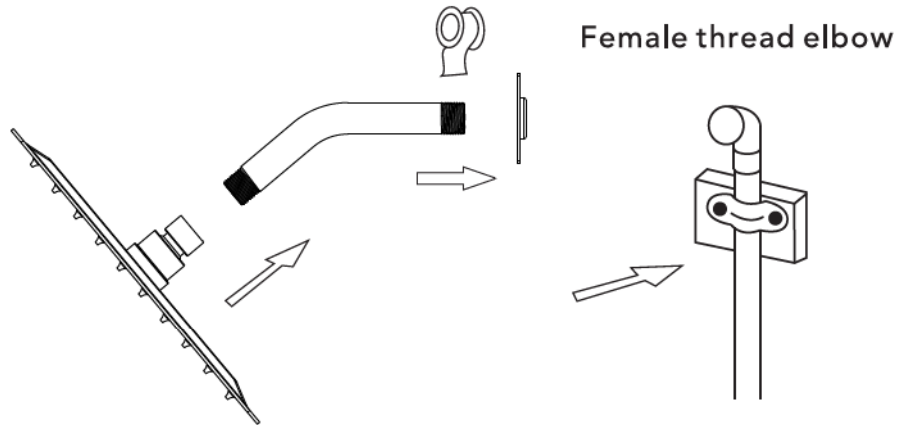

1. Connect shower arm with the cover before screwing arm into riser connection to prevent damage.
 2. Fix shower head onto shower arm and apply tape to pipe threads on both ends.
 3. Do not over tighten shower head. It is 360° swivel connection.
-

◆ Install The Tub Spout

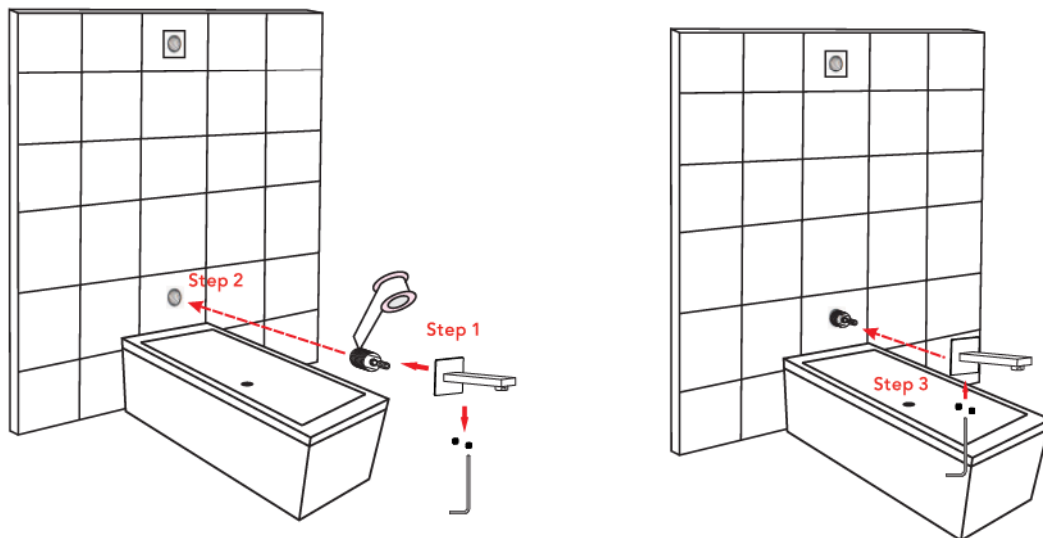


- Step1: Loosen the two screws below the water outlet tap and remove the connector. Wrap the connector with PTFE tape.
- Step2: place it into the pre-drilled hole in the wall, and tighten it using a hex screwdriver.
- Step3: Insert the end of the water outlet tap into the connector that is already installed in the wall, and retighten the two screws. Make sure to keep the outlet facing directly downward.
-

◆ Two-function Rain Shower System

Model:B


Accessories List

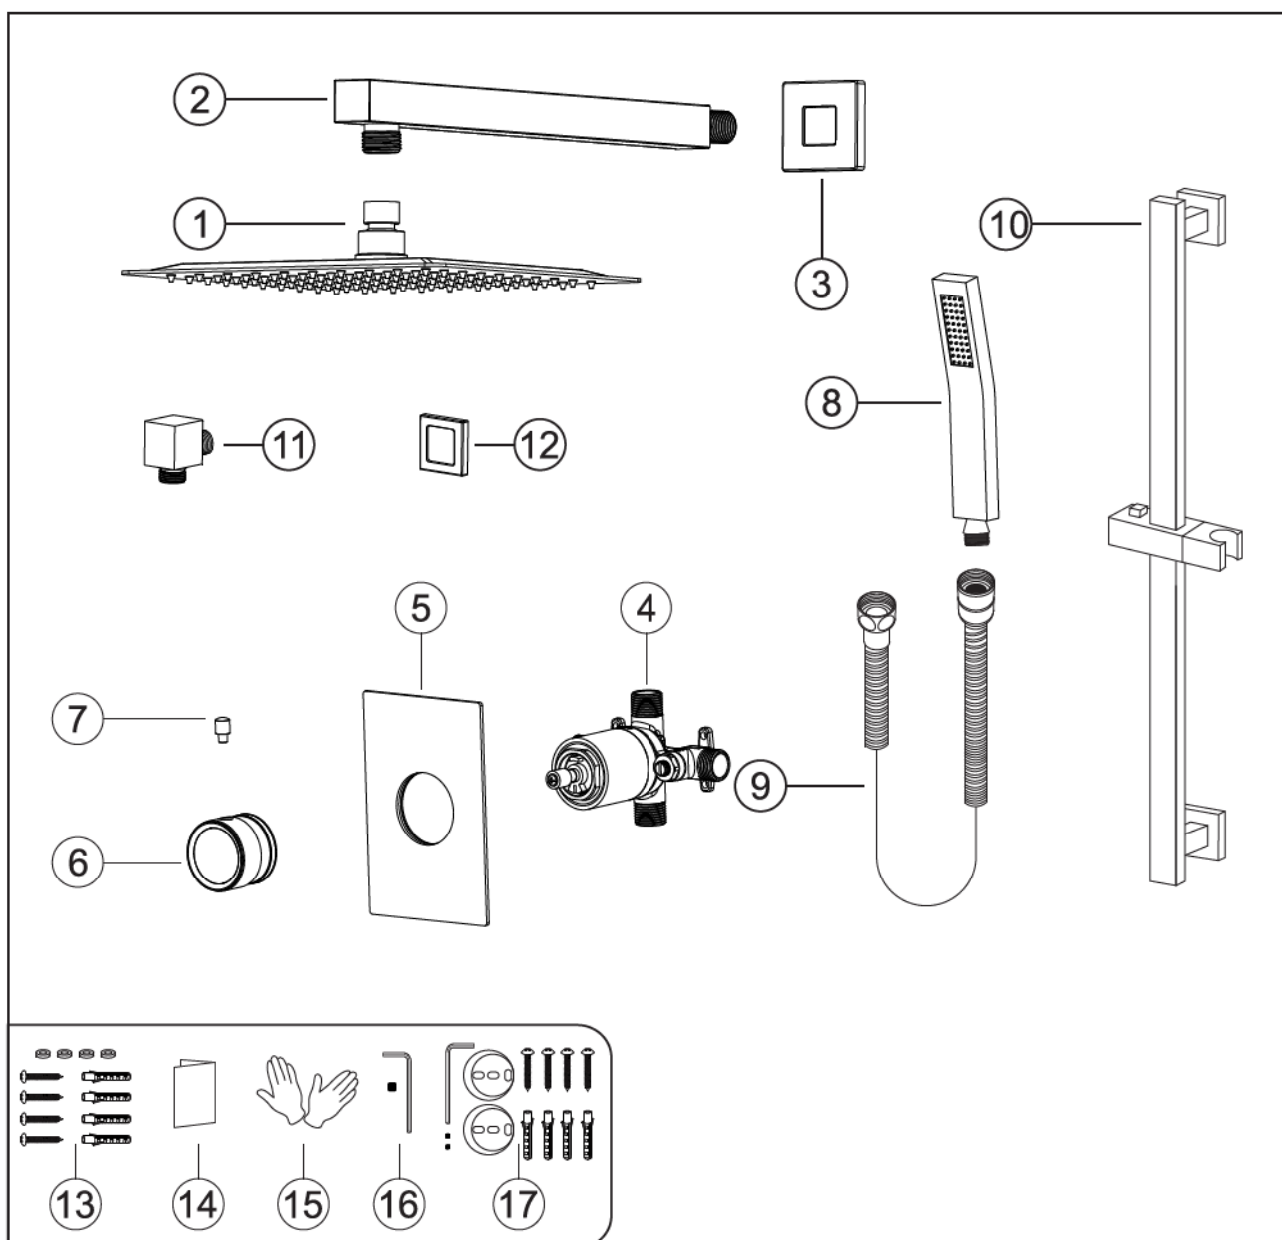


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	10	Lifting rod	1
2	Shower arm	1	11	Connector	1
3	Shower arm cup	1	12	Cup	1
4	Main body	1	13	Main body spare parts	4
5	Deck plate	1	14	Instruction manual	1
6	Handle	1	15	Gloves	2
7	Handle cap	1	16	Handle wrench	1
8	Shower hand	1	17	Lifting rod parts	1set
9	Shower hose	1	18		

◆ Essential dimensions & water pipe line

Unit: mm/inch

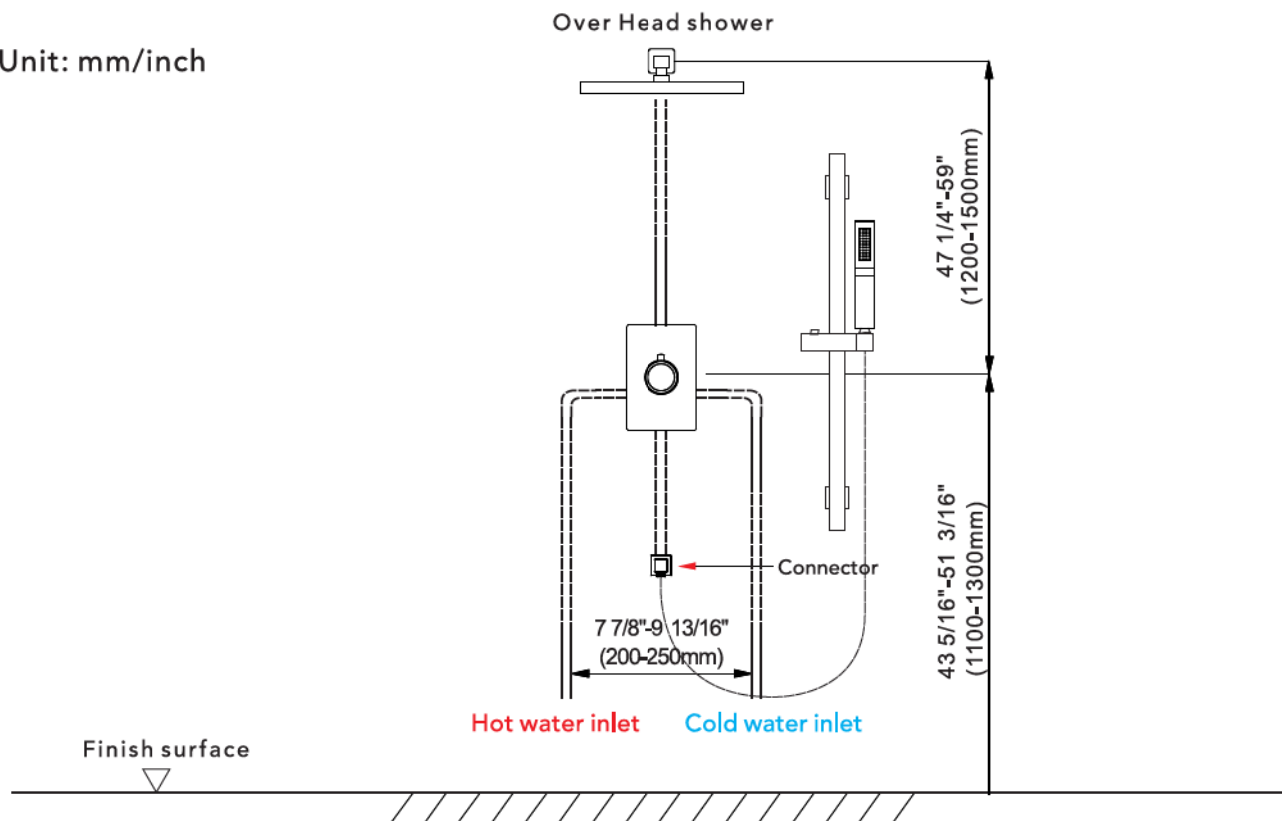


◆ The installation depth of shower holder and shower head

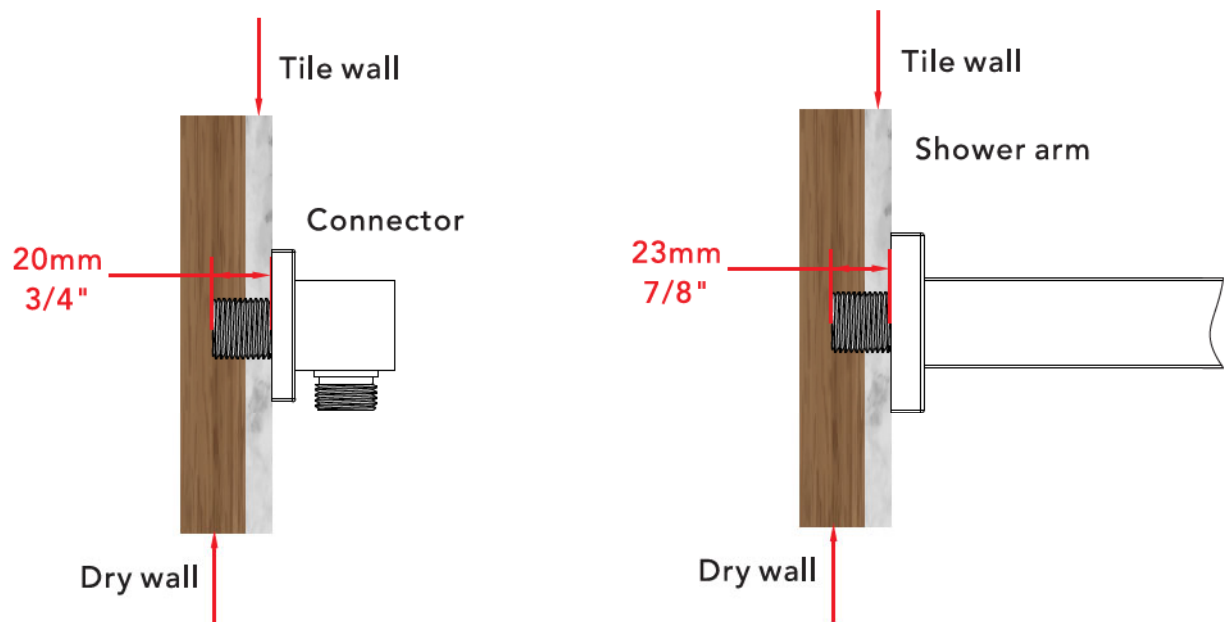

The thickness of the tile must be calculated for installation.


Connector size of male thread: USA: $\frac{1}{2}" - 14\text{NPT}$, Canada: $\frac{1}{2}" - 14\text{NPT}$, Europe: $G\frac{1}{2}"$.

◆ Installation Depth Of Main Body(Model:A&B)

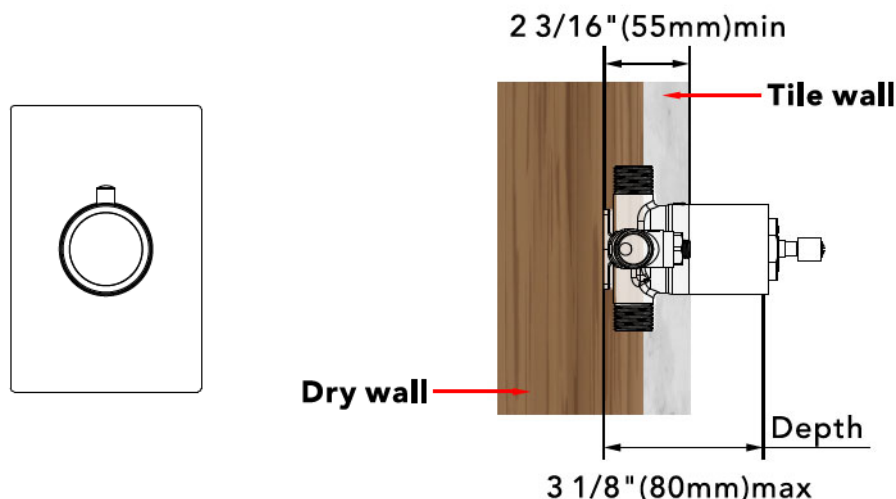

- Notice: 1. The installation depth of the main body should be no less than 2 9/16" (65mm) and no more than 2 15/16" (75mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
2. The opening size of ceramic tile shall be smaller than the deck plate size.


◆ Piping Instructions Before Tiling(Model:A&B)

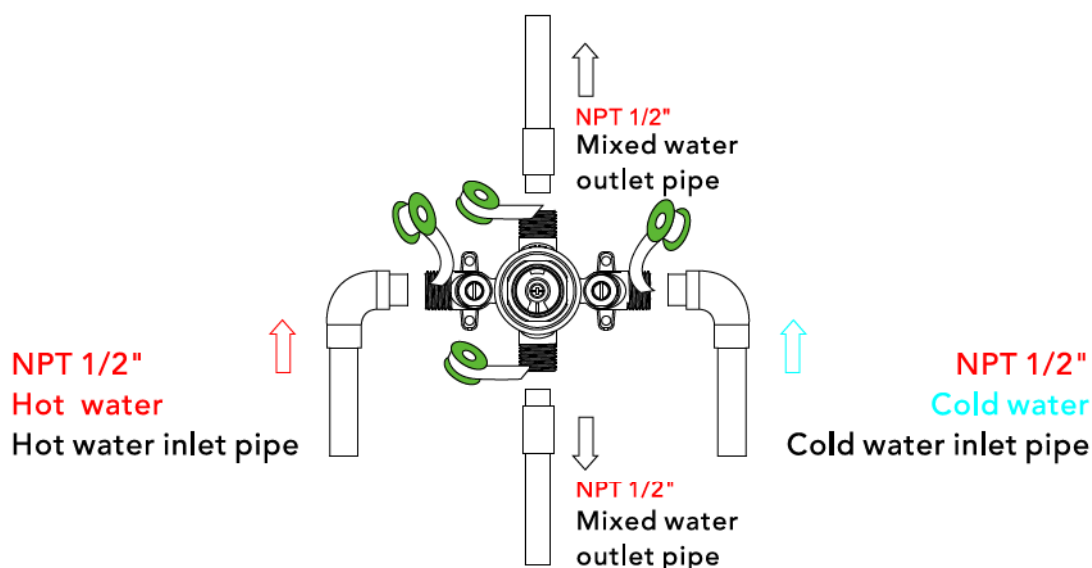

1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
2. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.


◆ Main Body Valve Installation(Model:A&B)

Step1


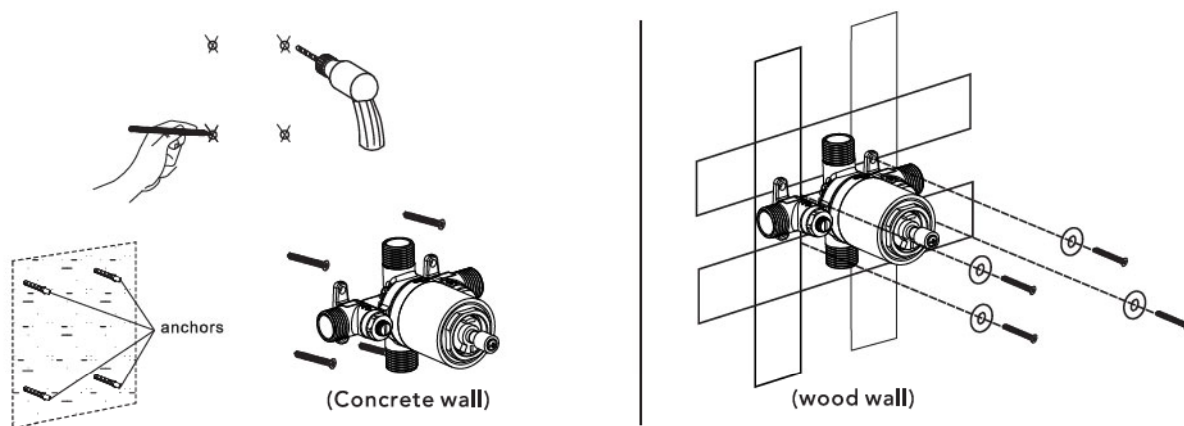


1. Make marks according to the size of the main body valve, and then drill anchors into the wall (concrete wall).
 2. Lock the main body to wood directly with screws (wood wall).
 3. When installing the main body, please mark the UP side up and do not install it upside down.
- ▲ Please note that the level meter should be parallel to the wall; otherwise, the deck plate cannot be installed.

Step2

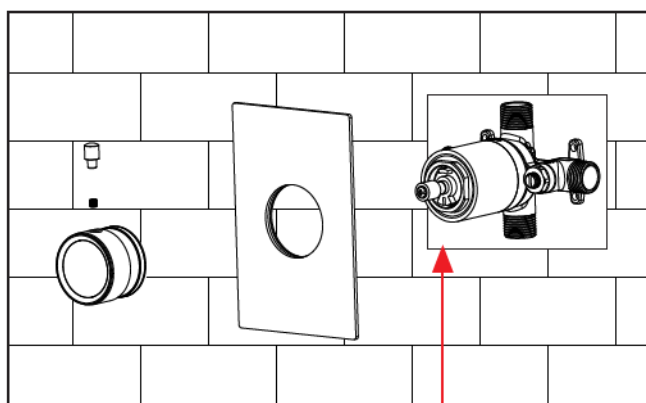


Do not remove the white wear ring; otherwise, the handwheel will be damaged.

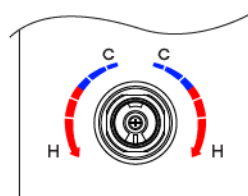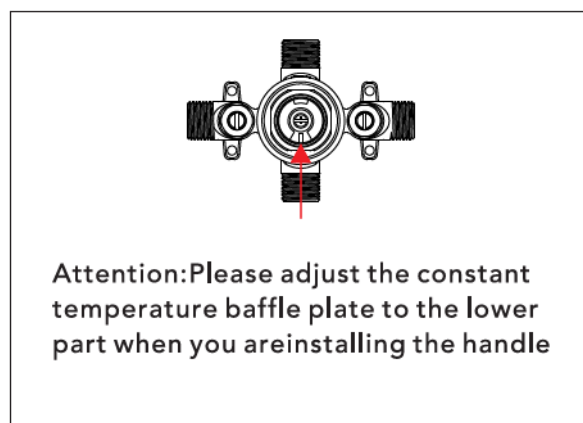


1. Use Main body spare parts and to fixed Main body on the wall and then install deck plate.
2. Please fix the main body to the wall install deck plate ,water diverter screw and water diverter cap step by step.
3. Install the handle with the screw and handle cap.

◆ Water Discharge Function Introduction

Model:A

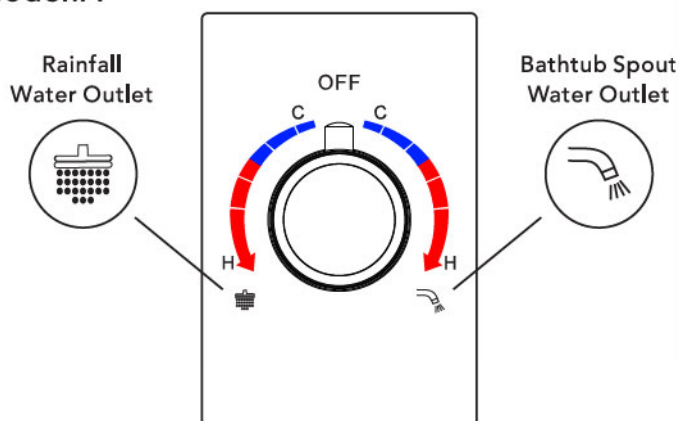


Model:B

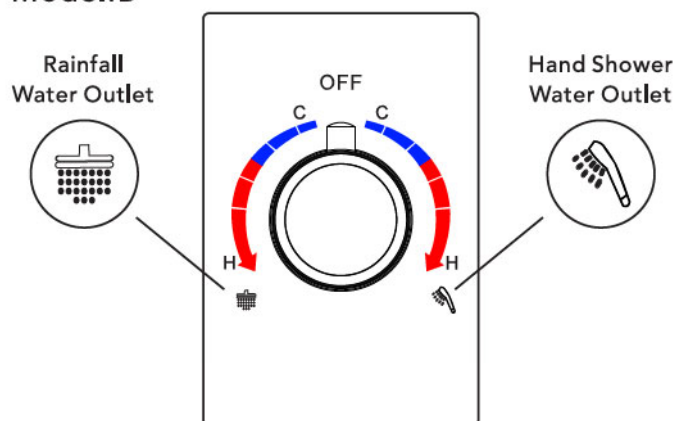







1. When the handwheel points to "OFF," the water flow is turned off.
 2. Turning the handwheel to the left opens the overhead shower, adjusting gradually from cold to hot water.
 3. Turning the handwheel to the right opens the tap, adjusting gradually from cold to hot water.
-

◆ The installation of the Shower head

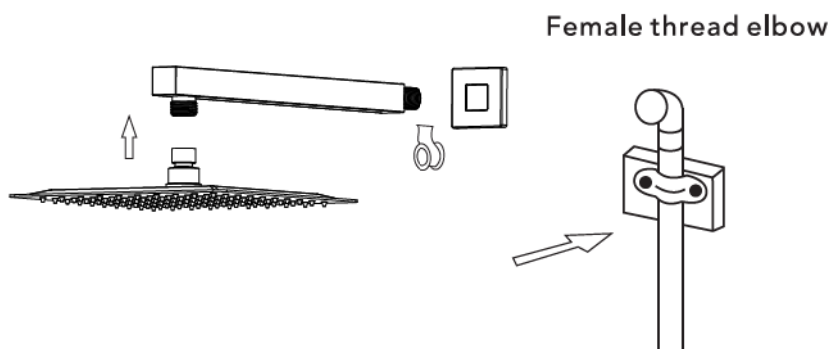

1. Connect shower arm with the cover before screwing arm into riser connection to prevent damage.
 2. Fix shower head onto shower arm and apply tape to pipe threads on both ends.
 3. Do not over tighten shower head. It is 360° swivel connection.
-

◆ Lifting Rod Installation

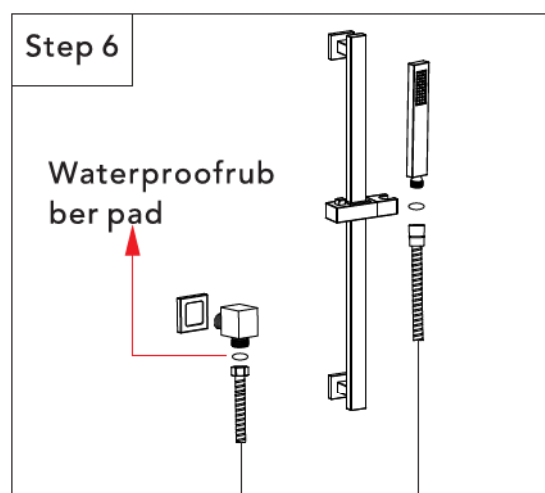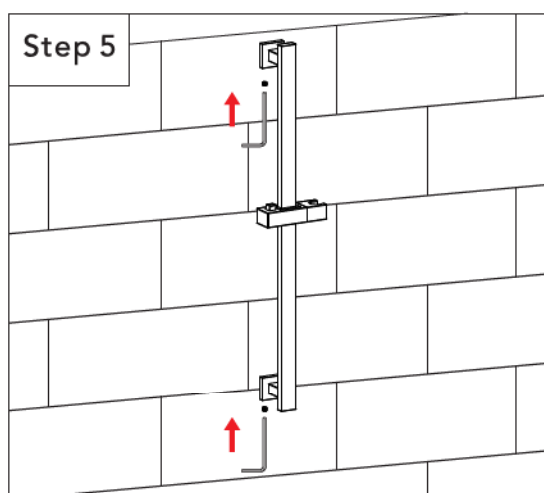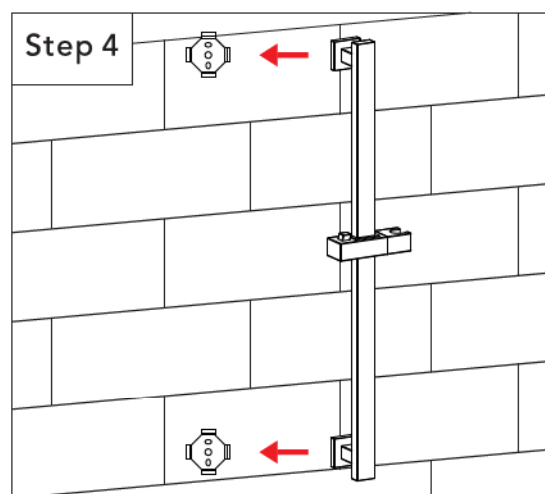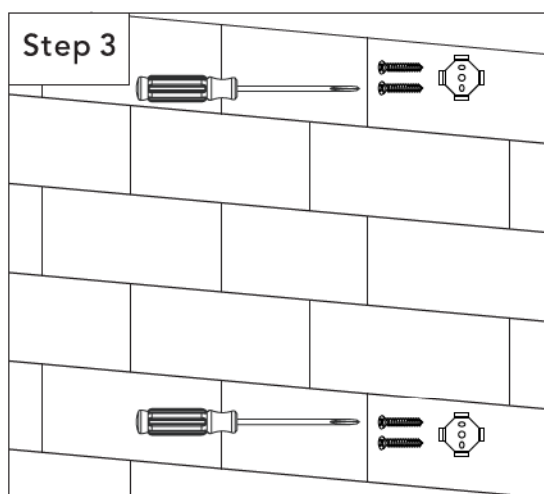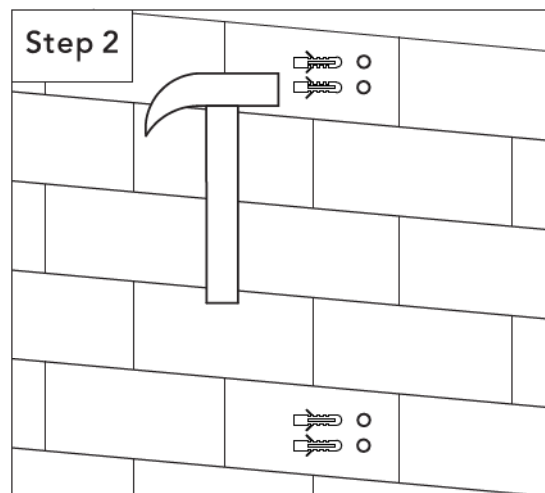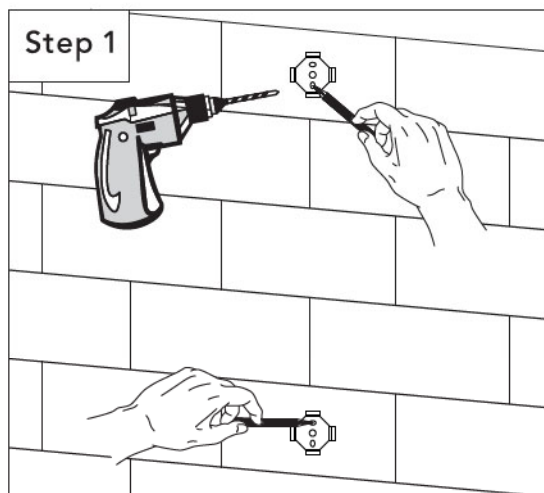

1. Mark the punch position with a pen, drill holes using a 6 mm electric drill, then knock the pellets in. Lastly, place the base and screw in the screws.




2. Put the Shower Elevator Rack into the base, then tighten the screw. Done.

Step 1. Wrap the connector with Teflon tape. Screw the thread into the water pipe inside the wall.

Step 2. Install the rubber pad on the shower hose and connect it to the connector.

◆ Instalación y cuestiones de mantenimiento

1. Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
2. No desmonte el cuerpo principal por sí mismo.
3. Conecte las tuberías de entrada a las válvulas de suministro.
4. Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
5. Después de la instalación, verifique todas las uniones para detectar fugas.
6. No deje el sistema de ducha tipo lluvia expuesto a un ambiente severamente corrosivo.

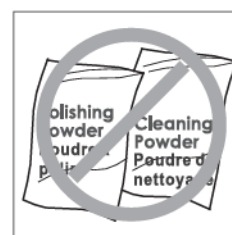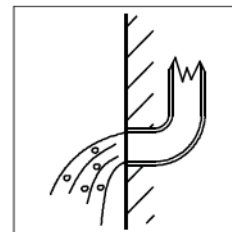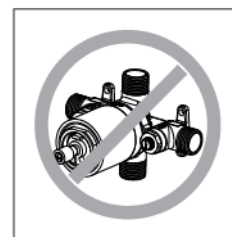





Hacer

1. En para mantener la superficie de la batidora brillante, limpie el mezclador regularmente.
2. Inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
3. Utilice uno de los siguientes limpiadores para eliminar la suciedad de la superficie: a. Limpiador líquido suave. b. Limpiador de vidrio incoloro y limpiador en polvo que no causen abrasión y que se puedan disolver completamente. c. Líquido pulidor que no cause abrasión.

No es decir

- A. Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.


HERRAMIENTAS NECESARIAS:



◆ **Grifo de ducha con botón de 2 funciones**


Modelo:A

Lista de Accesorios

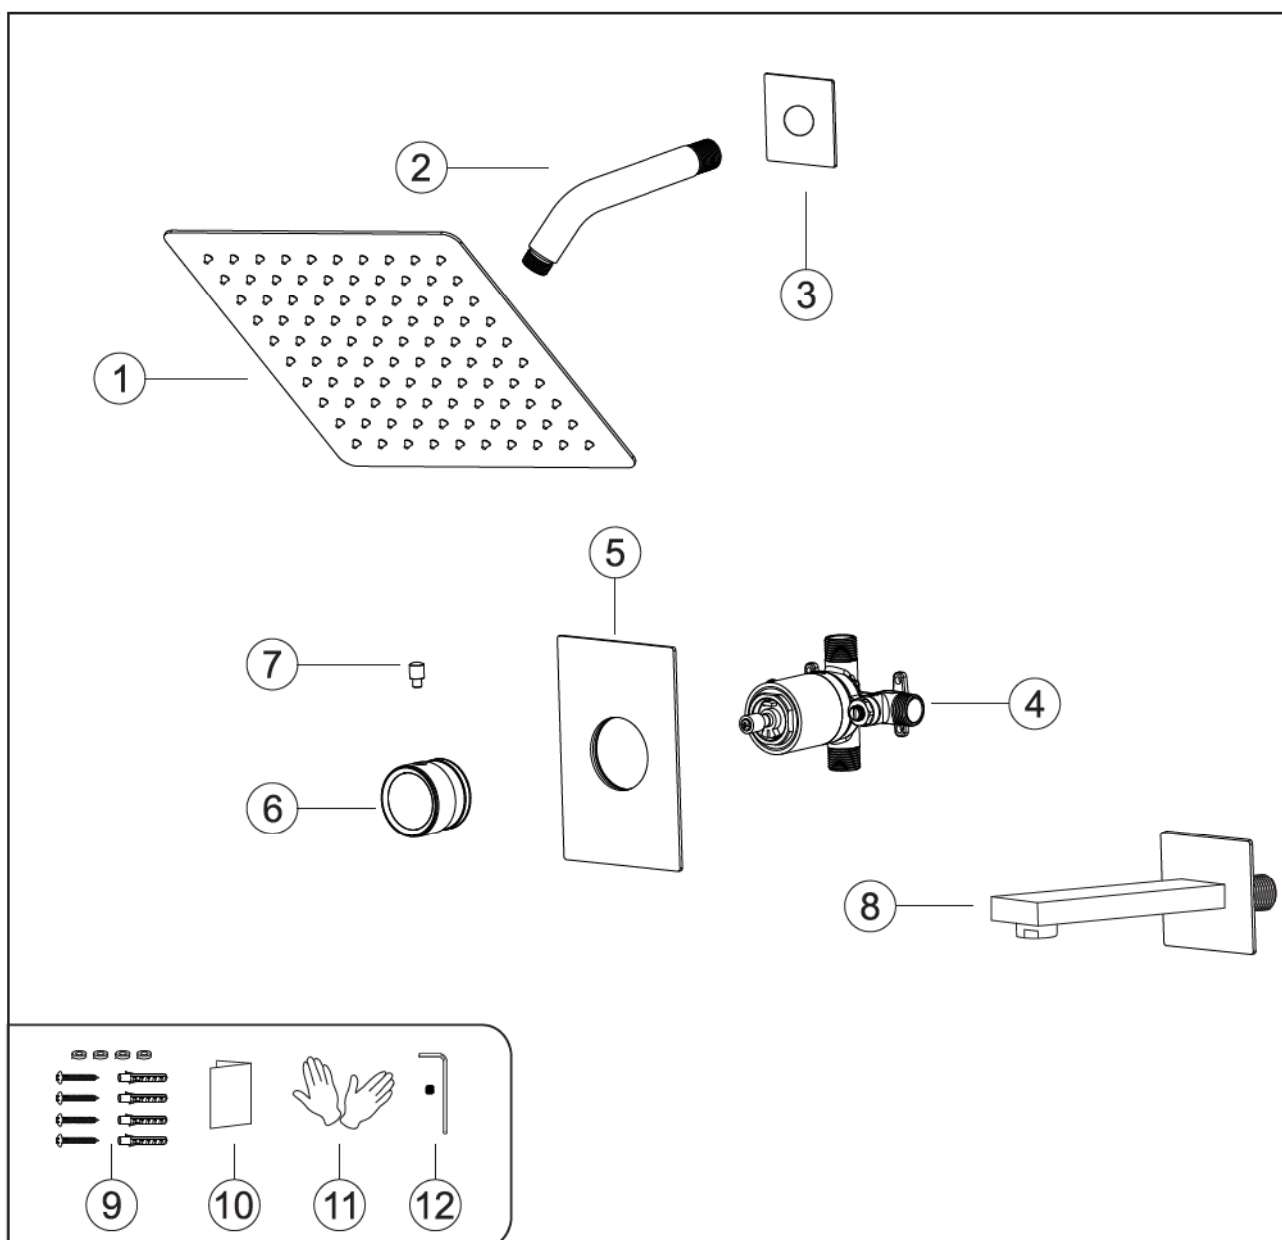


N.º	Nombre de la pieza	Cant.	N.º	Nombre de la pieza	Cant.
1	Cabezal de ducha	1	7	Tapa de la manija	1
2	Brazo de ducha	1	8	Salida de bañera	1
3	Copa del brazo de ducha	1	9	Piezas de repuesto del cuerpo principal	4
4	Cuerpo principal	1	10	Manual de instrucciones	1
5	Placa de cubierta	1	11	Guantes	2
6	Manija	1	12	Piezas de la manija	1

◆ Essential dimensions & water pipe line

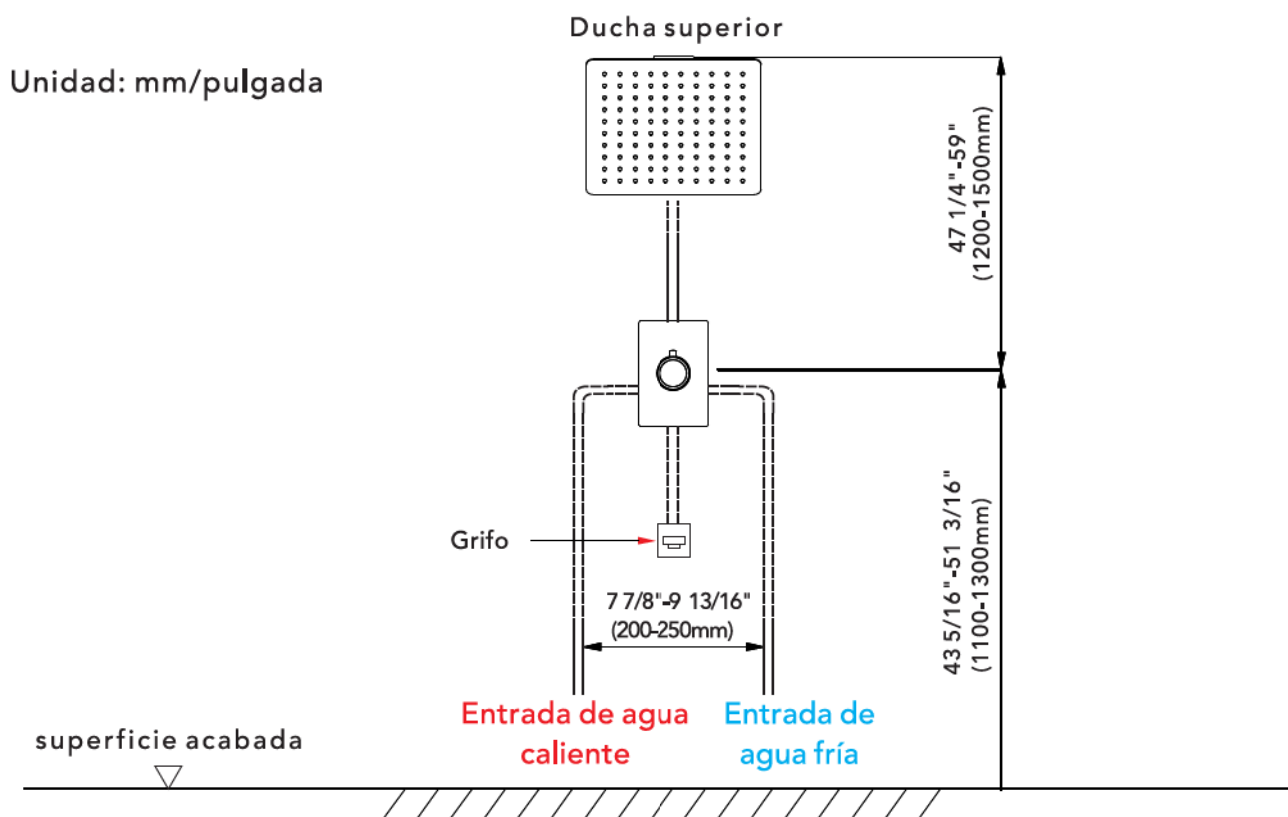


◆ La profundidad de instalación del soporte de ducha y del cabezal de ducha

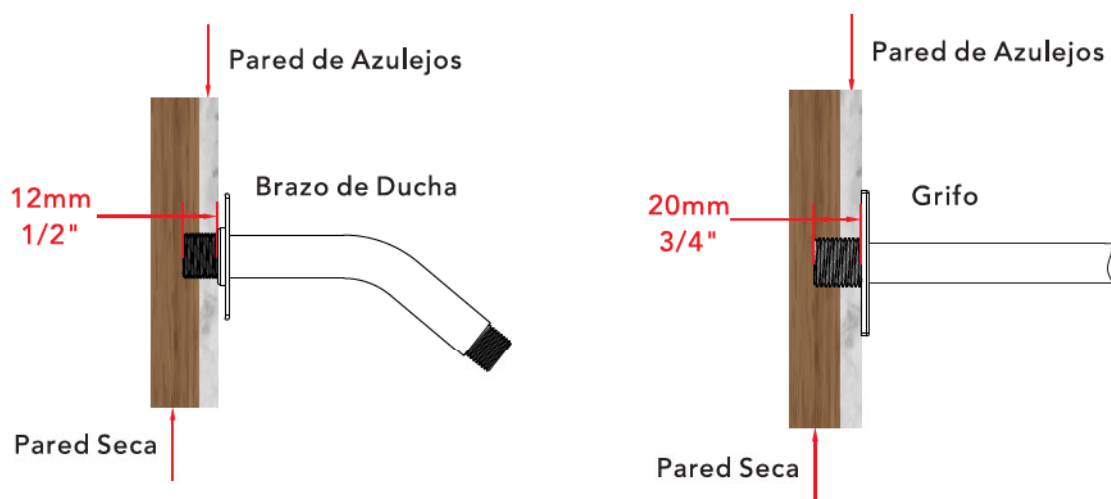

El grosor del azulejo debe ser calculado para la instalación.


Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

◆ La instalación del cabezal de ducha

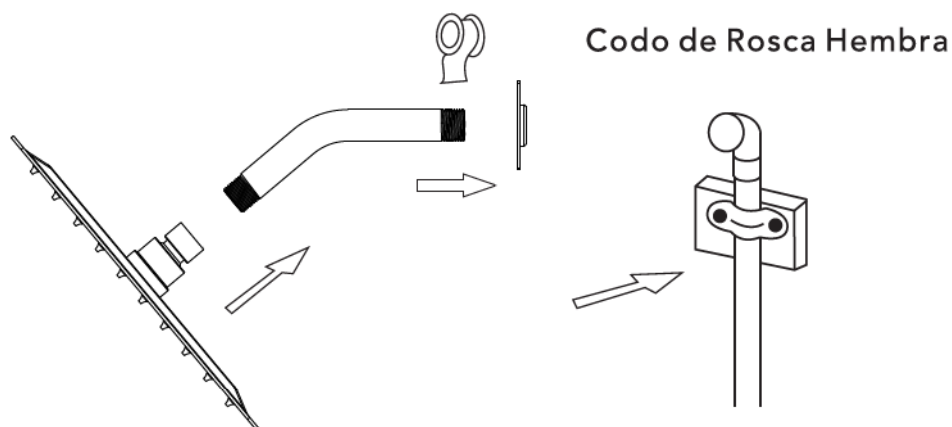

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador para evitar daños.
 2. Fije el cabezal de ducha al brazo de ducha y aplique cinta a las roscas de la tubería en ambos extremos.
 3. No apriete demasiado el cabezal de ducha. Es una conexión giratoria de 360°.
-

◆ Instalar el Grifo de la Bañera

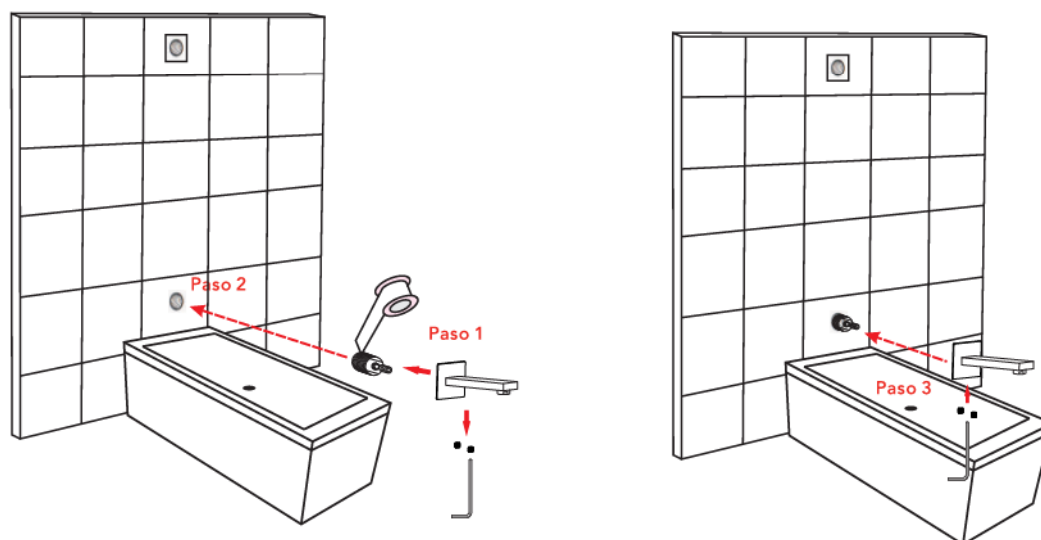

Étape 1 : Desserrez les deux vis sous le robinet de sortie d'eau et retirez le connecteur.

Enveloppez le connecteur avec du ruban PTFE.


Étape 2 : Placez le connecteur dans le trou préalablement percé dans le mur et fixez-le à l'aide d'un tournevis hexagonal.

Étape 3 : Insérez l'extrémité du robinet de sortie d'eau dans le connecteur déjà installé dans le mur et resserrez les deux vis. Assurez-vous que la sortie est orientée directement vers le bas.

◆ **Grifo de ducha con botón de 2 funciones**


Modelo:B

Lista de Accesorios

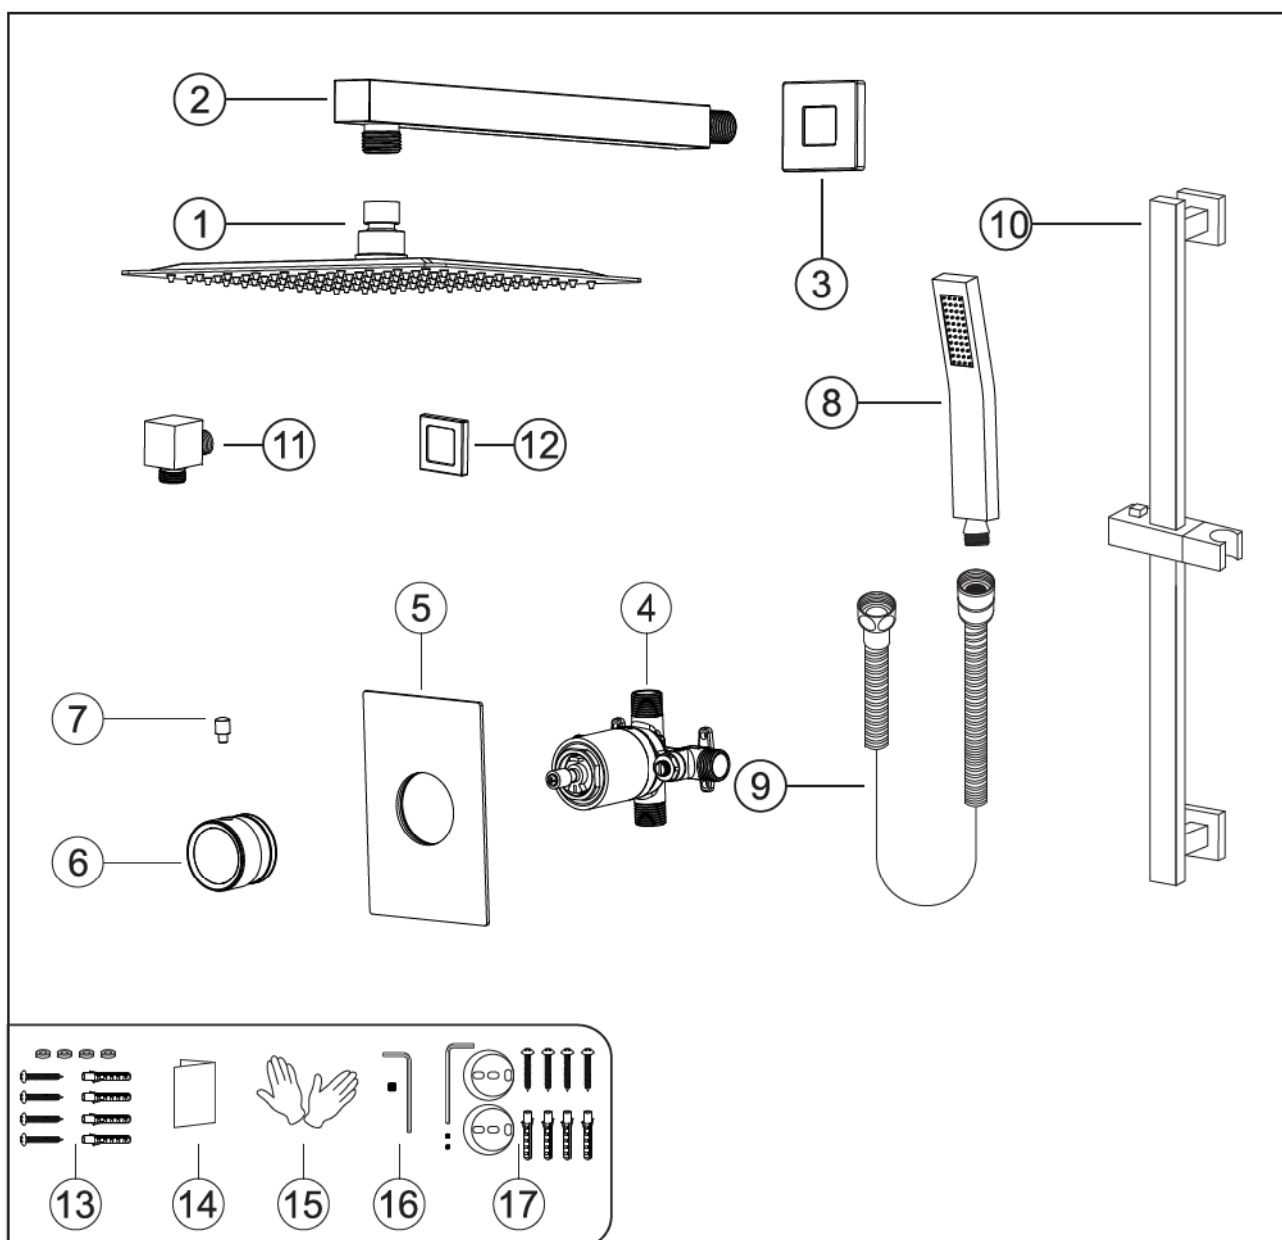


N.º	Nombre de la pieza	Cant.	N.º	Nombre de la pieza	Cant.
1	Cabezal de ducha	1	10	Barra de elevación	1
2	Brazo de ducha	1	11	Conector	1
3	Copa del brazo de ducha	1	12	Taza	1
4	Cuerpo principal	1	13	Piezas de repuesto del cuerpo principal	4
5	Placa de cubierta	1	14	Manual de instrucciones	1
6	Manija	1	15	Guantes	2
7	Tapa de la manija	1	16	Llave de manija	1
8	Ducha de mano	1	17	Piezas de la barra de elevación	1 juego
9	Manguera de ducha	1	18		

◆ Essential dimensions & water pipe line

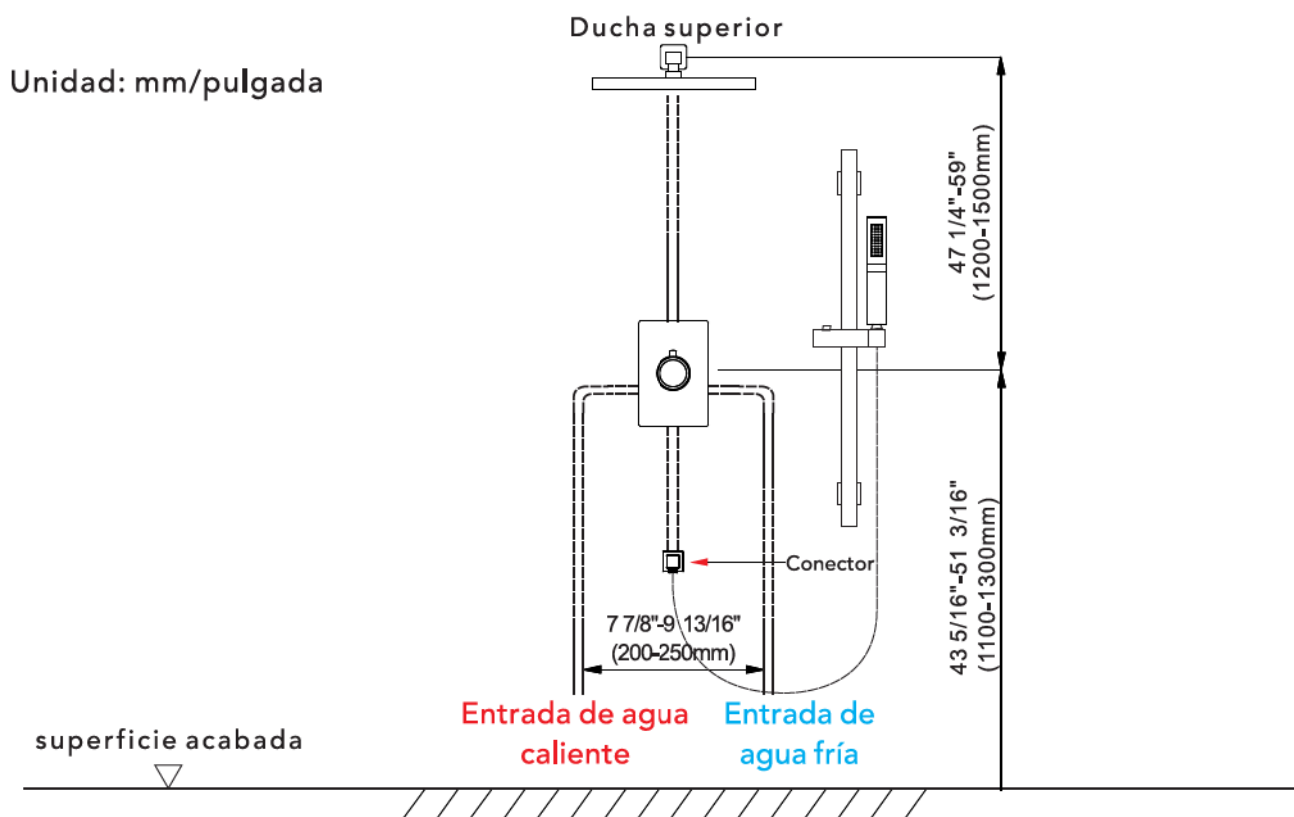


◆ La profundidad de instalación del soporte de ducha y del cabezal de ducha

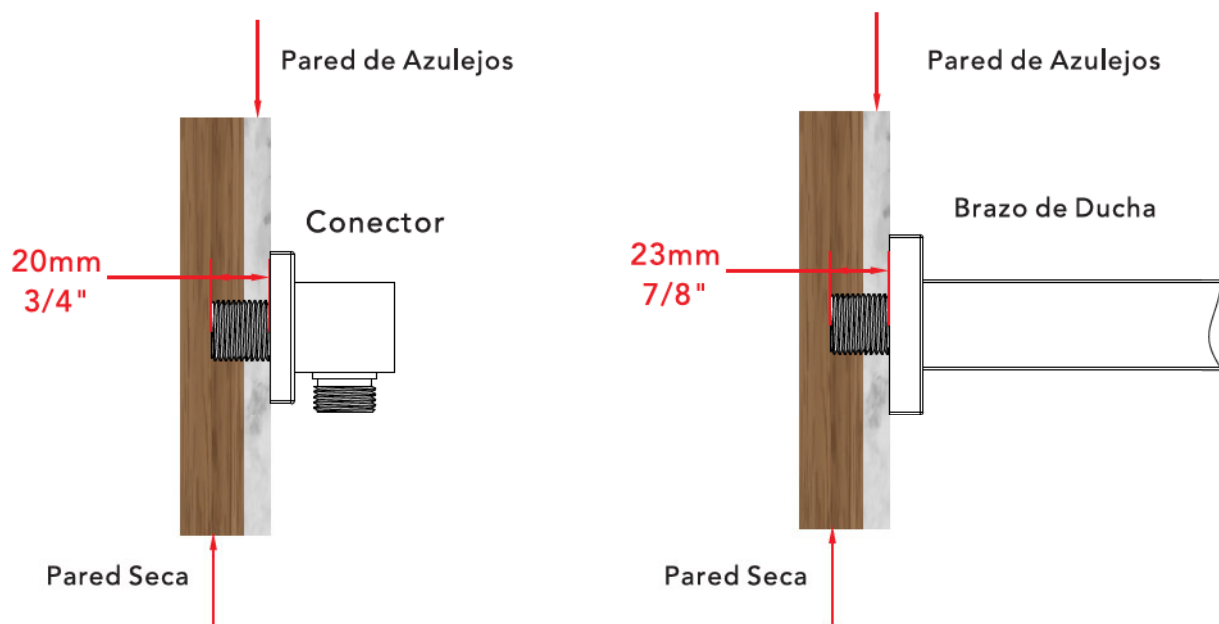

El grosor del azulejo debe ser calculado para la instalación.


Tamaño del conector de rosca macho: EE. UU.: $\frac{1}{2}''$ -14NPT, Canadá: $\frac{1}{2}''$ -14NPT, Europa: G $\frac{1}{2}''$.

◆ Profundidad de Instalación del Cuerpo Principal(Modelo:A&B)

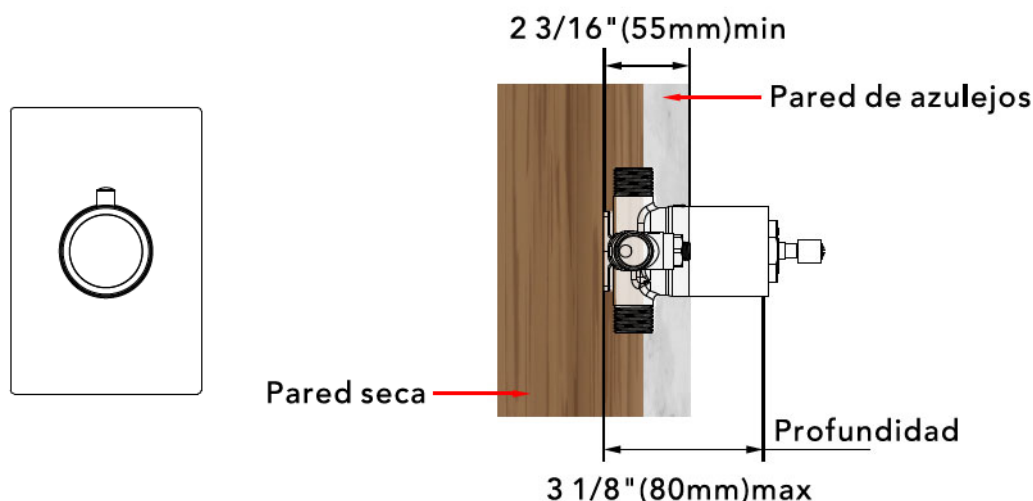

- Aviso: 1. La profundidad de instalación del cuerpo principal no debe ser inferior a 2 3/16" (55 mm) y no más de 3 1/8" (80 mm), incluyendo el grosor del azulejo. De lo contrario, la placa de cubierta no podrá ser instalada.
2. El tamaño de apertura del azulejo cerámico debe ser menor que el tamaño de la placa de cubierta.


◆ Instrucciones de Tubería Antes de Colocar Azulejos(Modelo:A&B)

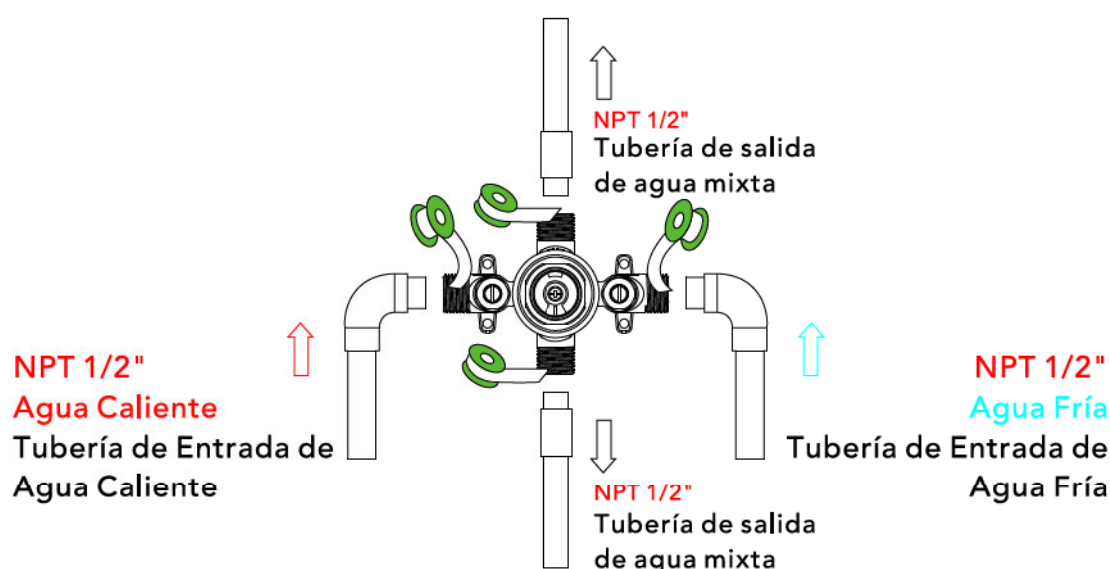

1. Como se muestra en la figura, las tuberías de entrada y salida están pre-enterradas. Por favor, preste atención a la dirección correcta al instalar el cuerpo principal pre-enterrado.
2. Antes de colocar los azulejos, abra el agua para probar si las tuberías de entrada izquierda y derecha están conectadas herméticamente sin fugas. Luego, ajuste el interruptor de flujo a la posición "on" para comprobar si hay fugas en las tuberías de salida mezcladas.


◆ Instalación de la Válvula del Cuerpo Principal(Modelo:A&B)

Paso 1

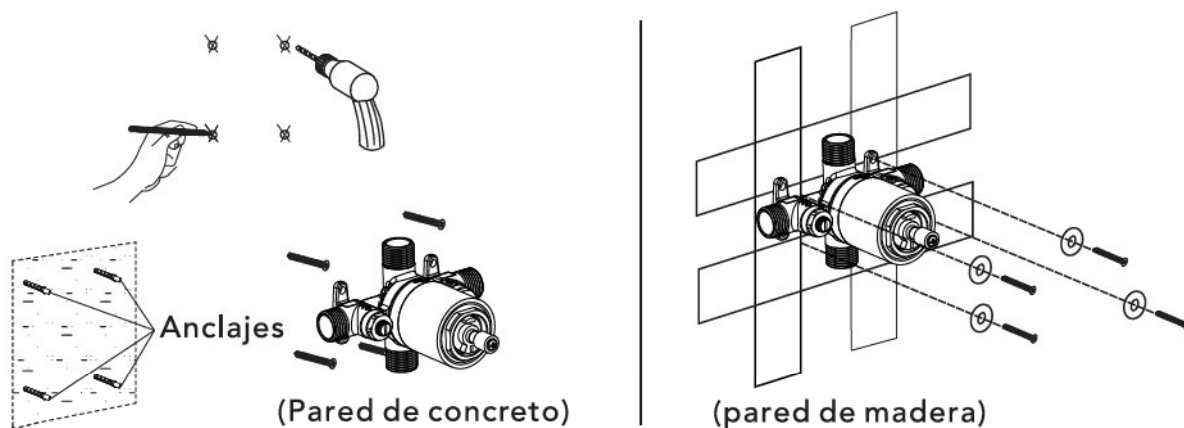


1. Marque según el tamaño de la válvula del cuerpo principal y luego perfora para colocar los anclajes en la pared (pared de concreto).
 2. Fije directamente el cuerpo principal a la madera con tornillos (pared de madera).
 3. Al instalar el cuerpo principal, por favor marque el lado UP hacia arriba y no lo instale al revés.
- ▲ Tenga en cuenta que el nivel debe estar paralelo a la pared; de lo contrario, la placa de cubierta no podrá ser instalada.

Paso 2

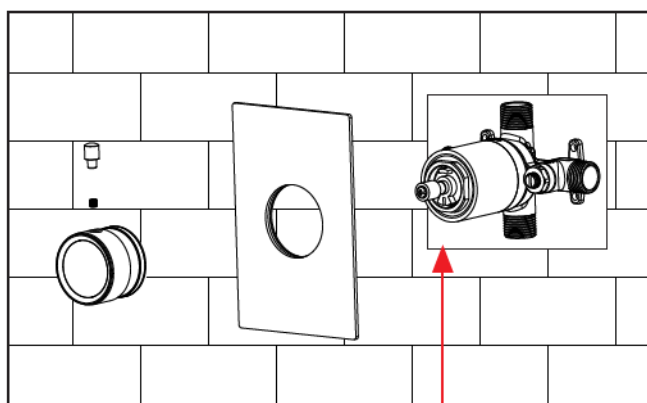

No retire el anillo blanco de desgaste; de lo contrario, la rueda manual se dañará.

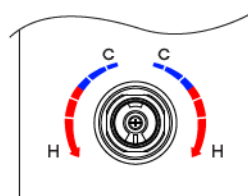


Precauciones para la instalación de la rueda manual

1. Use las piezas de repuesto del cuerpo principal para fijar el cuerpo principal en la pared y luego instale la placa de cubierta.
2. Por favor, fije el cuerpo principal a la pared e instale la placa de cubierta, el tornillo del desviador de agua y la tapa del desviador de agua paso a paso.
3. Instale la manija con el tornillo y la tapa de la manija.

◆ Introducción a la Función de Descarga de Agua

Modelo:A

Salida de Agua en Forma de Lluvia

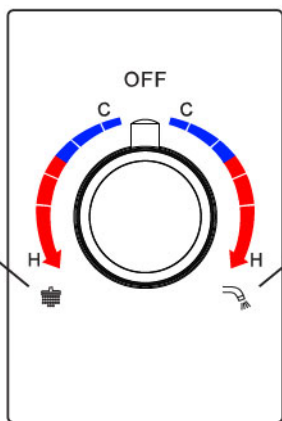


Salida de Agua del Grifo de la Bañera



Modelo:B

Salida de Agua en Forma de Lluvia

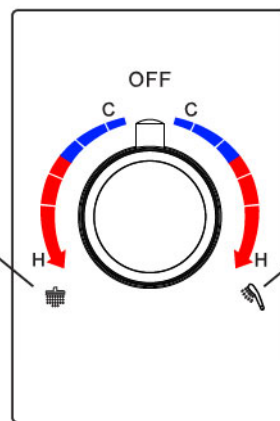


Salida de Agua de la Ducha de Mano








1. Cuando la rueda manual apunta a "OFF", el flujo de agua se cierra.
2. Girar la rueda manual hacia la izquierda abre la ducha superior, ajustando gradualmente de agua fría a caliente.
3. Girar la rueda manual hacia la derecha abre el grifo, ajustando gradualmente de agua fría a caliente.

◆ La instalación del cabezal de ducha

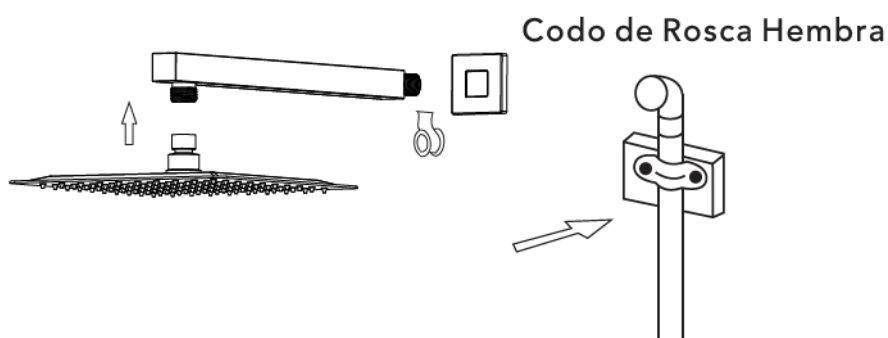

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador para evitar daños.
2. Fije el cabezal de ducha al brazo de ducha y aplique cinta a las roscas de la tubería en ambos extremos.
3. No apriete demasiado el cabezal de ducha. Es una conexión giratoria de 360°.

◆ Instalación de la barra de elevación

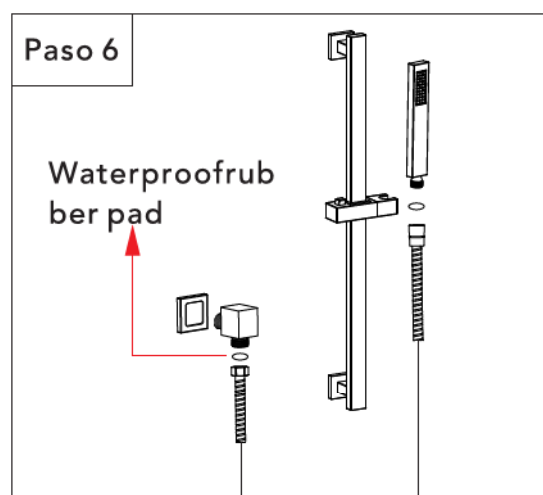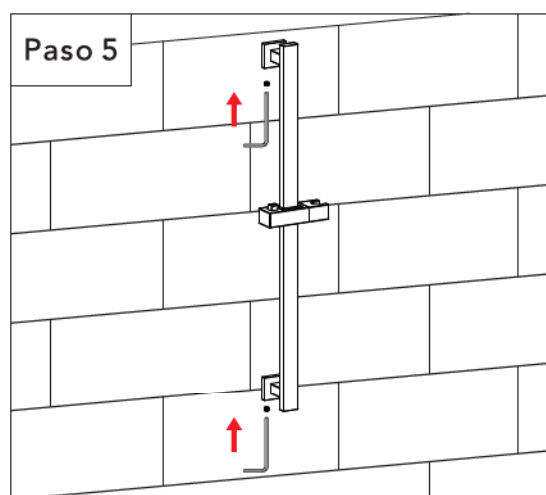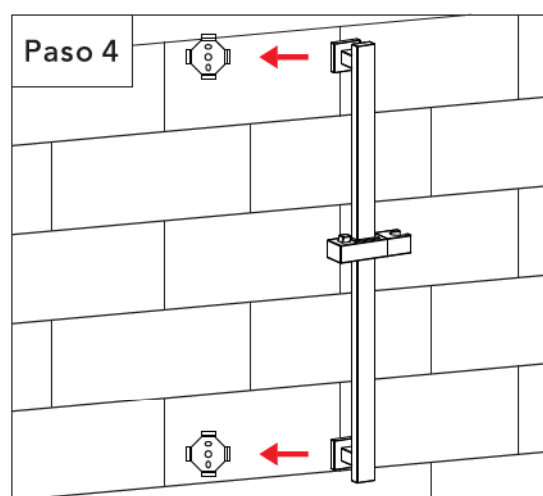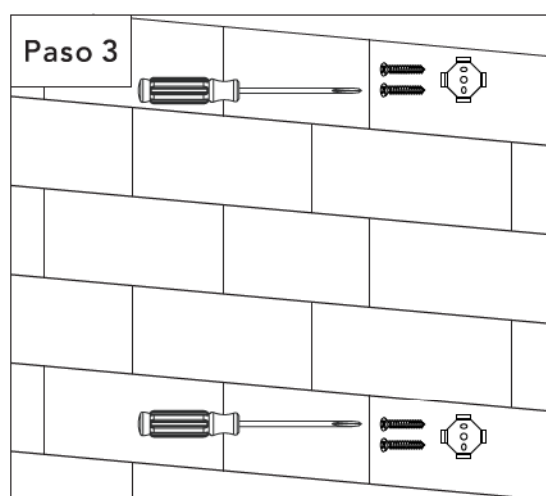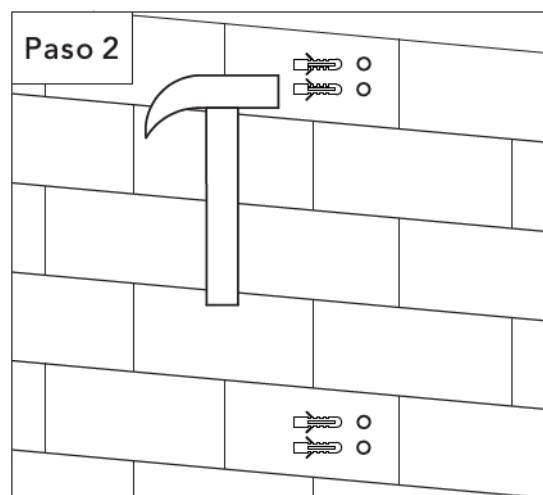

1. Marque la posición del golpe con un bolígrafo, perforaciones con un taladro eléctrico de 6 mm, golpe los granos en finalmente, colocan la base y atornille los tornillos.

2. Ponga la rejilla del ascensor de la ducha en la base, luego apriete el tornillo, hecho.

Paso1. El conector se envolverá con cinta de teflón, atornille la rosca en el agua tubería dentro de la pared.

Paso2. Install la almohadilla de goma en la manguera de ducha y conéctela con el conector